
QUICK START GUIDE


BEFORE YOU BEGIN ASSEMBLING THE GARAGE FAN -


Read all instructions before you begin assembly. If any parts are missing, please contact Customer Service at 1-877-289-8692, 8 a.m. - 5 p.m. Central Time, Monday - Friday.


GARAGE FAN MODEL #52006

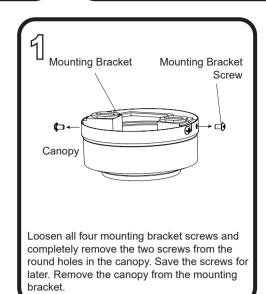





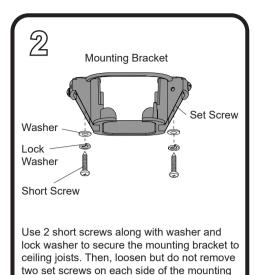


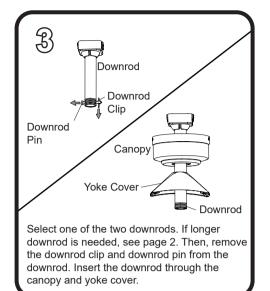


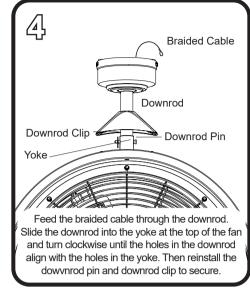

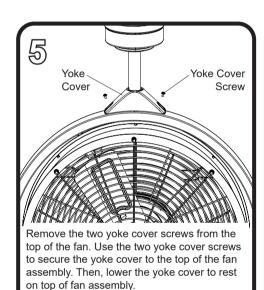


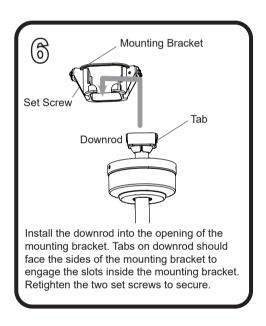

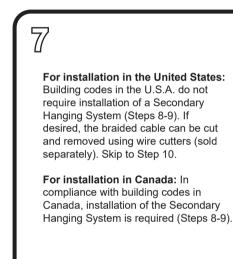

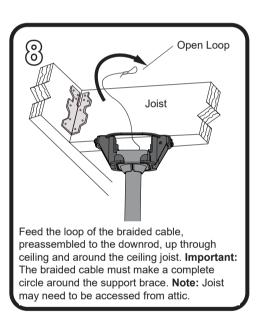



HARDWARE KIT

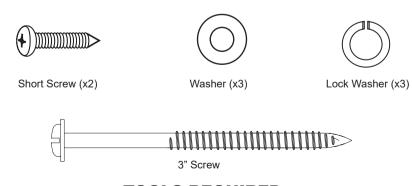



TOOLS REQUIRED

Tools required for assembly: Step ladder, Phillips screwdriver, and wire cutters (optional).

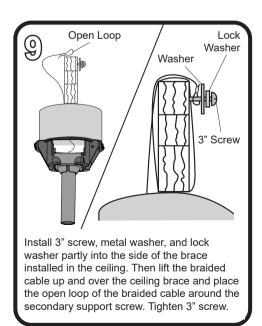

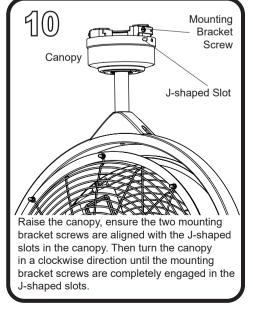

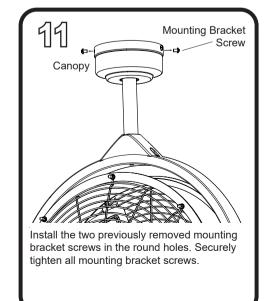

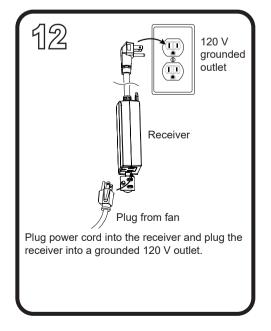


Fan includes 12-inch downrod for

ceilings 9 feet or higher and a 6-inch

downrod for ceilings 8 feet or lower.

ASSEMBLY INSTRUCTIONS (CONTINUED)

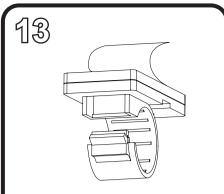


Use cord clips to secure the fan's power cord to ceiling in a path toward the power outlet. Peel the backing off of the doublesided tape preassembled to back side of each cord clip.




to accommodate a wood screw (sold

separately) as an option to the taping

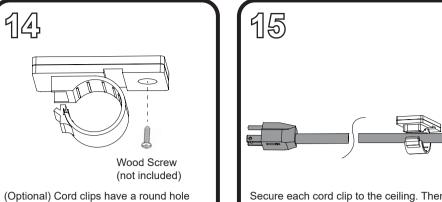


Secure each cord clip to the ceiling. Then insert the cord into each clip and press the clip closed to secure the cord. Note: Leave adequate slack near the fan to allow fan to swivel and/or tilt


OPERATING INSTRUCTIONS

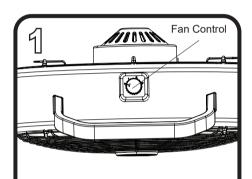


Fan Control is located on the bottom side of the fan. The fan has four settings. The fan should be set at HIGH SPEED from the factory. When using the remote, ensure the fan is manually set to high (3) speed.

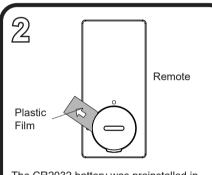

The CR2032 battery was preinstalled in the battery compartment of the remote. Pull the plastic film in the direction of the arrow to remove which will activate the battery

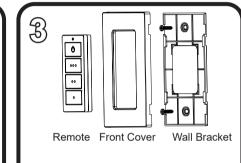

If desired, the wall bracket in remote pack can be installed to a wall using the provided mounting screws. Once the wall bracket is installed, snap the front cover onto it. The remote can be stored in the wall bracket for easy access.

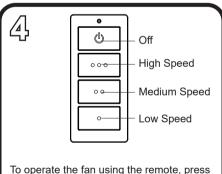

and release the following buttons: (1) - Turns the power to fan off.

o o o - Turns on fan at high speed.


o o - Turns on fan at medium speed.

o - Turns on fan at low speed.

5 Tilt Knob Adjustment Handle

Use tilt knobs on sides of fan to adjust airflow up or down. Loosen tilt knobs by turning counterclockwise, adjust fan, and retighten tilt knobs.

Use adjustment handle located on bottom of fan to change the direction of airflow from left to right.

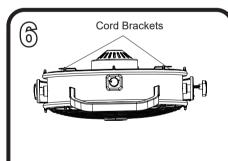



Cord Brackets are located on back of fan. When not in use, wrap power cord around the two cord brackets.


TROUBLESHOOTING

Fan does not work. - Ensure the main power cord is plugged into a 120V receptable and fan is set to High Speed (3)

REPLACE DOWNROD

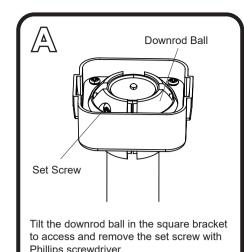

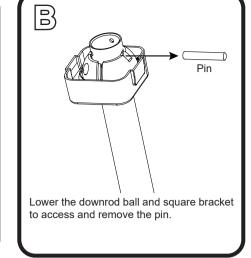

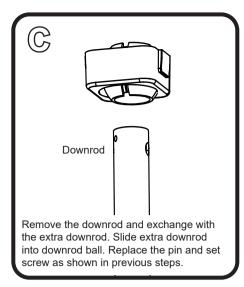

SAFETY INFORMATION

CAUTION:

- · Read and follow all instructions before operating fan.
- Do not use fan if any part is damaged or missing.
- This garage fan is rated for indoor and damp locations.
- · Connect to properly grounded outlets only.
- Do not insert fingers or any other objects through the grill guard when fan is in operation.
- Disconnect the fan when moving from one location to another.
- Disconnect the fan when removing guards for cleaning.
- Do not use fan near windows. Rain and water may create an electrical hazard.
- Do not alter the fan's assembly.
- FEDERAL COMMUNICATIONS COMMISSION INTERFERENCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: --Reorient or relocate the receiving antenna. --Increase the separation between the equipment and receiver. --Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -- Consult the dealer or an experienced radio/TV technician for help. Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- To reduce the risk of fire or electrical shock, do not use this fan with any solid state speed control device. This appliance has a 3-prong plug. To reduce the risk of electrical shock, this plug is intended to fit in an outlet only one way. If this does not fit the outlet, contact a qualified electrician. Do not attempt to bypass this procedure.

WARNING:

- To reduce the risk of fire or electrical shock, do not use this fan with any solid state speed control device. This appliance has a 3-prong plug. To reduce the risk of electrical shock, this plug is intended to fit in an outlet only one way. If this does not fit the outlet, contact a qualified electrician. Do not attempt to bypass this procedure.
- · Failure to secure set screws on sides of the mounting bracket may result in fan falling causing serious injury or death.

WARRANTY

The manufacturer warrants all of its utility fans against defects in materials and workmanship for one (1) year from the date of purchase. If within this period the product is found to be defective, take a copy of the bill of sale as a proof of purchase and the product in its original carton to the place of purchase. The manufacturer will, at its option, repair, replace or refund the purchase price to the consumer. All costs of installation and removal of the fixture is the responsibility of the consumer. This warranty does not cover utility fans becoming defective due to misuse, accidental damage or improper handling and/or installation and specifically excludes liability for direct, incidental or consequential damages. As some states do not allow exclusions of limitations on an implied warranty, the above exclusion and limitation may not apply. This warranty gives you specific rights and you may also have other rights which may vary from state to state.

CUSTOMER SERVICE

To obtain service, please contact Customer Service: 1-877-289-8692, 8 a.m. - 5 p.m. Central Time, Monday - Friday.

To order additional Mule products, visit MULEPRODUCTS.COM. Follow us on social media at:

FACEBOOK.COM/GETTHEMULE

YOUTUBE.COM/@GETTHEMULE

TIKTOK.COM/@GETTHEMULE

(INSTAGRAM.COM/GETTHEMULE TWITTER.COM/GETTHEMULE

PINTEREST.COM/GETTHEMULE

