## **Ó SEPURA**

sepurahome.com

# Status Indicator Lights

# **Regular Use**

#### **Bin Capacity**

EMPTY HALF FULL ALMOST FULL FULL

White lights indicate how full the bin is inside the Collection Center.

# **Booting Up**

#### Booting



While Sepura is booting, a light animation will display in blue, green, pink and white.

#### **Creating Access Point**



OADING GREEN

While Sepura is creating its Wi-Fi hotspot, lights will progressively light up green.

#### Access Point is Live



Once the Sepura-Home hotspot is created, lights will slowly blink green.

#### Successfully Connected to Home Wi-Fi



After connecting Sepura to your home's Wi-Fi, lights will flash green twice when successful.

# Warnings

#### **Bin Too Full**

BLINKING WHITE

Lights will flash white when the bin inside the Collection Center is full.

#### Stuck



If Sepura gets stuck, lights will flash blue until you safely remove the object obstructing it.

#### Flooded



If sink is full of water, lights will flash yellow until Sepura is free to run again.

### Something Went Wrong



If lights are blinking red, factory reset Sepura by pressing the button for 20 seconds or until 4 purple lights appear, then release the button.

# Software Update

#### Long Press (10 seconds)



Press and hold button until two purple lights appear to start the over-the-air update.

#### Connecting to Wi-Fi



Lights will progressively light up green as Sepura connects to your home Wi-Fi.

#### Updating



While Sepura is undergoing an over the air update, lights will breathe white.

#### Update Successful



Once Sepura has updated successfully, lights will flash white.

# **Bin Calibration**

#### Extra Long Press (15 seconds)



Press and hold button until three purple lights appear to start calibration.

#### Calibrating



While the Collection Center is calibration, lights will progressively light up white.

#### **Calibration Successful**



Once calibration is successful, the first light will flash white.

# **Factory Reset**

### Extra Long Press (20 seconds)



Press and hold button until four purple lights appear to factory reset your Sepura.