

DISHWASHER START - UP PROCEDURES

If you have been affected by the shutdown, or anytime the dishwasher is not used for an extended period of time, this is the best way to get it started up again so that it will have less requirement for maintenance when you re-open.

Note: Some models have settings that can purge the chemicals from its lines. You can contact our technical area on 0412 928 370

1. Check water tap is turned on.
2. Check power is on.
3. Check detergent and rinse aid bottles are connected. Mark a line on containers so that you can see movements over a few days
Note: you may need to shake bottle to stir sediments
4. Check wash and rinse arms are free to move and spin
5. If your dishwasher has a drain plug, ensure that it is in place
6. Check filters are securely in place before running your cycle
7. Start filling operation as normal.
NOTE: Rinse arms in machine spin and spray water when filling. Rinsing is the most important function for sanitization.
8. When filled, allow machine to heat up to heat settings.
9. Place machine on longest cycle to wash inside and soften any food residue.
Note: Adding some dishwashing detergent manually may be required for 1st wash
10. During this cycle, detergent and rinse aid start to flow into the machine, wash and rinse arms start to clear, check that machine drains and there are no leaks in the wash chamber as the water cleans out the lines.



IMPORTANT:

If your dishwasher is covered in white scale or residue a De-Scale may be required to bring the machine back to best operating condition.

Please download our general de-scale procedures at www.warewashingsolutions.com.au and use K23 de-scaler to clean machine. Or call 1300 217 411

The dishwasher in your location is one of the best ways you can sanitize many items, it's use of a chlorine based detergent and high water temperature does reduce the spread of bacteria.

Hopefully, we can all get through this, and when operations return, we can all move forward.