


HOBART AMX OPERATING INSTRUCTIONS

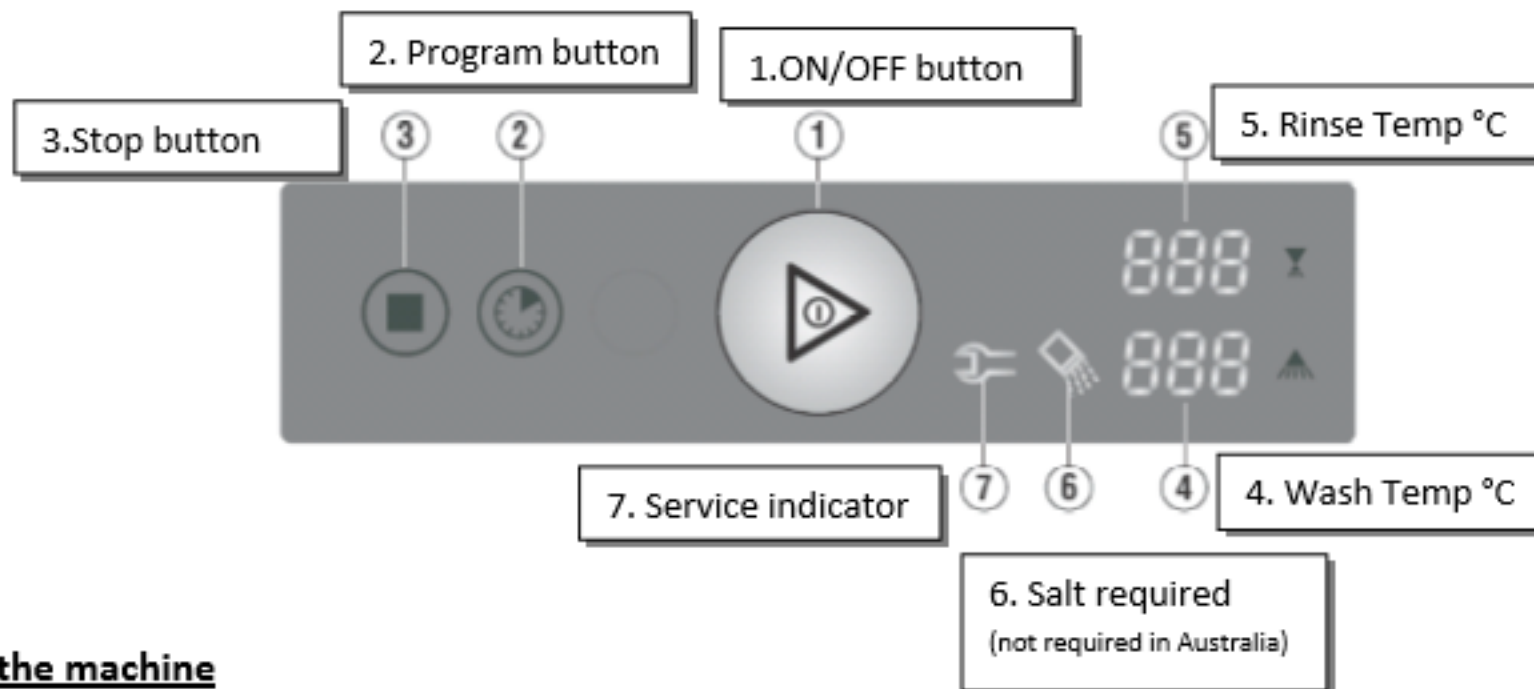

To fill the machine

1. Close the hood.
2. Press the **ON/OFF** button (1), tank will fill.
3. The **ON/OFF** button flashes **green** - fill and heating cycle. Several minutes.
4. **Green** permanent light. Ready.

To run a cycle

1. Factory set - standard cycle time (**P 02**) – **90 secs.**
2. To change. Hood opened.
 - a. Push the **Program** button (2) before starting the cycle then again
P 01 = Short Cycle (for light soiled dishes and glassware) 60 sec.
 - b. **P 02** = Standard Cycle (for medium soiled dishes) 90 sec.
 - c. **P 03** = Long Cycle (for dried on soiling and containers) 120 sec.
 - d. *The machine continues with the chosen cycle time until another program is chosen.*
3. Pre rinse items, load into rack, slide rack into machine.
4. Close the hood – wash cycle will commence, **ON/OFF** is **blue** during the wash and rinse cycle. Rinse cycle will commence when temperature reaches 82°C.
5. When cycle is complete the **ON/OFF** button is **green** permanent .
6. Open hood, unload and repeat from step 3.
7. If a different length cycle is required, start at step 2.

To drain the machine

1. Close the hood.
2. Push the **stop** (3) button to stop.
3. Press the **ON/OFF** button once to switch machine back on.
4. Push and hold the **ON/OFF** button (1) for min. 3 seconds. The button will flash **blue** during the drain cycle.
5. Draining will take 4 to 8 minutes.

NOTE: During the drain cycle, the interior of the machine is cleaned automatically. However, please inspect the interior for any food debris and remove.