

DESCALE DISHWASHER - WHAT TO DO

ALWAYS USE PROTECTIVE GLOVES AND FACE MASK WHEN USING CHEMICALS.

PROCEDURE:

1. Turn on dishwasher and fill as normal
2. Pour approx. 500mm of Warewashing Solutions K23Descale Solution into dishwasher on filter area. (this allows de-scaler to disperse quicker)
3. Select Cycle 2 and press START
4. When Cycle finished - allow at least 20 minutes for de-scaler to work on wash tank area.
DO NOT USE WHILE DE- SCALER SOAKING
5. Use a long handle brush to brush away any hard or firm deposits.
6. Then complete 2 cycles on cycle number 2 The dishwasher internal scale and deposits should then be removed.

Note: With heavily scaled machines, this process may need to be repeated.

Note: IT IS RECOMMENDED TO DESCALER AT LEAST EVERY 2 MTHS

FINISH: Drain and rinse machine before usual operation can begin

NOTE: De-Scaler is a corrosive chemical please follow all storage and handling and safety procedures. SDS data sheet is available at www.warewashingsolutions.com.au



BEFORE



AFTER

Various machine models require additional cleaning of wash and rinse arms during normal operation. This is to ensure that correct water flow is reaching the wash items. Contact Warewashing Solutions on 1300 217 411 or go to www.warewashingsolutions.com.au for standard operating instructions



WAREWASHING
SOLUTIONS
1 3 0 0 2 1 7 4 1 1