


## INSTRUCTIONS FOR HOBART 404 /504

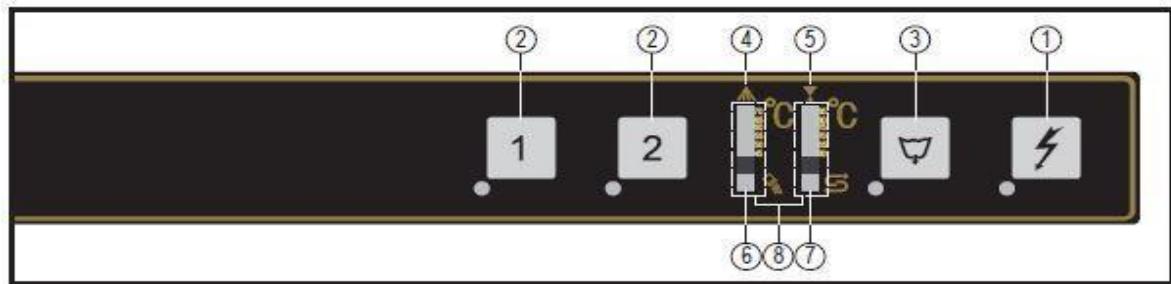

**Detergent:** Check Detergent Containers for auto dosing systems

### Operation

1. Push Power / Start switch **(1)** to turn machine on (door Closed) automatically fills -  
NOTE: The machine will take several minutes to reach operating temperatures
2. Wait till Temp - **(4)** - wash reads 60 deg C and **(5)** Rinse reads 82 deg C (Digital Display) 3. Scrape down heavily soiled plates into a waste bin, rinse off all food

**Do not put heavily soiled plates into the dishwasher as waste product may block the machine when draining. Pre-rinse all items**

4. Insert rack with plates, glassware, cups, cutlery etc to be washed
5. Press cycle select switch **(1 or 2)** to start cycle - light flashing 6. After wash and rinse cycle - light stops flashing - remove rack

**The machine is now ready for another load**

### Cleaning


Each day empty and clean the wash tank.

With Door closed - push and hold drain start button (3) for 5 seconds - Light flashing

Machine now drains and cleaning cycle begins - at end of cleaning cycle turn machine off



- # Remove filter cover,
- # Wash and rinse then replace in position.
- # check wash arms are not blocked and moving freely.

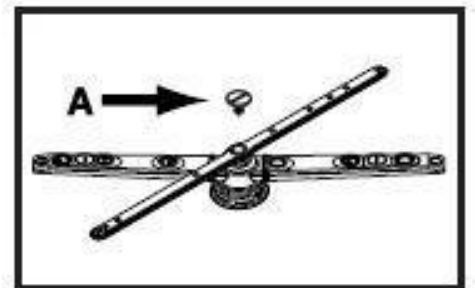

# Clean inside of machine – Leave door open for ventilation.

**END OF DAY - MAKE SURE THE DISHWASHER IS TURNED OFF**

AUTHORISED DISTRIBUTOR