

12V POLE HEDGE TRIMMER



BLADE LENGTH
450MM

**TELESCOPIC
LENGTH**
187CM – 235CM

CHARGE TIME
4-5 HOURS

NO-LOAD SPEED
1400 RPM

Thank you for purchasing this NETTA product.

Please read the user manual carefully before operating this appliance.

We will update our instruction manuals if necessary.

For the most up-to-date user manual, please visit our official website:
www.nettdirect.com.

You can download a copy of up to date user manuals at any time in electronic format. We do not supply you with a paper-based user manual after each revision.

Require a larger version of this Instruction Manual?

Please download electronically from
our website and use PDF reader on
your device to enlarge the text if
needed.

www.nettdirect.com

SAFETY & WARNINGS

INTENDED USE

NETTA Design is for domestic and indoor use only. This product is not intended for use by people who have lack of experience and knowledge or have reduced ability, or sensory and metal capabilities. Keep supervised when groups of people use this item.

REGULAR CHECKUPS

- Check cables every time before plugging into a socket, make sure power cables are not burst or snapped and that the power-plug has no damage.
- Check all the knobs are functioning correctly.


GENERAL CAUTIONS

- Always follow this instruction manual and go through all the safety checks.
- This is not toy - do not let children play with it.
- **DO NOT** modify this product in any way.
- Keep work areas clean and well lit.
- Do not operate tools in explosive atmospheres.
- Before using an electric powered appliance, check the rating label and voltage information on this manual, or the rating label on back of the machine.
- Always connect the device to a socket with Residual Current Device (RCD) fitted with your home circuits.
- If you are unsure, please seek a certified election for advice.
- The appliance must not be immersed in liquid.
- Do not use power tools in wet or damp conditions.
- Do not overload your power tools. Match each tool to the task.
- Do not use any power tool if the on/off switch is damaged.
- Check that the moving parts of your tool operate smoothly and are not cracked or damaged.

RISK OF PERSONAL INJURY

- DO NOT use the appliance other than for the intended use.
- Use personal protective equipment. Always use eye protection.
- Use ear protection.
- Do not wrap the device in a cloth or other material to suppress noise. This will hinder the proper ventilation of the device. This could ignite a fire and cause burns.
- Wear soft gloves when using this tool to prevent discomfort.
- Hold the power tool firmly to reduce the vibration levels.
- Ensure the switch is in the off position before connecting to a power source, picking up or carrying the tool.
- Remove any adjusting keys or wrenches before turning the tool on.
- Do not overreach. Keep proper balance at all times.
- Do not wear loose clothing or jewellery.
- Take a break if you feel vibration-related discomfort.
- DO NOT operate any appliance with a damaged cord or plug or after the appliance malfunctions or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
- If the supply cord is damaged it must be replaced by the manufacturer or an authorized service agent or a qualified technician in order to avoid a hazard.
- The use of accessories is not recommended by the manufacturer as they may cause injuries to persons.
- Do not let the cord hang over the edge of a table or counter or touch a hot surface.
- Do not place on or near a hot gas or electric burner or in a heated oven.
- Unplug from outlet when not in use and before cleaning.

DIAGRAM OF PRODUCT

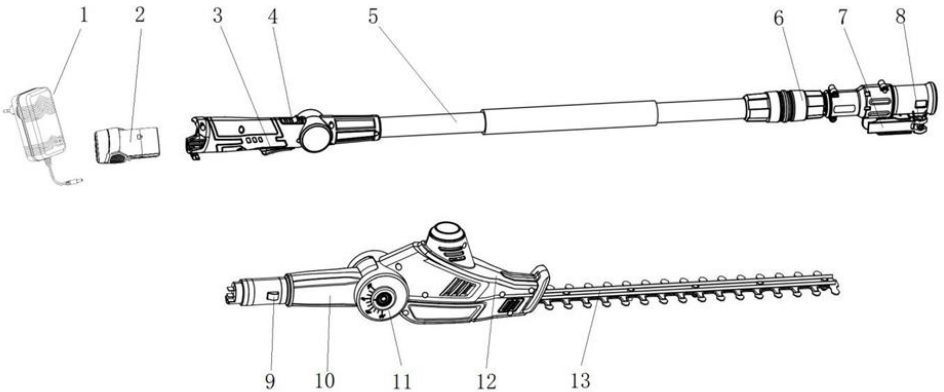


1. Charger
2. 12V MAX 2.0Ah Battery Pack
3. Switch On/Off
4. Switch Lock Button
5. Soft Foam for Hand Grip
6. Collar Ring for Adjusting the Telescopic Length
7. Lock Tightly
8. Center Housing
9. Disassembly and Assembly Button
10. Rotation Handle
11. Locking Button for Trimmer Head Angle Adjustment
12. Trimmer Head Collar
13. Trimmer Blade

OPERATING THE PRODUCT

Before Starting the Equipment


Connecting the Poles

- Open the locking lever (6) and take off the protect cap on the trimmer head collar.
- Align the telescopic pole with the trimmer head and press the button on the trimmer head collar
- Slide the telescopic tube part into the motor head part.
- Pay attention that the release button on the motor head must be locked into the guide hole when fully inserted.
- Then press the lock trigger down to engage the lock and make sure the motor head is secure.

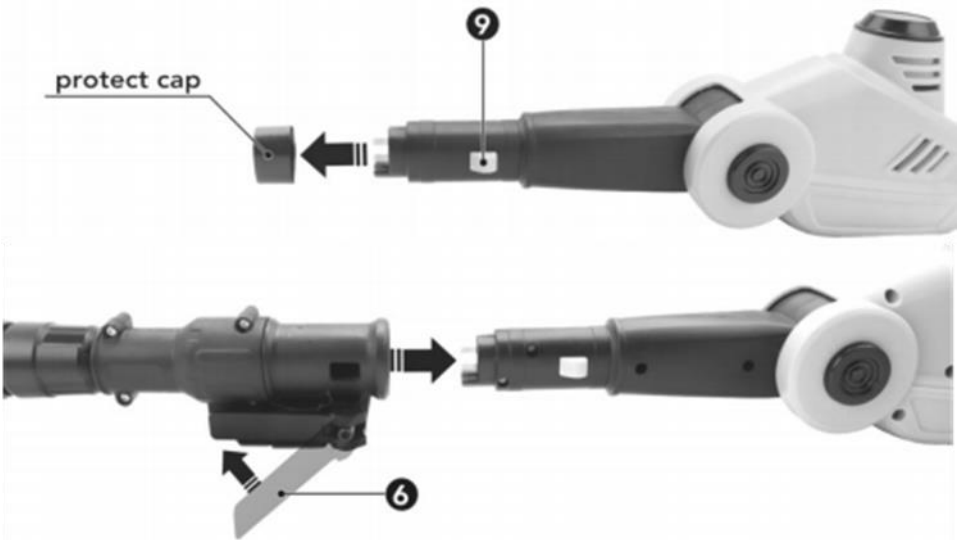

Adjusting the Telescopic Pole


You can adjust the telescopic length by loosening the length adjustment collar, when the desired length is achieved, tighten the collar to fix the length in place.

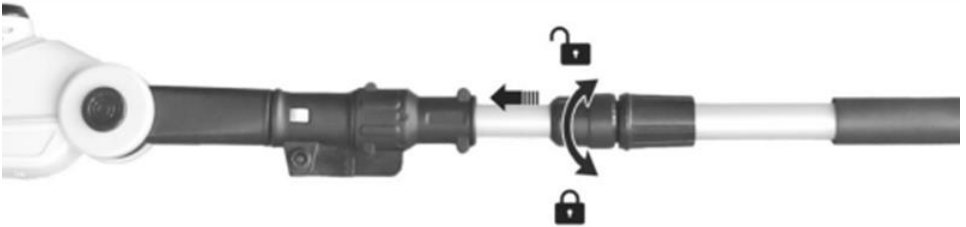

Adjusting the Angle of the Motor Housing

This pole hedge trimmer has 10 cutting positions for different cutting angles, meaning you can adjust the cutting head angle to fit the growth of the plant.

Press the locking button on the left and right of the trimmer head and adjust the working head until it snaps securely into place at one of the ten positions indicated by the notches.

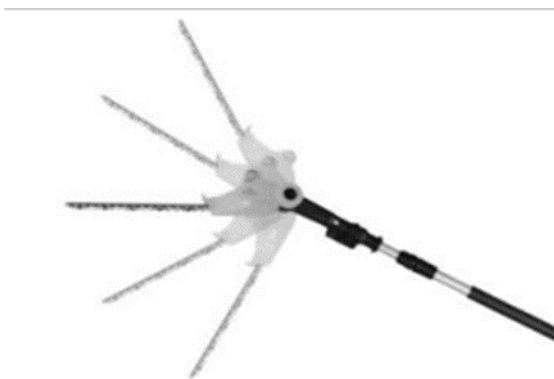

Charging the Battery

The power voltage supply must conform to that specified on the rating plate of the rapid charger. Always inspect battery charger, cord and plug before use.

Always have damage repaired by a qualified professional.

Protect battery charger against humidity and operate only in dry areas.

The supplied charger is suitable for charging batteries only.

LED Indicator on Charger:

Red indicator: charging.

Green indicator: charge finished

Disconnect the feeding before connecting or disconnecting the battery.


The charger must be used only with rechargeable battery. Never use un-rechargeable battery. Do not expose the charger to rain or water.

Inserting and Removing the Battery

Hold the tool with one hand and the battery pack with the other.

To install: push and slide battery pack into battery port, make sure the release button on the rear side of the battery snaps into place and battery is secure before beginning operation.

To remove: Press the battery release button and pull the battery pack out at the same time.

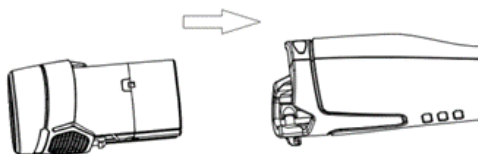


WARNING: Before making any adjustments ensure the tool is switched off or remove the battery pack. The product must be fully assembled before operation. Do not use a product that is only partly assembled or assembled with damaged parts.

Starting the Machine

Switching on: first push the lock off button to front position then press trigger switch at the same time.

Switching off: release trigger switch to stop the machine.

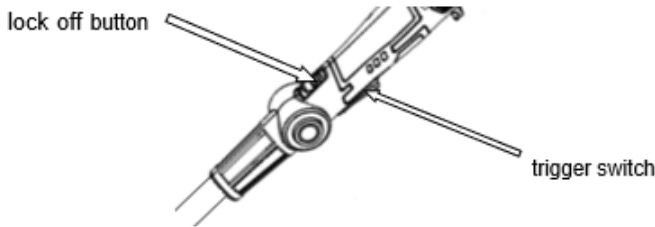

Cutting Hedge

Before you start your work, select branches with a diameter no bigger than 14mm and cut them with the pole hedge trimmer. A trapezoidal cut corresponds to the natural growth of plants and results in optimal hedge growing.

When cutting wide hedges with the cutting area in sight, move the cutting blade lightly through the cutting surface in a sweeping motion following the shape of the hedge or recommended for optimum cutting performance.

Cut in a number of stages if the area being cut is particularly long, to achieve a better result. Smaller cuttings will allow for easy composting. Lubricate the internal surfaces of the blade if the cutting device overheats during operation.

Troubleshooting

Problem	Possible Cause	Solution
Product does not start	Battery pack not properly attached. Battery pack discharged. Battery pack damaged. Electrical defect to the product	Attach properly. Remove and charge the battery pack Replace it with a new one. Check by a specialist electrician
Product does not reach full power	Battery pack capacity too low Air vents are blocked	Charge battery pack Clean the air vents
Unsatisfactory result	Blade is worn/damaged. Thickness of branches exceeds capacity	Replace it with a new one. Only cut branches complying with the capacity
Excessive vibration or noise	Blades are dull/damaged. Bolts/nuts are loose	Have it replaced with a new one. Tighten bolts/nuts

Cleaning and Maintenance

Check your machine regularly before starting the work.

Damaged cutting blades have to be repaired or exchanged by a qualified serviceman before working with the machine.

After each cutting operation, clean the cutting blade with a soft brush and cloth with lubricating fluid oil and spray a thin layer of fluid protective oil on the completes blade.

Always keep the ventilation slots in motor housing clean.

Never clean or spray a machine with water. Clean the motor housing only with a moist cloth and never apply detergents or solvents. These could ruin the plastic parts of the machine. Finally, dry the motor housing carefully.

Store the machine with the supplied protection cover.

Only use original accessories and spare parts.

Spare Parts and Repairs

To order replacement parts, please go to www.nettadirect.com/parts.

You will need PDC information from your product, user manual or carton box. Alternatively, go to our website and use search bar to find the parts available. You can also find this code on the [back of this user manual](#).

For our repair service, please contact our customer support with email on support@nettadirect.com they will provide with more details of repair service with NETTA.

Disposal of Product

IMPORTANT INFORMATION FOR THE CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

DISPOSAL:

Please dispose of this product responsibly. This item cannot be disposed of with general waste. Please contact your local council authority for more information on how to dispose this product. If this product is disposed of with general waste, it will end up in a landfill and will leak hazardous substances into the groundwater – effecting our food chain.



Your Warranty

If you purchased with NETTADIRECT, or one of our authorised resellers, you will automatically enrol your warranty for 1 (ONE) year. You do not need to register again for your warranty. All warranties will be carried out to our terms and conditions including warranty conditions you will find out from our website at www.nettadirect.com.

Copyrights

NETTA and its logo including images and contents in this manual and website is copyrighted. All intellectual property rights belong to NETTA owner CONSUMABLE DIRECT LIMITED.

ANY UNAUTHORISED USE, MODIFICATION or DISTRIBUTION of the NETTA logo, website image, and its contents (from website, manuals) will violate worldwide copyright, trademark and associated laws.

We reserve the right to proceed with lawsuits to anyone who is found breaching our copyrights policy. For more details, please check our website copyright policy for more information.

PRODUCT DEPENDENCY CODE (PDC)

Your PDC is below:

PDC: JYPHT0245012

SKU: 104102

NETTA is a registered trademark of CONSUMABLE DIRECT LIMITED.
Product Produced for CONSUMABLE DIRECT LIMITED M30 0QF U.K.