

# 16" STAND FAN WITH REMOTE



**RATED  
POWER**  
40W

**TIMER**  
7 HOURS

**OSCILLATION**  
80 DEGREES

**SPEED  
SETTINGS**  
THREE

**Thank you for purchasing this NETTA product.**

Please read the user manual carefully before operating this appliance.

We will update our instruction manuals if necessary.

For the most up-to-date user manual, please visit our official website:  
[www.nettdirect.com](http://www.nettdirect.com).

You can download a copy of up to date user manuals at any time in electronic format. We do not supply you with a paper-based user manual after each revision.

## Require a larger version of this Instruction Manual?

Please download electronically from our website and use PDF reader on your device to enlarge the text if needed.

[www.nettdirect.com](http://www.nettdirect.com)

# SAFETY & WARNINGS

## INTENDED USE

NETTA Design is for domestic and indoor use only. This product is not intended for use by people who have lack of experience and knowledge or have reduced ability, or sensory and metal capabilities. Keep supervised when groups of people use this item.

## REGULAR CHECKUPS

Check cables every time before plugging into a socket, make sure power cables are not burst or snapped and that the power-plug has no damage.

## GENERAL CAUTIONS

 
- Use the fan only for the specific purpose outlined in this instruction manual.
- Do not operate fan until fully assembled.
- Ensure the correct voltage is being used prior to plugging in the fan.
- Place the fan on a stable surface to avoid it being tipped over.
- Do not operate the fan directly adjacent to curtains, plants, etc. to avoid accidental entanglement.
- To avoid potential fire hazards, never place your fan or its electrical cord under rugs or carpet.
- Insert and remove the plug from the outlet by grabbing the plug by hand. Do not pull on the cord.
- Never operate the fan near an open flame or in the presence of explosive or combustible gas or fumes.
- Should the fan or electrical cord ever become damaged, discontinue use until a certified repair.
- Do not expose fan to excessive heat or humidity
- Never cover the fan whilst it is working.
- Do not block air inlets or outlets in any manner. Check the openings occasionally to remove dust.
- Do not adjust the fan tilt angle when the fan is moving. Switch the fan off before adjusting.
- Once the fan is assembled, the rotor blade guard should not be removed.

## **RISK OF PERSONAL INJURY**

- To protect against electric shock, do not place fan on windowsill or allow it to come into any contact with water.
- To reduce the risk of shock, this plug is intended to fit the outlet. If the plug does not fit fully in the outlet, contact a qualified electrician.
- Turn off and unplug the fan from the outlet when not in use, when moving the fan from one location to another, and before cleaning.
- Do not operate the fan in the presence of explosives and/or flammable fumes.
- Do not place the fan or any parts near an open flame, cookers, or other heating appliances.
- Do not operate fan with a damaged cord or plug, or if the product malfunctions, or if dropped or damaged in any manner.
- Avoid contact with moving fan parts.
- The use of attachments not recommended by the manufacturer may be hazardous.
- Place the fan on a dry and level surface.
- Do not hang or mount the fan on a wall or ceiling.
- Do not operate if the fan housing is damaged.
- Place the electrical cord away from busy areas to avoid accidental tripping and contact.
- Keep fan out of reach of children and pets.
- Do not expose children or seniors to prolonged periods of direct cold air.
- Never insert fingers, pencils, or any other objects through the grill when the fan is running.
- Do not use the fan near windows as rain may create an electrical hazard.
- This product is for indoor, household use only.

## ASSEMBLY INSTRUCTIONS:

**WARNING!** Do not use this fan before assembling the base.

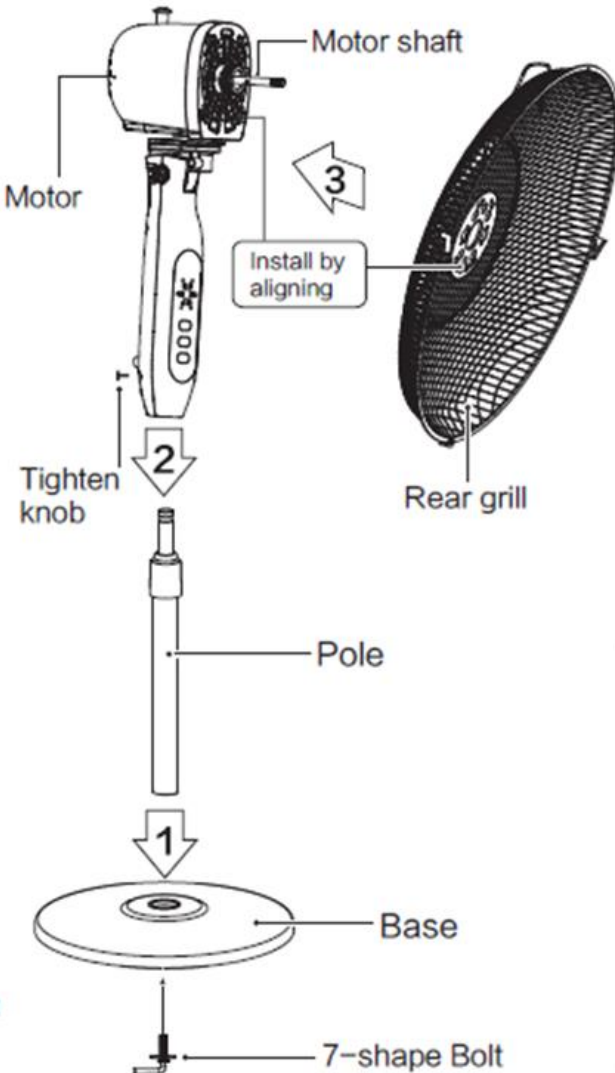


### Base Installation

Align the column with the groove on the base and fix them together using a right-angle bolt.





## Front & Rear-Guard Installation:

 1. Align Screw Holes on the outerring of both the Front and Rear Guards, with the Positioning Clip aligned as illustrated.

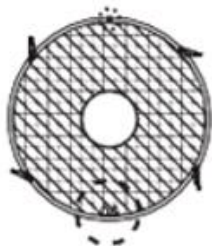

  
2. Press down all the Buckles to fasten the Front Guard with the Rear Guard. At the Screw Holes, tighten the separated screw and nut.

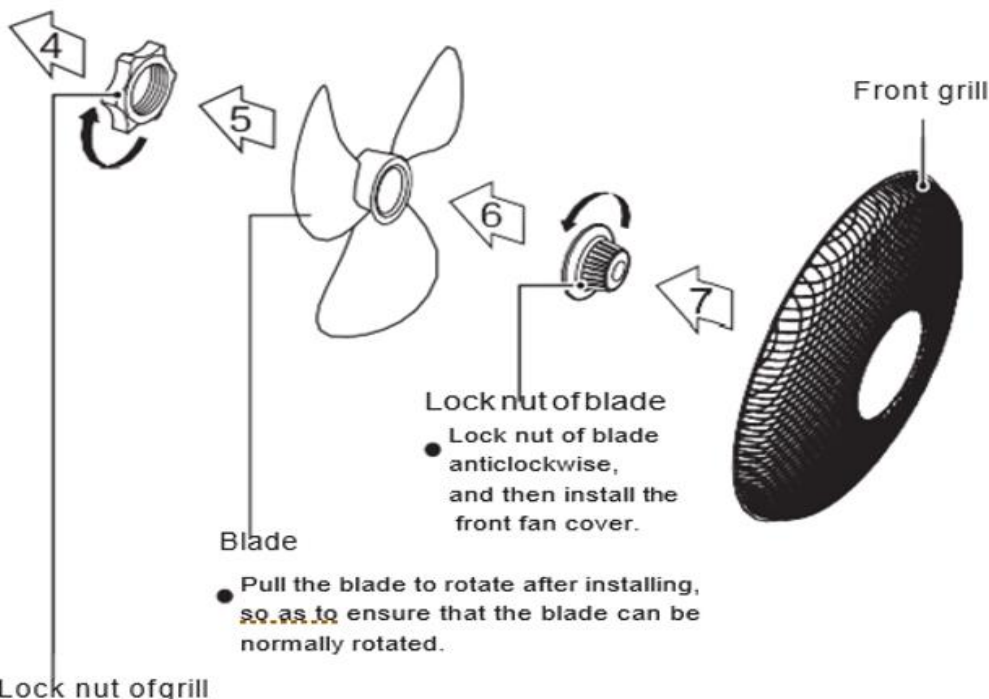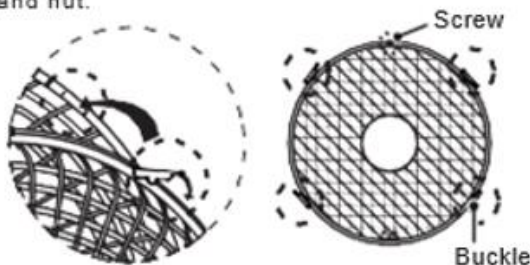

- Screw the lock nut of grill clockwise, and in the meantime, fix the rear grill.

## FAN OPERATION:

 Plug into any AC 220-240V, 50Hz source, ensure that the plug and the socket fit well. You can operate the appliance by the control panel or the remote control.

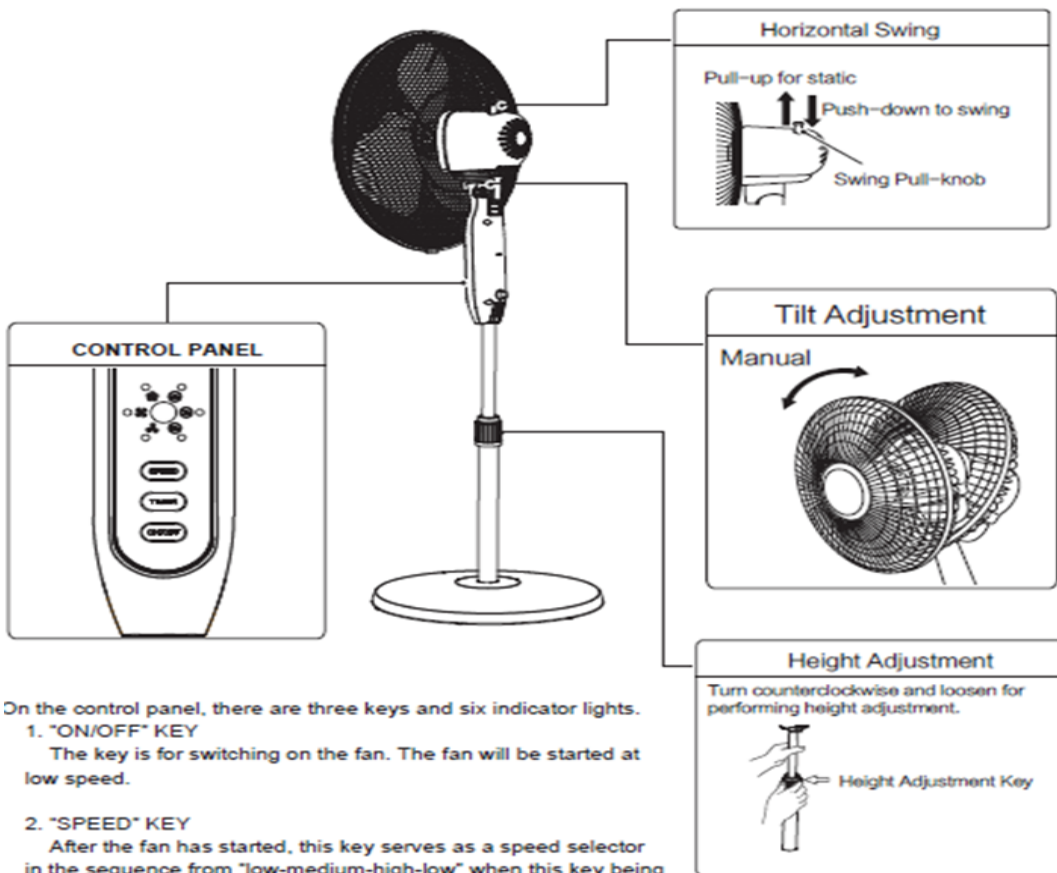

On the control panel, there are three keys and six indicator lights.

### 1. "ON/OFF" KEY

The key is for switching on the fan. The fan will be started at low speed.

### 2. "SPEED" KEY

After the fan has started, this key serves as a speed selector in the sequence from "low-medium-high-low" when this key being touched repeatedly or continuously.

### 3. "TIMER" KEY

This key is touched repeatedly or in pressed state. The time to be set for one hour, two hours and four hours.

Do not press the timer key when the fan will be required to operate continuously. At the moment all timer led don't light.

## REMOTE CONTROL

On the remote control, there are three keys. (See Fig.9)

### 1. Remote Control Operation

(1) Point the remote control at the receiver and press the desired key.

(2) The remote control will work at distances of up to roughly five meters and the angle of 30 degree from the control panel.

(3) Avoid the sunshine irradiating the receiver lest the effect of the receiver should be influenced.

(4) The batteries must be removed from the remote control before it is scrapped, and that they are disposed of safely.

### 2. Batteries (battery not included in the packing)

(1) Slide the battery compartment cover.

(2) Insert the batteries, and make sure that the batteries are placed as shown in the Fig.10.

(3) Slide back the battery cover.

 


Fig.9 Remote Controller

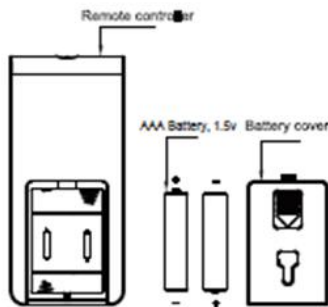 


Fig.10 Battery Compartment

NOTES: Use manganese or alkaline batteries of type "AAA". Do not use rechargeable batteries.


### CR 2032 3V LITHIUM BATTERY
 
#### WARNING

1. Keep batteries out of reach of small children. Should a child swallow a battery, consult a physician immediately.
2. Do not recharge or dispose of in fire
3. Keep in a dry and cool place
4. Wipe off the battery use.
5. Insert battery in right direction.



Battery Disposal—please dispose the used battery per municipal or provincial law.

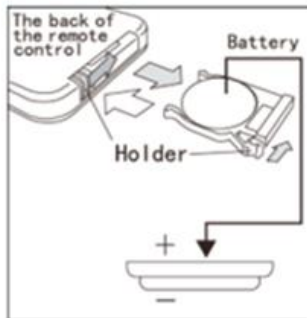



## **CLEANING & MAINTANENCE**

This fan requires little maintenance. Do not fix it by yourself. Refer it to a qualified service person if service is required.

- Before cleaning and assembling, the fan must be unplugged.
- To ensure adequate air circulation to the motor, keep vents at the rear of the motor free of dust. Do not disassemble the fan to remove dust.
- Please wipe the exterior parts with a soft cloth and a mild detergent.
- Do not use any abrasive detergent or solvents to avoid scratching the surface. Do not use gasoline or thinner as a cleaning agent.
- Do not allow water or any other liquid into the motor housing or interior parts.

### **CLEANING:**

- Ensure to unplug the product from the electrical supply source before cleaning.
- Plastic parts should be cleaned with a soft cloth moistened with mild soap. Thoroughly remove remaining soap with a dry cloth.

## SPARE PARTS/REPAIR

---

We hope our products will last as long as possible to reduce the build-up of electrical waste in the world.

If any consumable parts need replacing, please check our website for stock availability and purchase.

If our website does not have the parts listed, but you still need consumable parts, please contact our customer support to check availability and process your order.

To order replacement parts, please go to [www.nettadirect.com/parts](http://www.nettadirect.com/parts).

You will need PDC information from your product, user manual or carton box. Alternatively, go to our website and use search bar to find the parts available.

You can also find this code on the [back of this User Manual](#).

For our Repair Service, please contact our customer support with email on [support@nettadirect.com](mailto:support@nettadirect.com) they will provide with more details of repair service with NETTA.

## DISPOSAL OF PRODUCT

---

**IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.**

### **DISPOSAL:**

Please dispose of this product responsibly. This item cannot be disposed of with general waste. Please contact your local council authority for more information on how to dispose this product. If this product is disposed of with general waste, it will end up in a landfill and will leak hazardous substances into the groundwater – effecting our food chain.



## YOUR WARRANTY

---

If you purchased with NETTADIRECT, or one of our authorised resellers, you will automatically enrol your warranty for 1 (ONE) year. You do not need to register again for your warranty. All warranties will be carried out to our terms and conditions including warranty conditions which you can find out from our website at [www.nettadirect.com](http://www.nettadirect.com).

## COPYRIGHTS

---

NETTA and its logo including images and contents in this manual and website is copyrighted. All intellectual property rights belong to NETTA owner CONSUMABLE DIRECT LIMITED.

ANY UNAUTHORISED USE, MODIFICATION or DISTRIBUTION of the NETTA logo, website image, and its contents (from website, manuals) will violate worldwide copyright, trademark and associated laws.

We reserve the right to proceed with lawsuits to anyone who is found breaching our copyrights policy. For more details, please check our website copyright policy for more information.

## PRODUCT DEPENDENCY CODE (PDC)

---

Your PDC is below:

**PDC: FS40-16JRA**  
**SKU: 103787/103788**

NETTA is a registered trademark of CONSUMABLE DIRECT LIMITED.  
Product Produced for CONSUMABLE DIRECT LIMITED M30 0QF U.K.