

4 IN 1 POLE HEDGE TRIMMER AND CHAINSAW



**EXTENDABLE
CHAINSAW**
154cm – 210cm

**EXTENDABLE
HEDGE TRIMMER**
194cm – 250cm

Thank you for purchasing this NETTA product.

Please read the user manual carefully before operating this appliance.

We will update our instruction manuals if necessary.

For the most up-to-date user manual, please visit our official website: www.nettadirect.com.

You can download a copy of up-to-date user manuals at any time in electronic format. We do not supply you with a paper-based user manual after each revision.

Require a larger version of this Instruction Manual?

Please download electronically
from our website and use PDF
reader on your device to enlarge
the text if needed.

www.nettadirect.com

Safety and Warnings

Intended Use

This NETTA product is designed for private outdoor and residential use only. Failure to use this product as intended will void the warranty.

Regular Check-Ups

Ensure the power cable and plug are not damaged before plugging into a socket.

Check all the knobs are functioning correctly.

General Warnings

Failure to follow the warnings and instructions may result in tool damage, physical injury and/or damage to property. Save the manual in a safe place for future reference.

Work Area Safety

- Keep the work area clean and well lit. Dark or cluttered areas could lead to accidents.
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids or fumes, gases or dust. Power tools could create sparks which may ignite the gases or fumes.
- Keep children and bystanders at a safe distance while operating the power tool.

Electrical Safety

- Make sure that power tool plugs match the outlet. Do not ever modify the plug in any way. Do not use adapter plugs with earthed power tools. Using unmodified plugs and matching outlets will reduce the risk of electric shock.
- Avoid body contact with earthed or grounded materials or objects, such as radiators, pipes, ranges and refrigerators. There is a high risk of electric shock if the operator's body is earthed or grounded.
- Do not expose power tools to rain or any other wet conditions. Water entering a power tool could increase the risk of electric shock.

General Warnings

Electrical Safety (Cont.)

- Do not abuse the power cord. Never use the cord for carrying, pulling or unplugging the electric tool. Keep the cord in a safe distance from heat, oil, sharp edges and any moving parts. Damaged or entangled cords will increase the risk of electric shock.
- When operating an electric power tool outdoors, use an extension cable which has the appropriate specifications for outdoor use. Use of an extension cable suitable for outdoor use reduces the risk of electric shock.
- If operating a power tool in a damp location cannot be avoided, use a residual current device (RCD) protected supply. Use of an RCD reduces the risk of electric shock.

Personal Safety

- Stay alert, watch what you are doing and use common sense when operating the power tool. Do not use the power tool if you are feeling tired or are under the influence of alcohol, drugs, or medication. A moment of inattention while operating the power tool may result in serious personal injury.
- Use personal protective equipment. Always wear eye protection. Protective equipment such as a dust mask, or hearing protection, non-skid safety shoes or protective helmets, used in appropriate conditions will reduce personal injuries.
- Prevent unintentional starting. Ensure the power switch is in the off position before connecting to power source and/or battery pack, picking up or carrying the power tool. Carrying power tools with your finger on the power switch or connecting power tools that have the switch in the on position to a power source can lead to accidents.
- Remove any adjusting keys or wrenches before turning on the power tool. An adjusting key or a wrench left attached to a rotating part of the power tool may result in personal injury.
- Do not stretch out your arms too far when operating the power tool. Keep balance and proper footing at all times. This helps the operator have better control of the power tool in unexpected situations.
- Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from any moving parts. Loose clothes, jewellery and/or long hair can be caught in moving parts.

Power Tool Use and Care

- Do not force the power tool. Use the correct power tool for each application. The correct power tool will always do the job better and safer when used as intended.
- Do not use the power tool if the switch does not turn activate or deactivate it. Any power tool that cannot be controlled with the switch is extremely dangerous and must be repaired.
- Disconnect the main plug from the power source and/or the battery pack from the power tool before changing accessories, making any adjustments, or storing the power tool. Such preventive safety measures will reduce the risk of starting the power tool accidentally.
- When the power tool is not in use, store it out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to use and operate the power tool. Power tools are extremely dangerous in the hands of untrained users.
- Maintain the power tool. Check for misalignment or binding of moving parts, breakage of parts, leakage and any other issue that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents and injuries are caused by poorly maintained power tools.
- Keep the cutting parts of the power tool sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are more precise and easier to control.
- Always use the power tool, accessories and tool bits etc. in accordance with the instructions of this instruction manual, considering the working conditions and the work that is to be performed. Use of the power tool for applications different from those intended could result in personal injury or cause damage to the power tool.
- Keep the handles and any grasping surfaces of the power tool dry, clean and free of oil and grease. Slippery handles and grasping surfaces do not allow for safe handling of the tool in unexpected circumstances.

Battery Tool Use and Care

- Recharge the batteries only with the charger specified by the manufacturer. A charger that is used to charge unsuitable batteries can create a risk of fire.
- Use the power tool only with the specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.

- When the battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects that can make a connection from one terminal to another.
- Shorting the battery terminals together may cause burns or a fire.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact.
- If contact accidentally occurs, flush with water. If liquid contacts eyes, seek medical help immediately. Liquid ejected from the battery may cause irritation or burns.

Service

- Have the power tool serviced by qualified service personnel, using only identical replacement parts. This will ensure that the safety of the power tool is maintained.
- Never attempt to repair damaged battery packs on your own. Service of battery packs should only be performed by the manufacturer or authorized service technicians.

Additional Safety Warnings

This tool is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

When working with the machine, always hold it firmly with both hands and provide for a secure stance. The power tool is guided more secure with both hands.

Always ensure all handles and guards are fitted when using the machine.

Never attempt to use an incomplete machine or one fitted with an unauthorized modification.

Always lubricate the cutting blade with protective spray before use.

Always wait until the machine has come to a complete stop before placing it down.

Other persons and animals should remain at a distance of 3 metres or more when the machine is being used. The operator is responsible for third persons in the working area.

Never grasp the blade of the hedge trimmer.

Children or persons unfamiliar with these instructions must not operate the hedge trimmer. Local regulations may restrict the age of the operator.

Never cut a hedge while people, especially children or pets, are nearby. The user is responsible for accidents or hazards occurring to other people or their property.

Do not operate the hedge trimmer when barefoot or wearing open sandals, always wear substantial footwear and long trousers. The use of sturdy gloves, non-skid footwear and safety glasses is recommended. Do not wear loose clothing or jewellery which can be caught in moving parts.

Thoroughly inspect the area where the hedge trimmer is to be used and remove all wires and other foreign objects.

Prior to operation, check cutter blades, blade bolts and cutter assembly for wear or damage. Do not operate with a damaged or excessively worn cutting device.

Know how to stop the hedge trimmer quickly in an emergency.

Cut a hedge only in daylight or in good artificial light.

Never operate the hedge trimmer with defective guards or without the guard in place.

Always ensure all handles and guards supplied are fitted when using the hedge trimmer. Never attempt to use an incomplete hedge trimmer or one with an unauthorized modification.

Never hold the hedge trimmer by the guard.

When operating the hedge trimmer, ensure to keep proper footing and balance at all times.

Always be aware of your surroundings and stay alert for possible hazards that you may not hear whilst operating the hedge trimmer.

Keep all nuts, bolts and screws tight to ensure that the hedge trimmer is always in a safe working condition.

The hedge trimmer should be stored in a dry, high or locked up place out of the reach of children.

Replace worn or damaged parts for safety.

Do not attempt to repair the machine unless you are qualified to do so.

To safeguard against contact with the moving cutter blade, this hedge trimmer is constructed with two handles each with a blade control (switch). To operate the hedge trimmer, both controls must be actuated simultaneously. Do not use the tool, if it runs without a switch being actuated or just one switch being actuated.

Recommendations for Optimal Handling of the Battery Pack

Do not open the battery. There is a risk of short-circuiting.

Protect the battery against heat (e.g., against continuous intense sunlight), fire, water, and moisture as there is a risk of explosion.

In case of damage and improper use of the battery pack, vapours may be emitted. Ventilate the area and seek medical help in case of complaints. The vapours can irritate the respiratory system.

Only use the battery with products from the manufacturer. This is the only way in which you can protect the battery against dangerous overload.

The battery can be damaged by pointed objects such as nails or screwdrivers or by force applied externally. An internal short circuit may occur, causing the battery to burn, smoke, explode or overheat.

Do not short-circuit the battery. There is a risk of explosion.

Occasionally clean the venting slots of the battery using a soft, clean and dry brush.

Charge the machine only with the supplied battery charger.

Safety Warnings for Battery Chargers

Read all safety warnings and all instructions.

Failure to follow the safety warnings and instructions may result in electric shock, fire and/or serious injury.

Save all safety warnings and instructions for future reference.

Use the battery charger only when you fully understand and can perform all functions without limitation or have received appropriate instructions.

Never allow children, persons with physical, sensory or mental limitations or a lack of experience and/or knowledge and/or people unfamiliar with these instructions to use the battery charger. Local regulations may restrict the age of the operator.

Supervise children at all times. This will ensure that children do not play with the battery charger. Keep the battery charger away from rain or moisture. Penetration of water in the battery charger increases the risk of an electric shock. Immediately pull the plug from the socket outlet if the cable is damaged or cut-through,

Keep the charger clean. Dirt poses a risk of electric shock.

Always check the charger, cable and plug before use. Stop using the charger if you discover any damage. Do not open the charger yourself, and have it repaired only by a qualified specialist using only original replacement parts.

Damaged chargers, cables and plugs increase the risk of electric shock.

Do not operate the charger on an easily ignited surface (e.g., paper, textiles, etc.) or in a flammable environment. There is a risk of fire due to the charger heating up during operation.

Do not cover the ventilation slots of the battery charger. Otherwise, the battery charger can overheat and no longer operate properly.

For increased electrical safety, we recommend using a residual current device with a max. tripping current of 30 mA. Before using, always check your residual current device.

Read all safety warnings and all instructions.

Failure to follow the safety warnings and instructions may result in electric shock, fire and/or serious injury.

Please observe the illustrations at the ending of this operating manual.

Intended Use

The machine is intended for cutting and trimming hedges and bushes in domestic use.

Hedge Trimmer Safety Warnings

- Keep all parts of the body away from the blade. Do not remove cut material or hold material to be cut when blades are moving. Blades continue to move after the switch is turned off. A moment of inattention while operating the hedge trimmer may result in serious personal injury.
- Carry the hedge trimmer by the handle with the blade stopped and taking care not to operate any power switch. Proper carrying of the hedge trimmer will decrease the risk of inadvertent starting and resultant personal injury from the blades.
- When transporting or storing the hedge trimmer, always fit the blade cover. Proper handling of the hedge trimmer will decrease the risk of personal injury from the blades.
- When clearing jammed material or servicing the unit, make sure all power switches are off and the battery pack is removed or disconnected. Unexpected actuation of the hedge trimmer while clearing jammed material or servicing may result in serious personal injury.
- Hold the hedge trimmer by insulated gripping surfaces only because the blade may contact hidden wiring. Blades contacting a "live" wire may make exposed metal parts of the hedge trimmer "live" and could give the operator an electric shock.
- Keep all power cords and cables away from cutting area. Power cords or cables may be hidden in hedges or bushes and can be accidentally cut by the blade.
- Do not use the hedge trimmer in bad weather conditions, especially when there is a risk of lightning. This decreases the risk of being struck by lightning.

Chainsaw Safety Warnings

- When the chain saw is in operation, keep a safe distance between your body and the chain saw. Before starting the chain saw, make sure that the chain is not in contact with anything. During operation of the chain saw, even the slightest distraction of the operator may cause clothing or body parts to be caught in the chain.
- Always hold the rear handle of the chain saw with your right hand and the front handle of the chain saw with your left hand. Doing the opposite will increase the risk of personal injury. Therefore, never grasp the rear handle with your left hand and grasp the front handle with your right hand.
- Since the chain may touch hidden wires, when operating the power tool only hold the insulated handle. When the chain comes into contact with a "live" wire, the exposed metal parts of the tools may also become "live" and lead to the operator getting electrocuted.
- Wear protective glasses and hearing protection. It is recommended to also wear protective equipment to protect the head, hands, legs and feet. Protective clothing will reduce the risk of personal injury caused by flying debris or accidentally touching the chain.
- Do not operate the chain saw on a tree. Operating the chain saw on a tree may cause personal injury.
- Make sure to stand firm and on a fixed, safe and level surface before operating the chain saw. Slippery or unstable surfaces such as ladders may cause the operator to lose balance or lose control of the chain saw.
- When cutting a branch under tension, beware of kickback. When the tension on the wood fibre is released, the elastic force on the branch may impact the operator, or the chain saw may cause it to lose control.
- When cutting shrubs and saplings, be especially careful because slender materials may jam the chain and lead to injury.
- Before carrying the chain saw, turn it off and hold the front handle firmly. When transporting or storing the chain saw, be sure to close the guide cover. Properly operating the chain saw will reduce the possibility of accidental contact with a running chain.
- Lubricate, tension the chain and replace accessories according to the instructions. Improperly tensioning or lubricating the chain may cause the chain to break or increase the possibility of kickback.
- Keep the handle dry, clean and free of oil and grease. Greasy handles are prone to slippage.

- Only use the chain saw for cutting wood. Do not use the chain saw for purposes other than the ones intended. For example: Do not use the chain saw to cut plastic, stone, or non-wood building materials. The use of the chain saw for operations other than the intended ones will result in tool damage or physical injury.

Kickback - Causes and Preventive Measures

- If the head of the guide bar touches an object and the chain stops suddenly, kickback may occur.
- In some cases when the head of the guide bar touches an object, a sudden reaction force will be formed, which may cause the guide bar to bounce up and rush towards the operator, causing injury.
- Squeezing the chain along the upper part of the guide bar may quickly push the guide bar back towards the operator. Any of these reaction forces may cause the operator to lose control of the chain saw, resulting in injury.
- Do not rely solely on the safety equipment installed on the chain saw.
- As a chain saw operator, you should take a variety of measures to prevent accidents or personal injury during cutting operations.
- Improper operation of the chain saw, incorrect operation steps or operating conditions will cause rebound. Observe the precautions described below:
 - Keep a firm grip and hold the chain saw handle with both thumbs and the rest of your fingers. Adjust the position of the body and arms to prevent rebound forces. If the correct precautions are followed, the operator will be able to better control the tool, thus minimizing the risk of injury in case kickback occurs.
 - Do not extend the tool too far and do not hold the chain saw above your shoulders during operation. This will help to prevent the head of the guide bar from touching the object and ensure better control of the tool in unexpected situations.
 - Use only replacement guides and chains specified by the manufacturer. Using inappropriate replacement guide bars and chains may cause the chain to break and/or the guide bar to kickback.
 - Follow the manufacturer's polishing and maintenance instructions to maintain the chain. Reducing the depth and height will cause frequent kickbacks.

Before Operation

- The use of battery packs and chargers that are not marked or approved by the manufacturer may lead to a fire or an explosion which may cause serious, even fatal, injuries and property damage.
 - The use of chain saws, battery packs and chargers beyond their intended use can cause serious or fatal injuries and property damage.
- Operator requirements Ensure that the operators of this electric tool meet the following requirements:
- The operator must have read the manual or have been instructed on the proper and safe use of the power tool by a person who has read the manual.
 - Persons using this power tool must be in a stable physical, mental and psychological condition. If operators are not in a healthy condition, ensure that they are supervised.
 - The operator must be an adult.
 - Operators of this power tool must not be under the influence of alcohol and drugs.
 - It is important that first time users of this power tool practice on a sawhorse or saw bracket.

Dressing and Protection Requirements

- Dress appropriately. Do not wear loose clothes or accessories. Keep clothes, gloves and hair away from moving parts. Loose clothes, ornaments or long hair may be caught in moving parts.
 - Chips or other sawdust may be ejected at high speeds during operation of the chain saw, which may cause physical injury or allergic reactions.
- Wear protective goggles during operation.
 - It is recommended to wear a protective mask.
 - Wear long clothing and trousers with a protective cutting level. The higher the speed of the chain saw, the higher the protective cutting level must be.
- Falling objects from high altitudes can cause head injuries.
 - Improper clothing may get caught on branches, which will hinder and affect the use of the chain saw. The wearing of inappropriate clothing can cause serious injuries to the operator.
- Wear tight-fitting clothing.
 - Remove items such as scarves and jewellery.

- Operators must not hover their hands too close to the running saw chain, or serious injury may result.
- Wear protective gloves and trousers when working or when cleaning the power tool and the chain.
- Operators may slip or fall when wearing improper shoes.
- Wear chain saw protective boots. The higher the speed of the chain saw, the higher the protection level of the boots must be.

Work Area

- Keep bystanders, children and animals away from the work area.
- The chain saw is not waterproof. If it is used in rainy weather or in a humid area, electric shock may result. The operator will be injured and the chain saw will be damaged.
- Do not use the chain saw in the rain or in a humid area.
- The motor of the chain saw may generate sparks. In an area with combustible or explosive materials, the sparks may cause fire or explosions. These can cause serious injury or death and property damage.
- Do not work in an area with flammable and explosive materials.

Important Precautionary Measures

The chain saw is safe to use if it meets the following conditions:

- The chain saw is not damaged.
- The chain saw is clean and dry.
- The chain saw handle is intact.
- The chain saw trigger is operating normally.
- The chain is correctly installed on the guide bar and the guide bar is correctly mounted on the chain saw.
- The chain is tensioned properly.
- The chain saw has accessories installed that are made by the manufacturer.

Warning: If the product no longer meets the safety requirements, the parts cannot perform properly or the safety mechanism cannot work normally, serious and even fatal injuries can result.

- The chain saw must only be used if it is in good condition. If the chain saw is dirty or wet, clean it and then let it dry.

- Do not modify the chain saw in any way.
- If the safety switch does not work properly, do not use the chain saw.
- Only use accessories provided by the manufacturer.
- Don't insert anything into the chain saw.

Guide Bar

The guide bar is safe to use if it meets the following conditions:

- The functions of the guide bar are intact.
- The guide bar is not deformed or damaged.
- There is no obvious change in the depth of the guide bar groove.
- The guide rail is smooth and free of burrs.
- There is no shrinkage or cracking in the guide bar groove.

Warning: If the guide bar is not intact or cannot fit the chain well, there is a danger that the chain will eject out of the guide and cause serious or even fatal injuries.

- Use only undamaged guide bars.
- Remove stains and foreign objects from the guide bar after each use of the chain saw.

Chain

The chain is safe to use if it meets the following conditions:



- The chain is not broken or damaged in any way.
- The cutting edges of the teeth are sharp.
- The cutting depth of the cutting edges of the teeth conforms to the service mark description.
- The length of the cutting edges of the teeth meets the grinding standard.


Warning: If the parts do not meet the safety standards, they will not be able to perform properly and the safety devices will fail, resulting in serious personal injury or even death.


Safety Instructions for Using the Extendable Pole Attachment

- Never use the extendable pole attachment near power lines to reduce the risk of electric shock. Touching or using the tool near power lines can cause serious injury or death.
- Always operate the extendable pole attachment with both hands to avoid losing control.
- Wear a helmet when working overhead as falling pieces can cause serious injuries.

Diagram of Product

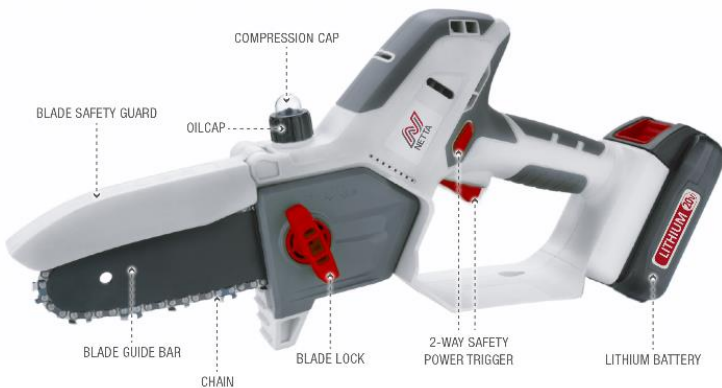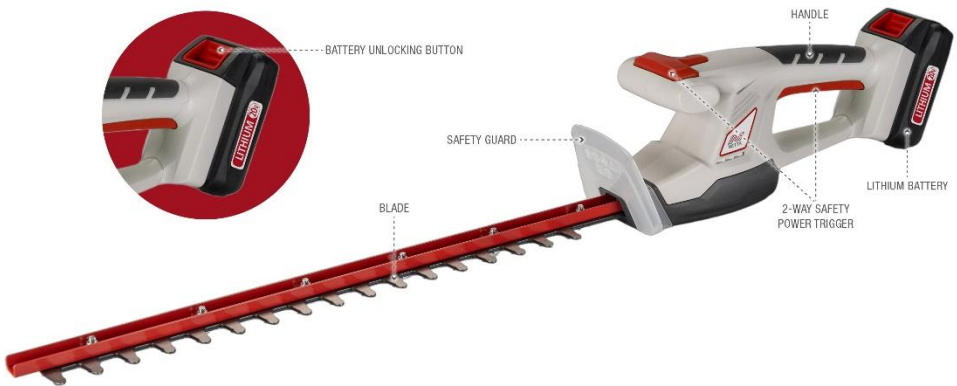

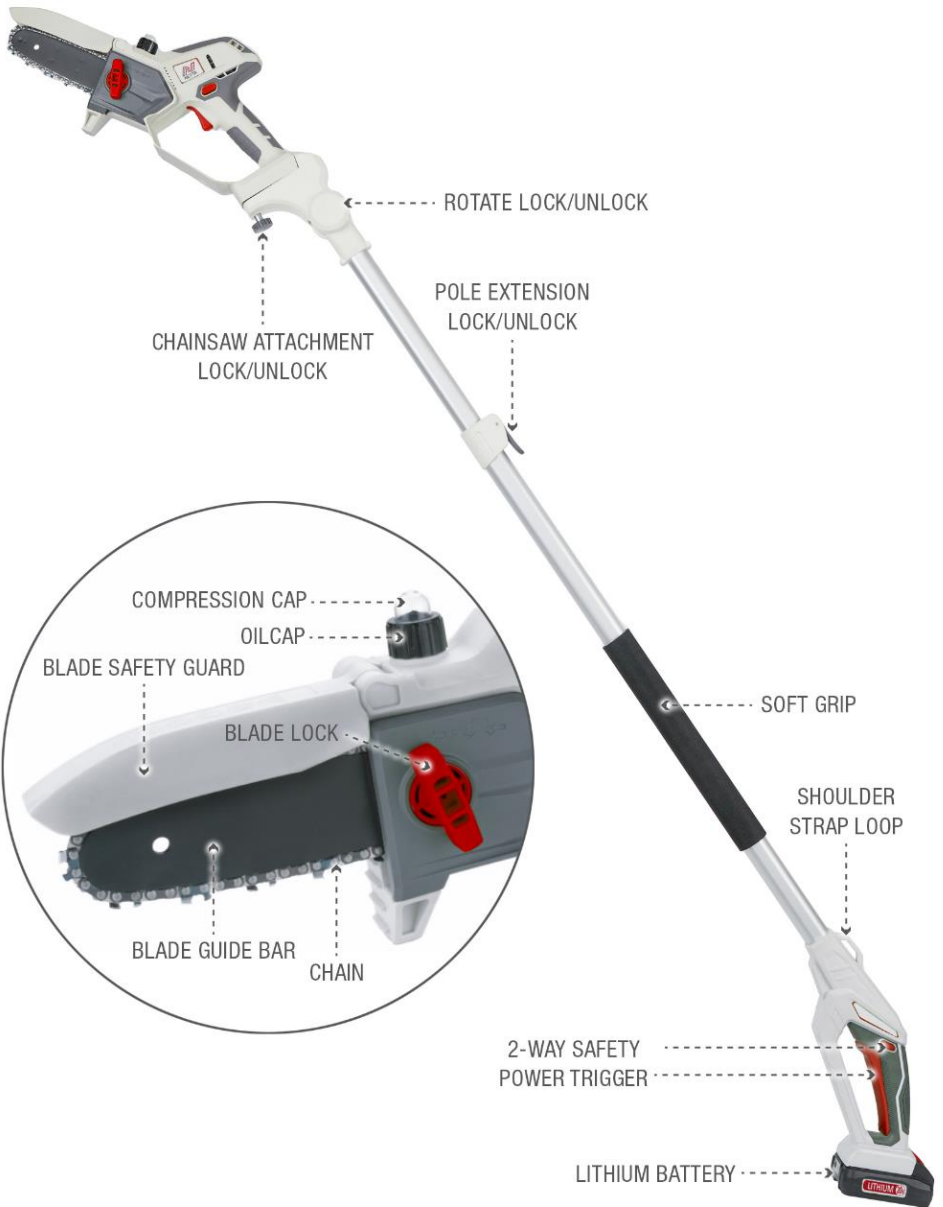

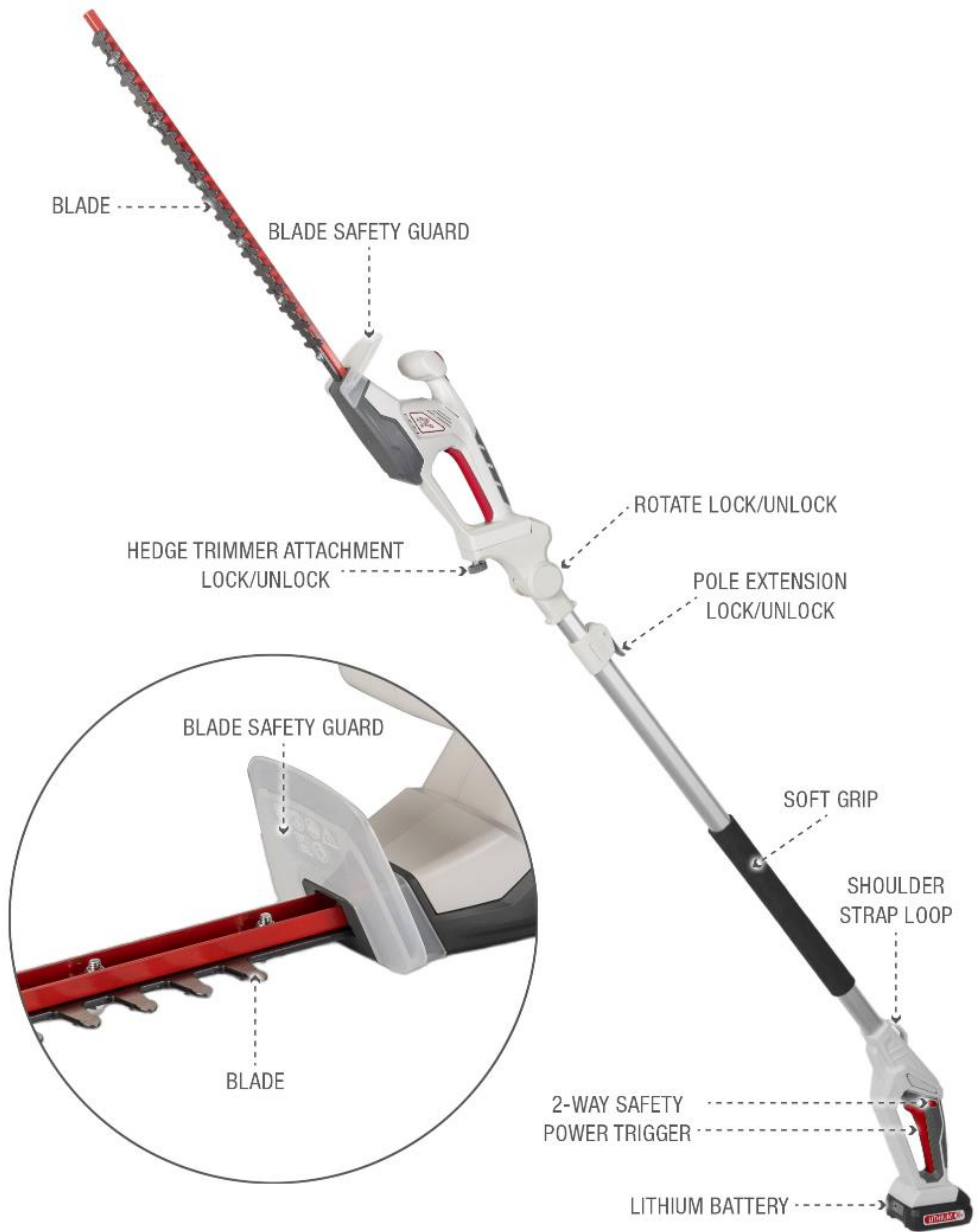

Operating the Product

Filling the Oil Tank

The product is not filled with oil. It is essential to fill the product with oil before using it. Never operate the product without chain oil or with an empty oil tank, as this will result in extensive damage to the product.

1. Take off the oil cap and put the lubrication oil into the oil tank until the oil level up to the 'MAX.' line.
2. Re-attach the oil cap and press the compression cap continuously 3 or 4 times before first use. During the operation, press the cap once or twice after every 5 cuts to make sure the chain is being continuously lubricated.

Installing or Removing the Battery Pack

To install the battery pack, align the grooves on both sides of the battery pack with the slots in the housing, and slide it into place. Insert it all the way until it locks in place with a click sound. Failure to do so may cause injury to you or someone around you.

To remove the battery pack, press the red button on the end of the battery pack, and then remove the battery pack from the tool.

Warning! The battery cannot be charged immediately after use, it should be left to cool down for a period of time (min.30 minutes). The LED lights on the charger switching from green to red mean the battery can be charged.

Cutting Precautions

- Operators must concentrate on the work, otherwise they may trip or fall, leading to serious injury.
- Keep calm and work with a plan.
- Do not use the chain saw in dim areas with low visibility.
- Do not hold the chain saw above your shoulder height during operation.
- Beware of obstacles.

- While operating the chain saw, keep your balance and maintain a proper posture.
- If the workpiece is in an elevated position, use a lift or safe scaffolding.
- Do not touch the saw chain when it is in motion.
- During operation, the temperature of the chain will increase. If the chain cannot be effectively cooled and re-tensioned, the chain may eject from the guide bar and break. This can cause serious injury and property damage.
- Ensure that the chain is properly lubricated.
- Check whether the chain is properly tensioned during operation. If the chain is not properly tensioned, adjust it.
- If the chain saw starts abnormally and runs abnormally, the chain saw may not be safe to use and can cause serious personal injury or property damage.
- Stop working and contact the supplier.
- The chain saw vibrates when it is running. Wear gloves. Take frequent breaks. If the operator suffers from a physical condition, consult a doctor.
- If the running chain hits a hard object, sparks will be generated. Sparks can cause a fire in an area with combustible materials. This can cause serious injury and property damage. Do not use the chain saw in an area with combustible materials.
- The chain saw will continue running for a short while after the trigger is released and can cause serious injury.
- Before touching the chain, the operator must make sure that the chain saw has stopped moving completely.

Warning: If the tree is under tension, the guide bar may be pinched. The user will lose control of the chain saw, resulting in serious injury. (Fig. 1)

- First cut a force-relief groove from the tight side (1), and then cut into the loose side (2).

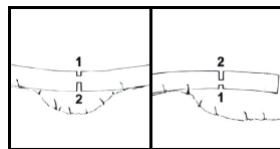


Fig. 1

Pruning Precautions

- If the branches under a fallen tree are pruned first, the trunk will not be supported by the branches and may roll, causing serious or fatal injuries.

- Turn the main trunk over and then trim the branches on it.
- Do not stand on the log for trimming operations.
- Do not stand directly underneath a branch that is being cut.

Kickback Warning (Fig. 2)

The following conditions may cause kickback of the chainsaw:

- During operation, the chain saw stops running suddenly due to jamming.
- During operation, the guide bar head touches any object.

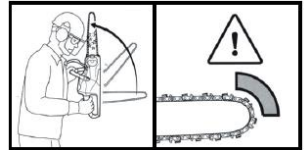


Fig. 2

Warning: If the running chain saw touches a hard object and is clamped, the operator will lose control of the chain saw, causing serious or fatal injury.

- Grasp the chain saw handle with both hands.
- Operate the chain saw as described in the manual.
- Keep the guide bar stable when cutting.
- Use full speed when cutting.

Pre-Operation Check

- Ensure that the following parts and accessories are intact and safe to use:
 - Chain saw body
 - Guide bar
 - Chain
 - Battery pack
 - Charger
- Check the battery pack.
- Ensure that the battery pack is fully charged.
- Ensure that the chain saw is clean.
- Install the guide bar and the chain.
- Check the tension of the chain.


Operating Instructions

Warning: If kickback occurs, the guide bar will bounce towards the operator, which may cause serious or fatal injuries.


- Grasp the chain saw handle with both hands.
- Always cut at full speed.
- Do not cut with the head of the guide bar.
- When starting to cut, operate the chain saw at full speed and keep the guide bar vertical.

Converting into Pole Chainsaw or Hedge Trimmer

1. Place the mini chainsaw or hedge trimmer on a suitable, flat surface and remove the battery from the machine.
2. Align and insert the extension pole into the saw or hedge trimmer. Slide the extension pole handle downwards to the rear of the machine. Make sure the extension pole is locked into position securely before operating.

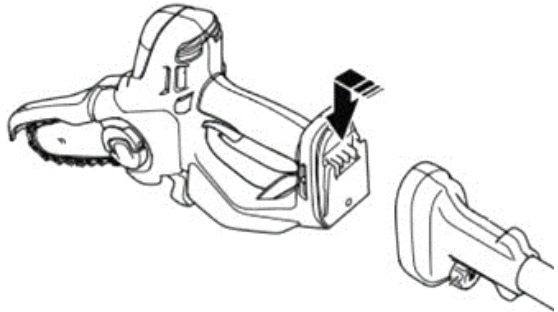

3. Insert the battery into the rear of the extension pole.

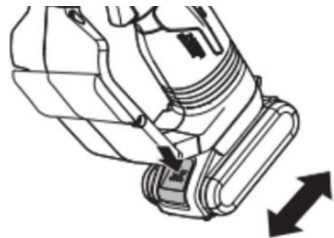

Cleaning, Maintenance and Storage

- If the battery pack is not disconnected from the tool during cleaning, maintenance and repair, the chain saw may start suddenly, leading to serious injury and/or property damage.

- Cut off the power supply.
- Remove the guide bar and the chain.

- Corrosive cleaning agents, high-pressure cleaning equipment or sharp cleaning tools may damage the chain saw, guide bar, chain, battery pack and charger. If the chain saw, guide bar, chain, battery pack and charger are not cleaned properly, do not function properly, or the safety device does not work, serious injury may result.

- Clean the guide bar and chain, according to the instructions.

- If the chain saw, guide bar, chain, battery pack and charger are not maintained properly, the parts may fail to perform as intended, leading to serious injury.

- Do not try to maintain or repair the chain saw, battery pack and charger on your own.

- If the chain saw, battery pack and charger require maintenance: contact the supplier.

- Maintain the guide bar and chain as described in the manual.

- When cleaning and maintaining the chain saw, the user may be cut by the sharp edges of the teeth.

- Wear cut-resistant gloves.

Maintenance of the guide bar

- If there are burrs on the edge of the guide bar groove, polish it.

Chain Sharpening

- In order to sharpen the chain, use a special round file that is made specifically for sharpening chains. Do not use ordinary round files.
- The saw teeth should only be polished with forward movement.

Ensure that the file does not touch the teeth when retracting it backwards. Sharpen the shortest tooth first. The length of the tooth is used as the reference size of other teeth on the chain:

- The round file blade must match the chain pitch.
- The teeth must be sharpened from inside out.
- Grind in one direction according to the angle of the teeth.
- Maintain the angle of the cutting edge of the teeth.
- Sharpen the small teeth according to the depth of the guide bar groove.

Cleaning the guide bar and the chain

1. Turn off the chain saw and cut off the power supply.
2. Remove the guide bar and the chain.
3. Clean the guide bar and the chain with a soft brush.
4. Install the guide bar and the chain.

Spare Parts and Repairs

To order replacement parts, please go to www.nettadirect.com/parts.

You will need PDC information from your product, user manual or carton box. Alternatively, go to our website and use the search bar to find the parts available.

You can also find this code on the [back of this User Manual](#).

For our Repair Service, please contact our customer support via email at support@nettadirect.com. They will provide you with more details of the repair service offered by NETTA.

Disposal of Product

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

DISPOSAL:

Please dispose of this product responsibly. This item cannot be disposed of in general waste. Please contact your local council authority for more information on how to dispose this product. If this product is disposed of with general waste, it will end up in a landfill and will leak hazardous substances into the groundwater – effecting our food chain.



Your Warranty

If you purchased with NETTADIRECT, or one of our authorised resellers, you will automatically enrol your warranty for 1 (ONE) year. You do not need to register again for your warranty. All warranties will be carried out our terms and conditions, including warranty conditions, which you can find out from our website at www.nettadirect.com.

Copyrights

NETTA and its logo including images and contents in this manual and website is copyrighted. All intellectual property rights belong to NETTA owner CONSUMABLE DIRECT LIMITED.

ANY UNAUTHORISED USE, MODIFICATION or DISTRIBUTION of the NETTA logo, website image, and its contents (from website, manuals) will violate worldwide copyright, trademark and associated laws.

We reserve the right to proceed with lawsuits to anyone who is found breaching our copyrights policy. For more details, please check our website copyright policy for more information.

Product Dependency Code (PDC)

Your PDC is below:

PDC: M0L-KT03-18&M0E-KT07-18
SKU: 104110

NETTA is a registered trademark of CONSUMABLE DIRECT LIMITED.
Product Produced for CONSUMABLE DIRECT LIMITED M30 0QF U.K.