

3000W LEAF BLOWER



**RATED
POWER**
3000W

VOLTAGE
230V-240V

**MULCHING
RATE**
10 : 1

**NO-LOAD
SPEED**
13500/MIN

Thank you for purchasing this NETTA product.

Please read the user manual carefully before operating this appliance.

We will update our instruction manuals if necessary.

For the most up-to-date user manual, please visit our official website:
www.nettdirect.com.

You can download a copy of up to date user manuals at any time in electronic format. We do not supply you with a paper-based user manual after each revision.

Require a larger version of this Instruction Manual?

Please download electronically from our website and use PDF reader on your device to enlarge the text if needed.

www.nettdirect.com

SAFETY & WARNINGS

INTENDED USE

NETTA design is for use in residential and private areas. It is not for use in public parks, sports grounds, agriculture, or forestry. Failure to use this product as intended will void the warranty.

REGULAR CHECKUPS

- Check cables every time before plugging into a socket, make sure power cables are not burst or snapped and that the power-plug has no damage.
- Check all the knobs are functioning correctly.

GENERAL CAUTIONS

- Always follow this instruction manual and go through all the safety checks.
- This is not toy - do not let children play with it.
- **DO NOT** modify this product in any way.
- Keep work areas clean and well lit.
- Do not operate tools in explosive atmospheres.
- Before using an electric powered appliance, check the rating label and voltage information on this manual, or the rating label on back of the machine.
- Always connect the device to a socket with Residual Current Device (RCD) fitted with your home circuits.
- If you are unsure, please seek a certified election for advice.
- The appliance must not be immersed in liquid.
- Do not use power tools in wet or damp conditions.
- Do not overload your power tools. Match each tool to the task.
- Do not use any power tool if the on/off switch is damaged.
- Check that the moving parts of your tool operate smoothly and are not cracked or damaged.

RISK OF PERSONAL INJURY

- DO NOT use the appliance other than for the intended use.
- Use personal protective equipment. Always use eye protection.
- Use ear protection.
- Do not wrap the device in a cloth or other material to suppress noise. This will hinder the proper ventilation of the device. This could ignite a fire and cause burns.
- Wear soft gloves when using this tool to prevent discomfort.
- Hold the power tool firmly to reduce the vibration levels.
- Ensure the switch is in the off position before connecting to a power source, picking up or carrying the tool.
- Remove any adjusting keys or wrenches before turning the tool on.
- Do not overreach. Keep proper balance at all times.
- Do not wear loose clothing or jewellery.
- Take a break if you feel vibration-related discomfort.
- DO NOT operate any appliance with a damaged cord or plug or after the appliance malfunctions or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
- If the supply cord is damaged it must be replaced by the manufacturer or an authorized service agent or a qualified technician in order to avoid a hazard.
- The use of accessories is not recommended by the manufacturer as they may cause injuries to persons.
- Do not let the cord hang over the edge of a table or counter or touch a hot surface.
- Do not place on or near a hot gas or electric burner or in a heated oven.
- Unplug from outlet when not in use and before cleaning.

OVERVIEW



OPERATING THE PRODUCT

Note: The tube comes in two halves. One half of the tube is inside the other half of the tube.

Pull them apart using some force. Then connect them together and attach to the machine as shown on the previous page.

Turning the Product On/Off

Push the Main Switch button into the ON position and the appliance will start running.

To turn the product off, push the Main Switch into the OFF position.

Using the Product

1. Before blowing, loosen leaves that are stuck to the ground using a broom or rake.
2. Hold the tube approximately 10cm above the ground and slowly walk forward using a sweeping motion from side to side.
3. Direct the air away from yourself or other people.
4. Ensure that you do not collect any heavy items and hurt someone or damage something.

CLEANING & STORAGE

Cleaning

- Ensure the product is switched off, cooled down and disconnected from the power supply before cleaning.
- Clean the product with a damp cloth and mild soap. Use a brush for the harder to reach areas.
- Ensure the air vents are clean and unblocked.
- Check the product for damage before and after every use. Please contact support@nettadirect.com if you notice any damage.
- If the power cord is damaged in any manner, please contact support@nettadirect.com.

Storage

- Store this product in a dry place.
- Always store this product out of the reach of children.
- Store this product between 10°C and 30°C.
- Store this product in its original packaging or cover it with a suitable cloth to protect it against dust.
- Always carry the product with its handles.
- If transporting this item, protect it from heavy impact or strong vibrations which may occur in vehicles.
- Secure the product to prevent it falling over.

Spare Parts and Repairs

To order replacement parts, please go to www.nettadirect.com/parts.

You will need PDC information from your product, user manual or carton box. Alternatively, go to our website and use search bar to find the parts available.

You can also find this code on the [back of this User Manual](#).

For our Repair Service, please contact our customer support by emailing support@nettadirect.com.

Disposal of the Product

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

DISPOSAL:

Please dispose of this product responsibly. This item cannot be disposed of with general waste. Please contact your local council authority for more information on how to dispose this product. If this product is disposed of with general waste, it will end up in a landfill and will leak hazardous substances into the groundwater – effecting our food chain.



Your Warranty

If you purchased with NETTADIRECT, or one of our authorised resellers, you will automatically enrol your warranty for 1 (ONE) year.

You do not need to register again for your warranty. All warranties will be carried out to our terms and conditions including warranty conditions which you can find from our website at www.nettadirect.com.

PLEASE NOTE: Consumable parts will not be covered by warranty. If a consumable part needs replacing, you need purchase separately from our website.

Please quote with your original proof of purchase (invoice) and name or delivery address, postcode, so we can locate you when you contact us for warranty.

Copyrights

NETTA and its logo including images and contents in this manual and website is copyrighted. All intellectual property rights belong to NETTA owner CONSUMABLE DIRECT LIMITED.

ANY UNAUTHORISED USE, MODIFICATION or DISTRIBUTION of the NETTA logo, website image, and its contents (from website, manuals) will violate worldwide copyright, trademark, and associated laws.

We reserve the right to proceed with lawsuits to anyone who is found breaching our copyrights policy. For more details, please check our website copyright policy for more information.

Product Dependency Code (PDC)

Your PDC is below:

PDC: BV-12EG-3000A
SKU: 103701

NETTA is a registered trademark of CONSUMABLE DIRECT LIMITED.
Product Produced for CONSUMABLE DIRECT LIMITED M30 0QF U.K.