

350W ORBITAL SANDER



**RATED
POWER**
350W

VOLTAGE
230V

FREQUENCY
50 Hz

**NO-LOAD
SPEED**
5000-
12000/min

EN USER INSTRUCTION & OPERATION MANUAL
ES MANUAL DE INSTRUCCIONES Y OPERACIONES PARA EL
USUARIO
DE BENUTZERANLEITUNG & BETRIEBSANLEITUNG
FR MANUEL D'UTILISATION ET D'UTILISATION
IT ISTRUZIONI PER L'USO E MANUALE OPERATIVO

EN

Thank you for purchasing this NETTA product.

Please read the user manual carefully before operating this appliance.

We will update our instruction manuals if necessary.

For the most up-to-date user manual, please visit our official website:
www.nettdirect.com.

You can download a copy of up to date user manuals at any time in electronic format. We do not supply you with a paper-based user manual after each revision.

Require a larger version of this Instruction Manual?

Please download electronically from
our website and use PDF reader on
your device to enlarge the text if
needed.

www.nettdirect.com

SAFETY & WARNINGS

INTENDED USE

NETTA Design is for domestic and indoor use only. This product is not intended for use by people who have lack of experience and knowledge or have reduced ability, or sensory and metal capabilities. Keep supervised when groups of people use this item.

REGULAR CHECKUPS

- Check cables every time before plugging into a socket, make sure power cables are not burst or snapped and that the power-plug has no damage.
- Check all the knobs are functioning correctly.

GENERAL CAUTIONS

- Always follow this instruction manual and go through all the safety checks.
- This is not toy - do not let children play with it.
- **DO NOT** modify this product in any way.
- Keep work areas clean and well lit.
- Do not operate tools in explosive atmospheres.
- Before using an electric powered appliance, check the rating label and voltage information on this manual, or the rating label on back of the machine.
- This product wattage is **350W**, ensure this device is connected to a power socket.
- Always connect the device to a socket with Residual Current Device (RCD) fitted with your home circuits.
- If you are unsure, please seek a certified election for advice.
- The appliance must not be immersed in liquid.
- Do not use power tools in wet or damp conditions.
- Do not overload your power tools. Match each tool to the task.
- Do not use any power tool if the on/off switch is damaged.
- Check that the moving parts of your tool operate smoothly and are not cracked or damaged.

RISK OF PERSONAL INJURY

- DO NOT use the appliance other than for the intended use.
- Use personal protective equipment. Always use eye protection.
- Use ear protection.
- Do not wrap the device in a cloth or other material to suppress noise. This will hinder the proper ventilation of the device. This could ignite a fire and cause burns.
- Wear soft gloves when using this tool to prevent discomfort.
- Hold the power tool firmly to reduce the vibration levels.
- Ensure the switch is in the off position before connecting to a power source, picking up or carrying the tool.
- Remove any adjusting keys or wrenches before turning the tool on.
- Do not overreach. Keep proper balance at all times.
- Do not wear loose clothing or jewellery.
- Take a break if you feel vibration-related discomfort.
- DO NOT operate any appliance with a damaged cord or plug or after the appliance malfunctions or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
- If the supply cord is damaged it must be replaced by the manufacturer or an authorized service agent or a qualified technician in order to avoid a hazard.
- The use of accessories is not recommended by the manufacturer as they may cause injuries to persons.
- Do not let the cord hang over the edge of a table or counter or touch a hot surface.
- Do not place on or near a hot gas or electric burner or in a heated oven.
- Unplug from outlet when not in use and before cleaning.

KNOW YOUR PRODUCT



Fig. 1

1, Switch

2, Backing pad

3, Dust Canister

4, Variable speed dial

OPERATING THE PRODUCT

Introduction:

The sander is designed for dry sanding surfaces made of wood, plastic, and/or painted surfaces.

Warning:

1. Do not sand on plaster!
2. Change the sanding paper when it is damaged!

NOTE: Before using the tool, read the instruction book carefully.

To prevent serious injury from accidental operation

Turn the Power Switch of the tool to its "OFF" position and unplug the tool from its electrical outlet before assembling or making any adjustments to the tool.

Attaching the Dust canister

The integral dust extraction system collects sanding dust in canister supplied with your sander. For maximum efficiency, the dust canister should be emptied frequently during operation.

Slide the Dust Canister onto the back of the Sander. Snap it in place using firm pressure, and then rotate it to be locked. (Fig.2)

The collection of the dust will only work if the sandpaper has holes that line up with the 8 dust collection holes in the Backing Pad.



Fig. 2

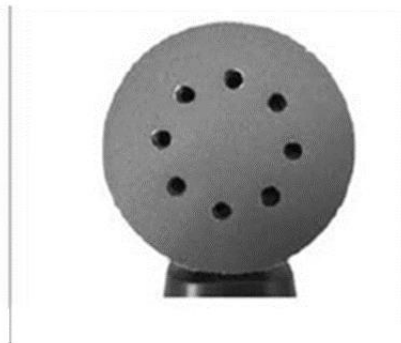


Fig. 3

Attaching Sandpaper to the Backing Pad

The Sanding Disc is attached by Hook and Loop to the Backing Pad. Place the Sanding Disc on the Backing Pad lining up the 8 holes so that the dust can be collected into the Dust Canister. (Fig.3)

Before connecting your power tool to power supply, always check to be sure switch is not in lock-on position. Failure to do so could result in the accidental starting of your power tool.

Switch On/OFF the Sander

Switch on the sander by pressing down the switch to position “I”. Run the Sander for a few seconds before contacting the workpiece. Contact the workpiece with minimal pressure. If the Sander is not removing enough material, try a grittier piece of sandpaper, if you want to remove a lot of material fast, use a belt sander. Occasionally check the sandpaper for tears, wear, or fraying. Replace if necessary.

When you are finished, switch off the sander by pressing down the switch to position “O”.

Allow the tool to come to a complete stop before setting it down.

To prevent accidents, turn off the tool and disconnect its power supply after use. Clean, and then store the tool indoors out of children’s reach.

Variable Speed with Dial Setting

Your sander is also equipped with a variable speed dial. The sander’s orbital pad speed can be preset from minimum to maximum nameplate OPM by rotating the dial in the housing. The dial may be set on or between any of six positions (1=low through Max.=high).

To prevent serious injury from accidental operation

Turn the Power Switch of the tool to its “OFF” position and unplug the tool from its electrical outlet before performing any inspection, maintenance, or cleaning procedures.

Tool service must be performed only by qualified repair personnel, service or maintenance performed by unqualified personnel could result in a risk of injury. If the tool does not work properly, return the tool to a service facility for repairs.

CLEANING & STORAGE

Correct and regular cleaning will improve the safety and extend the lifespan of the device.

Clean out dust and debris from vents and electrical contacts by blowing with compressed air. **Always wear safety goggles when cleaning tools with compressed air.**

Keep tool handles clean, dry and free of oil or grease.

Use only mild soap and a damp cloth to clean the tool, keeping away from all electrical contacts.

Certain cleaning agents and solvents are harmful to plastics and other insulated parts. Some of these include gasoline, turpentine, lacquer thinner, paint thinner, chlorinated cleaning solvents, ammonia and household detergents containing ammonia.

Never use flammable or combustible solvents around tools.

Tool service must be performed only by qualified repair personnel. Service or maintenance performed by unqualified personnel could result in a risk of injury.

If the tool does not work properly, return the tool to a service facility for repairs.

LUBRICATION

Your tool has been properly lubricated and is ready to use. It is recommended that tools with gears be re-greased with a special gear lubricant at every brush change.

7. SERVICE & MAINTENANCE

Always keep the dust extraction holes in the vibrating plate free of dirt or other obstructions.

Water must never come into contact with the machine.

If the carbon brushes need to be replaced, have this done by a qualified repair person (always replace the two brushes at the same time).

SPARE PARTS/REPAIR

We hope our products will last as long as possible to reduce the build-up of electrical waste in the world.

If any consumable parts need replacing, please check our website for stock availability and purchase.

If our website does not have the parts listed, but you still need consumable parts, please contact our customer support to check availability and process your order.

To order replacement parts, please go to www.nettadirect.com/parts.

You will need PDC information from your product, user manual or carton box. Alternatively, go to our website and use search bar to find the parts available.

You can also find this code on the [back of this User Manual](#).

For our Repair Service, please contact our customer support with email on support@nettadirect.com they will provide with more details of repair service with NETTA.

DISPOSAL OF PRODUCT

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

DISPOSAL:

Please dispose of this product responsibly. This item cannot be disposed of with general waste. Please contact your local council authority for more information on how to dispose this product. If this product is disposed of with general waste, it will end up in a landfill and will leak hazardous substances into the groundwater – effecting our food chain.



YOUR WARRANTY

If you purchased with NETTADIRECT, or one of our authorised resellers, you will automatically enrol your warranty for 1 (ONE) year. You don't need to register again for your warranty. All warranties will be carried out our terms and conditions including warranty conditions you will find out from our website at www.nettadirect.com.

PLEASE NOTE: Consumable parts will not be covered by warranty. If a consumable part needs replacing, you need purchase separately from our website.

Please quote with your original proof of purchase (invoice) and name or delivery address, postcode, so we can locate you when you contact us for warranty.

NOTES:

You may need fill following details after your purchase.

I purchased this product with _____
(Name of Authorised Reseller/Distributor)

Purchase Date: ____/____/____

The order number from Authorised Reseller is:

Initial order delivery address is:

COPYRIGHTS

NETTA and its logo including images and contents in this manual and website is copyrighted. All intellectual property rights belong to NETTA owner CONSUMABLE DIRECT LIMITED.

ANY UNAUTHORISED USE, MODIFICATION or DISTRIBUTION of the NETTA logo, website image, and its contents (from website, manuals) will violate worldwide copyright, trademark and associated laws.

We reserve the right to proceed with lawsuits to anyone who is found breaching our copyrights policy. For more details, please check our website copyright policy for more information.

PRODUCT DEPENDENCY CODE (PDC)

Your PDC is below:

PDC: JD2512
SKU: 103763

NETTA is a registered trademark of CONSUMABLE DIRECT LIMITED.
Product Produced for CONSUMABLE DIRECT LIMITED M30 0QF U.K.

Printed in China