

36/44 INCH TOWER FAN



**RATED
POWER**
60W

TIMER
8 HOURS

OSCILLATION
65 DEGREES

**SPEED
SETTINGS**
THREE

Thank you for purchasing this NETTA product.

Please read the user manual carefully before operating this appliance.

We will update our instruction manuals if necessary.

For the most up-to-date user manual, please visit our official website:
www.nettdirect.com.

You can download a copy of up to date user manuals at any time in electronic format. We do not supply you with a paper-based user manual after each revision.

Require a larger version of this Instruction Manual?

Please download electronically from
our website and use PDF reader on
your device to enlarge the text if
needed.

www.nettdirect.com

SAFETY & WARNINGS...

INTENDED USE

NETTA Design is for domestic and indoor use only. This product is not intended for use by people who have lack of experience and knowledge or have reduced ability, or sensory and metal capabilities.

REGULAR CHECKUPS

Ensure that the power plug and cable are not damaged before using this product.

GENERAL CAUTIONS

- A loose fit between the AC outlet (receptacle) and plug may cause overheating. Contact a qualified electrician to replace a loose or worn outlet.
- Only use on 220-240V AC, 50Hz power supply.
- If the supply cord is damaged, it must be replaced by the manufacturer.
- Cleaning and user maintenance shall not be made by children without supervision.
- Ensure that the fan is switched off from the supply mains before removing the guard.
- Use this fan only as described in this manual.
- The product is intended for household use only and not for commercial, industrial, or outdoor use.
- Close supervision is necessary when the appliance is used by or near children.
- To disconnect the fan, first turn the unit off, grip the plug and pull it from the wall outlet. Never pull the plug by the cord.

 
RISK OF PERSONAL INJURY

- To protect against electric shock, do not place fan on windowsill or allow it to come into any contact with water.
- To reduce the risk of shock, this plug is intended to fit the outlet. If the plug does not fit fully in the outlet, contact a qualified electrician.
- Turn off and unplug the fan from the outlet when not in use, when moving the fan from one location to another, and before cleaning.
- Do not operate the fan in the presence of explosives and/or flammable fumes.
- Do not place the fan or any parts near an open flame, cookers, or other heating appliances.
- Do not operate fan with a damaged cord or plug, or if the product malfunctions, or if dropped or damaged in any manner.
- Avoid contact with moving fan parts.
- The use of attachments not recommended by the manufacturer may be hazardous.
- Place the fan on a dry and level surface.
- Do not hang or mount the fan on a wall or ceiling.
- Do not operate if the fan housing is damaged.

ASSEMBLY INSTRUCTIONS:

WARNING! Do not use this fan before assembling the base.

Base Assembly:

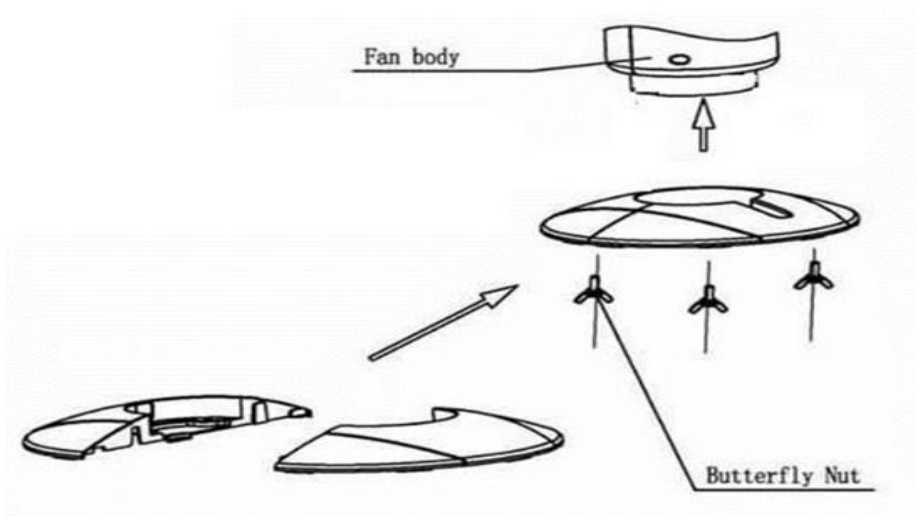

Troubleshooting

Issue	Possible Reason	Solution
No power	<ol style="list-style-type: none"> 1. Power cord is unconnected 2. The There is no power from socket 3. The power switch is not on. 4. The fuse has blown 	<ol style="list-style-type: none"> 1. Connect the power cord 2. Check socket is turned on 3. Turn the unit on 4. Replace the fuse in the plug
Odour emission from unit	<ol style="list-style-type: none"> 1. New unit. When the unit is used for the first time the fan motor may produce an odour which will dissipate within a week of use 	<ol style="list-style-type: none"> 1. No action required
Strong vibrations and noise	<ol style="list-style-type: none"> 1. Fan is not used on a flat surface 2. Fan may be damaged 	<ol style="list-style-type: none"> 1. Place on a flat surface. May put an anti-vibration matt underneath 2. if fan is damaged discontinue use and contact service centre

FAN OPERATION:

Plug into any AC 220-240V, 50Hz source, ensure that the plug and the socket fit well. You can operate the appliance by the control panel or the remote control.

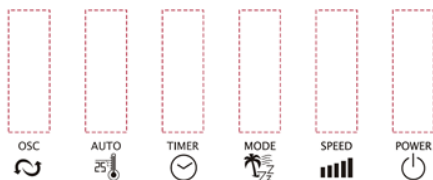 


Fig. 1 – Control Panel

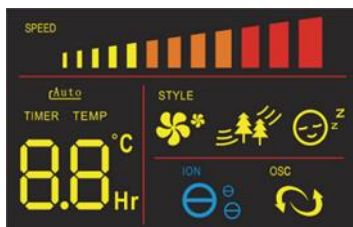 


Fig. 2 – LED Screen

Control Panel:



Press the button once and the fan will turn on. Press again to turn off.



(Remote) Press once to turn on the fan at low speed. Press again to set medium speed. Press again for high speed. Press four times and the fan will turn off.

SPEED



To adjust fan speed, press once for medium and twice for high speed. Press for a third time to return to low fan speed.



Press 'mode' button to select normal, natural or sleep modes.



Normal



Natural



Sleep



Enabling 'auto mode' will automatically switch the fan on if the room reaches above 25°C. If the temperature is lower than this, the motor will stop.



 
Enabling the 'oscillation' button will allow the fan to rotate 65°.



When the fan is in use, press this button to set the timer. Press the button and display will start to show/flash the default time (0 hours). You can increase the timer in 0.5-hour increments. The time will set after 5 seconds.

CLEANING AND STORAGE

- Always unplug the fan before cleaning
- Use only a soft, damp cloth to gently wipe the outer surfaces of the fan clean.
- Ensure that the fan is switched off from the supply mains before removing the guard.
- To clean between the grilles, we recommend using a pipe cleaner, flexible dust wand, vacuum cleaner, or compressed air to gently remove the dust.
- Do not immerse the fan in water and never allow water to drip into the motor housing.
- Do not use gasoline, paint thinner or other chemicals to clean the fan.
- For storage, you may leave the fan assembled and covered to protect it from dust. Store the fan in a cool and dry place.

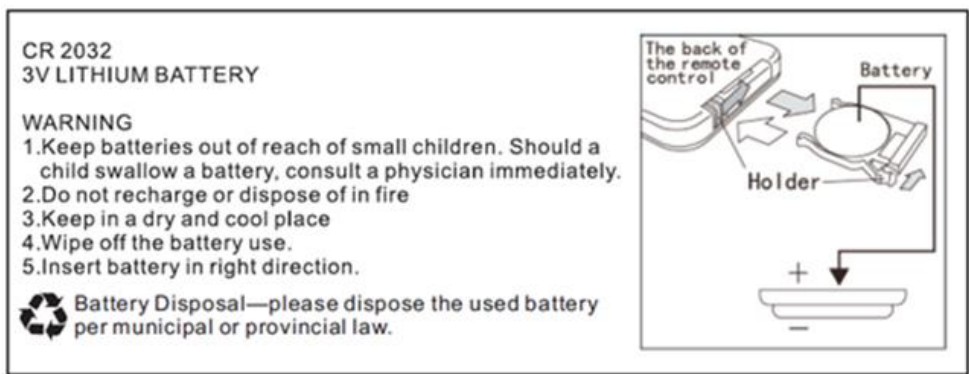

If there is no operation within 60 seconds, the LED screen display will be turned off (the actual output remains the same).

SPARE PARTS/REPAIR

To order replacement parts, please go to www.nettadirect.com/parts.

You will need PDC information from your product, user manual or carton box. Alternatively, go to our website and use search bar to find the parts available.

You can also find this code on the [back of this User Manual](#).

For our Repair Service, please contact our customer support with email on support@nettadirect.com they will provide with more details of repair service with NETTA.

DISPOSAL OF PRODUCT

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

DISPOSAL:

Please dispose of this product responsibly. This item cannot be disposed of with general waste. Please contact your local council authority for more information on how to dispose this product. If this product is disposed of with general waste, it will end up in a landfill and will leak hazardous substances into the groundwater – effecting our food chain.



YOUR WARRANTY

If you purchased with NETTADIRECT, or one of our authorised resellers, you will automatically enrol your warranty for 1 (ONE) year. You do not need to register again for your warranty. All warranties will be carried out to our terms and conditions including warranty conditions which you can find out from our website at www.nettadirect.com.

COPYRIGHTS

NETTA and its logo including images and contents in this manual and website is copyrighted. All intellectual property rights belong to NETTA owner CONSUMABLE DIRECT LIMITED.

ANY UNAUTHORISED USE, MODIFICATION or DISTRIBUTION of the NETTA logo, website image, and its contents (from website, manuals) will violate worldwide copyright, trademark, and associated laws.

We reserve the right to proceed with lawsuits to anyone who is found breaching our copyrights policy. For more details, please check our website copyright policy for more information.

PRODUCT DEPENDENCY CODE (PDC)

Your PDC is below:

PDC: FTF36-LED
SKU: 103790/103896/103969/103970

NETTA is a registered trademark of CONSUMABLE DIRECT LIMITED.
Product Produced for CONSUMABLE DIRECT LIMITED M30 0QF U.K.