

3 IN 1 HAND BLENDER



RATED POWER
600W

SPEEDS
FIVE

ANTI-SPLASH
BLADE COVER

STAINLESS
STEEL
BLADES

Thank you for purchasing this NETTA product.

Please read the user manual carefully before operating this appliance.

We will update our instruction manuals if necessary.

For the most up-to-date user manual, please visit our official website: www.nettdirect.com.

You can download a copy of up-to-date user manuals at any time in electronic format. We do not supply you with a paper-based user manual after each revision.

**Require a larger version of this
Instruction Manual?**

**Please download electronically
from our website and use PDF
reader on your device to enlarge
the text if needed.**

www.nettdirect.com

Safety and Warnings

Intended Use

NETTA Design is for domestic and indoor use only. This product is not intended for use by people who have lack of experience and knowledge or have reduced ability, or sensory and mental capabilities.

Regular Check-Ups

Ensure the power cable and plug are not damaged before plugging into a socket.

Check all the knobs are functioning correctly.

General Warnings

- Read all instructions.
- Check the voltage of the wall outlet corresponds with the one shown on the rating plate.
- Do not use this product if it has a damaged cord or plug, or after the appliance is dropped or damaged in any manner. If the supply cord is damaged it must be replaced by the manufacturer.
- Always disconnect the blender from the supply if it is left unattended and before assembling, disassembling, or cleaning.
- Do not let the cord hang over the edge of a table or surface.
- Do not immerse the upper part of the blender into water and this may cause electric shock.
- Close supervision is needed when the appliance is being used around children.
- The metal blades are extremely sharp. Please handle with care.

Risk of Personal Injury

- Avoid contact with moving parts. Keep hands and utensils out of the container whilst blending to reduce the risk of injury or damage to the blender.
- This appliance should not be used for chopping ice or blending hard and dry substances as this may blunt the blade.
- To reduce the risk of injury, never place the cutting blade on the base without first putting the bowl properly in place.
- Be sure the chopper lid is securely locked in place before operation begins.
- Do not use accessories not recommended by the manufacturer as this may result in personal injury.
- Do not operate the appliance for anything other than its intended use.
- Children should not play with the appliance.
- Before removing the lid from the jar, release the button and unplug the appliance, wait until the blades have come to a complete stop.
- Always remove the blade assembly before pouring contents from the jar.
- Ensure you switch off the appliance after each use. Make sure the motor stops completely before disassembling.
- Always hold the blade stem instead of the cutting edge when handling and cleaning the blade.

Diagram of the Product

To blend fruit and vegetables:


 
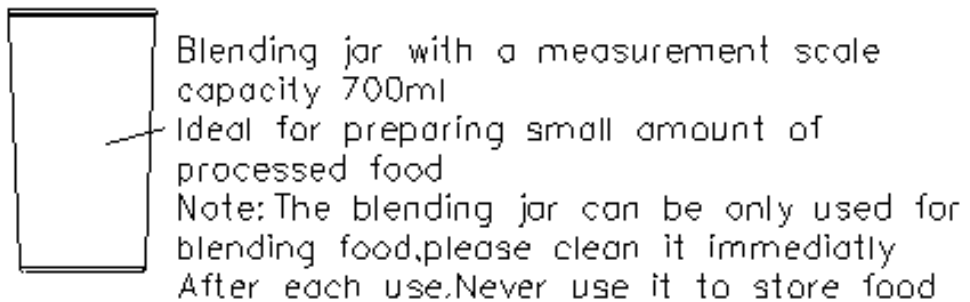 



Diagram of the Product

 To chop meat:

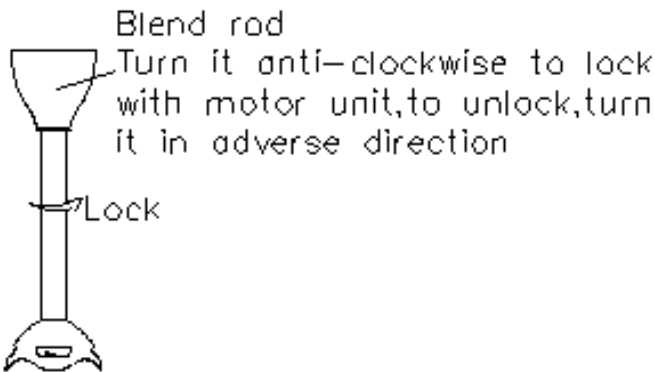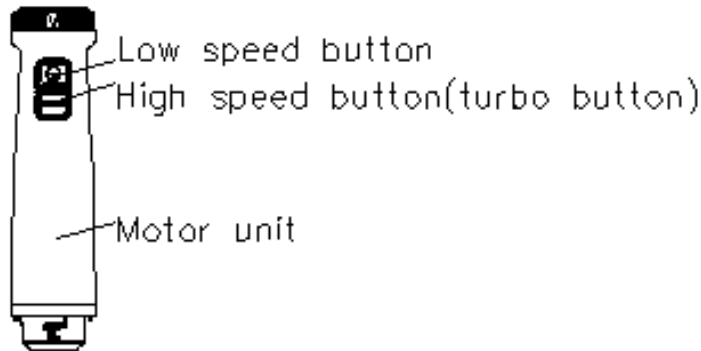


Motor unit


Insert the motor unit into the hole of the chopper lid

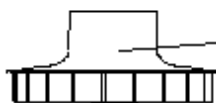

chopper lid

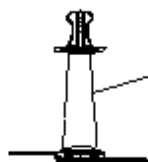

knife blade (As the blade is very sharp, handle with care to avoid any injury)

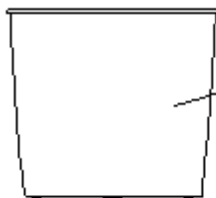

Jar (Ideal for preparing small amount of chopped carrot or meat)

Note: The jar can be only used for blending food, please clean it immediately after each use. Never use it to store food

Diagram of the Product

To whisk/mix:



Motor unit



Lock



whisk(Ideal for whisking egg white)

Turn it anti-clockwise to lock with motor unit,to unlock,turn it in adverse direction



Blending jar with a measurement scale
capacity 700ml

Ideal for preparing small amount of
processed food

Note: The blending jar can be only used for blending
food, please clean it immediatly

After each use. Never use it to store food

Operating the Product

Blender:


- The maximum operation time per use should be less than 1 minute, giving a 3-minute rest time between two consecutive cycles.
- To assemble the detachable shaft with the motor unit, turn the shaft in an anti-clockwise direction until tightened. To disassemble, turn clockwise.
- To use, simply plug the hand blender into a power outlet.
- Lower the blender into the food and then press and hold the low or high-speed button to start operating.
- You can stop the hand blender by releasing the button.

Chopper:

- Maximum operation time per use should be less than 1 minute, giving a 3-minute rest time between two consecutive cycles.

- Place the chopper bowl on a clean and level surface.

- Assemble the chopping blade into the chopper bowl as shown in the figure.

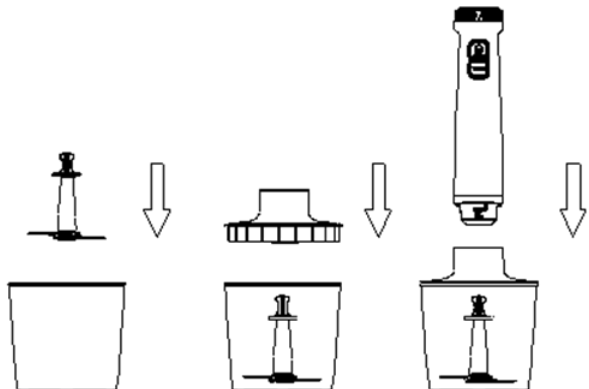

- Place the food into the chopping bowl.
- For meat, remove the bones of the meat, cut into small pieces and then place the meat into the bowl. Do not exceed 200g of meat per blend.
- Attach the lid onto the chopper bowl by pressing it down. Detach the lid by lifting it up.
- Insert the motor unit into the hole of the chopper lid.
- Lower the handheld motor into the food and then press and hold the low or high-speed button.
- You can stop the blending by releasing the button.
- When finished, unplug from the power outlet, and then remove the motor unit from the chopper lid by turning it anti-clockwise.
- Open the chopper lid by turning it anti-clockwise and remove the chopped food.

CAUTION:

- To reduce the risk of injury, never place the cutting blade on the base without first putting the bowl properly in place.
- Be sure the chopper lid is securely locked in place before operating.
- During operating or after chopping, you should disassemble the motor unit from the chopper lid first and then remove the chopper lid. Never remove the chopper lid with the motor unit still in place.

Whisk/Beater:

- The maximum operation time per use should be less than 2 minutes, giving a 3-minute rest time between two consecutive cycles.
- To assemble, turn the whisk anti-clockwise into the motor unit until tightened. To disassemble, turn it clockwise.
- Plug the hand blender into the mains.
- Place the food (e.g., egg whites) into the cup and lower the blender into the food.
- Press and hold the low or high-speed button to start operating and release when finished.

Cleaning, Maintenance and Storage

- Unplug the appliance and remove the detachable stem.
- Do not immerse the detachable stem of the blender in water as the lubrication on the bearings may wash away over time.
- Wash the detachable stem under running water without the use of abrasive cleaner or detergents. After you have finished cleaning the detachable stem, place it upright so that any water which may have got in can drain out.
- Wash the cup, bowl, beater, and blade in warm soapy water. The bowl and beater are not recommended to be washed in a dishwasher as the plastic components deteriorate over time.
- Wipe the motor unit with a damp cloth. Never immerse it in water for cleaning as an electric shock may occur.
- Dry thoroughly.
- Take care when handling the sharp blades.
- For quick cleaning between tasks, hold the blender in a cup half filled with water and turn on for a few seconds.

Spare Parts and Repairs

To order replacement parts, please go to www.nettadirect.com/parts.

You will need PDC information from your product, user manual or carton box. Alternatively, go to our website and use search bar to find the parts available.

You can also find this code on the [back of this User Manual](#).

For our Repair Service, please contact our customer support with email on support@nettadirect.com they will provide with more details of repair service with NETTA.

Disposal of Product

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

DISPOSAL:

Please dispose of this product responsibly. This item cannot be disposed of with general waste. Please contact your local council authority for more information on how to dispose this product. If this product is disposed of with general waste, it will end up in a landfill and will leak hazardous substances into the groundwater – effecting our food chain.



Your Warranty

If you purchased with NETTADIRECT, or one of our authorised resellers, you will automatically enrol your warranty for 1 (ONE) year. You do not need to register again for your warranty. All warranties will be carried out to our terms and conditions including warranty conditions you will find out from our website at www.nettadirect.com.

Copyrights

NETTA and its logo including images and contents in this manual and website is copyrighted. All intellectual property rights belong to NETTA owner CONSUMABLE DIRECT LIMITED.

ANY UNAUTHORISED USE, MODIFICATION or DISTRIBUTION of the NETTA logo, website image, and its contents (from website, manuals) will violate worldwide copyright, trademark and associated laws.

We reserve the right to proceed with lawsuits to anyone who is found breaching our copyrights policy. For more details, please check our website copyright policy for more information.

Product Dependency Code (PDC)

Your PDC is below:

PDC: HB5001G-GS
SKU: 103463

NETTA is a registered trademark of CONSUMABLE DIRECT LIMITED.
Product Produced for CONSUMABLE DIRECT LIMITED M30 0QF U.K.