


4.2L DIGITAL AIR FRYER

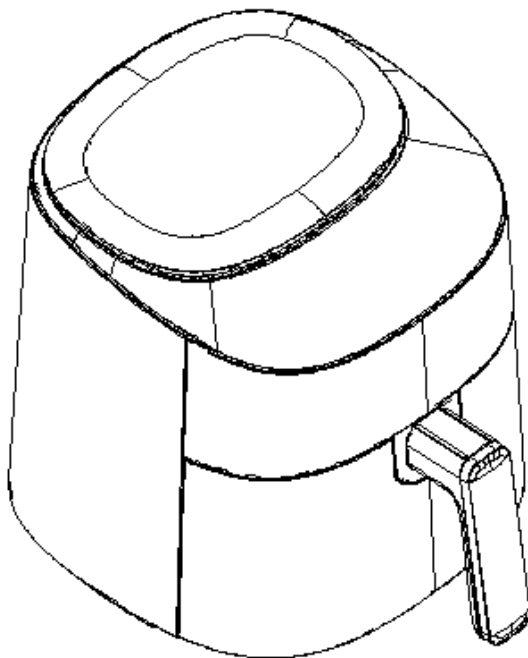

RATED POWER
1300W

TEMPERATURE
80-220°C

TIMER
1-60 min

**DISHWASHER
SAFE**

Thank you for purchasing this NETTA product.

Please read the user manual carefully before operating this appliance.

We will update our instruction manuals if necessary.

For the most up-to-date user manual, please visit our official website: www.nettdirect.com.

You can download a copy of up-to-date user manuals at any time in electronic format. We do not supply you with a paper-based user manual after each revision.

**Require a larger version of this
Instruction Manual?**

**Please download electronically
from our website and use PDF
reader on your device to enlarge
the text if needed.**

www.nettdirect.com

Safety and Warnings

Intended Use

NETTA Design is for domestic and indoor use only. This product is not intended for use by people who have lack of experience and knowledge or have reduced ability, or sensory and mental capabilities.

Regular Check-Ups

Ensure the power cable and plug are not damaged before plugging into a socket.

Check all the knobs are functioning correctly.

General Warnings

Always follow basic precautions before using the electrical appliance:

1. Read all instructions.
2. Before use check that the wall outlet voltage corresponds to the one shown on the rating plate.
3. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner.
4. If the supply cord is damaged it must be replaced by the manufacturer, an authorized service agent or a qualified technician in order to avoid a hazard.
5. The use of accessories not recommended by the manufacturer as this may cause injuries.
6. Do not touch the hot surface. Use the handle or the buttons.
7. Do not use the appliance for anything other than its intended use.
8. Do not let the cord hang over any table or counter edges or touch any hot surfaces.
9. Do not place on or near hot gas, an electric burner or in a heated oven.

General Warnings

10. Do not leave the appliance unsupervised when it is being operated.
11. Children should do not play with the appliance.
12. The appliance must not be immersed in liquid.
13. Unplug from the outlet when not in use and before cleaning. Allow to cool down before putting on or taking off parts, or before cleaning the appliance.
14. To prevent fires, do not place the appliance close to flammable materials such as curtains. Do not place anything above the appliance.
15. Make sure all paper, cardboard and plastic has been removed before frying food.
16. Place non-plastic coasters or placemats between the appliance and the worktop to avoid any permanent blemishes or stains.
17. The appliances are not intended to be operated by means of an external timer or separate remote-control system.
18. This appliance shall not be used by children of ages 0 to 16. This appliance can be used by children aged 16 years and older if they are continuously supervised. Cleaning and user maintenance shall not be performed by children.
19. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices, and other working environments
 - farmhouses
 - by clients in hotels, motels, and other residential type environments
20. Only connect the appliance to an earthed wall socket. Always make sure that the plug is inserted into the wall socket properly

21. Do not place the appliance against a wall or against other appliances. Leave at least 10 cm free space on the back and sides and 10 cm free space above the appliance. Do not place anything on top of the appliance.

22. During hot air frying, hot steam is released through the air outlet openings. Keep your hands and face at a safe distance from the steam and from the air outlet openings. Also be careful of hot steam and air when you remove the pan from the appliance. The accessible surfaces may become hot during use.

23. Do not place the appliance on or near a hot gas stove or all kinds of electric stove and electric cooking plates, or in a heated oven


24. Save these instructions.

Before Using for the First Time

- The air fryer is shipped with the frying drawer inside the body of the air fryer. Firmly grasp the handle of the drawer to remove the drawer from the appliance and place on a flat, clean work surface.
- Remove all packaging materials and labels from inside and outside of the air fryer. Ensure that there is no packaging underneath and around the fryer drawer.
- Wash the frying drawer and shelf in hot, soapy water.
- **Do not immerse the air fryer body in water.**
- To clean the body of the air fryer, wipe with a damp cloth. Ensure all parts are dried thoroughly.
- The frying drawer is now ready for food to be added.
- **During first use, the air fryer may emit a slight odour. This is normal.**

Operating the Product

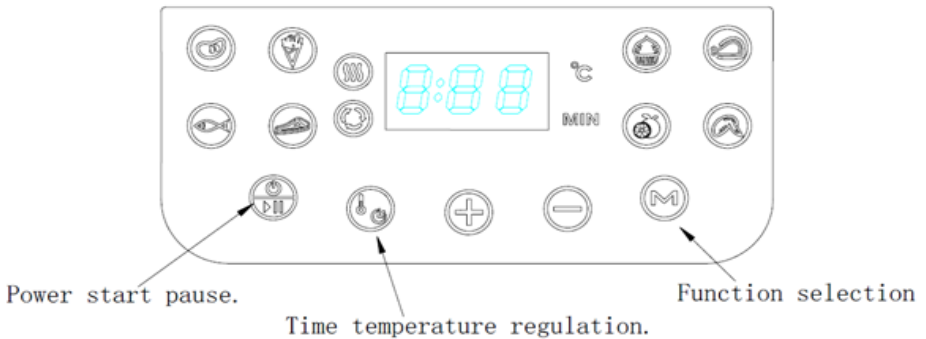


Using the control panel








Operating the Product





The appliance has two operating modes including “**Default mode**” and “**Custom mode**”.

1. Default mode

Connect the appliance to the power source, press the Power button “” and the appliance enters into the “Default mode”, then press the function selection button “” to select your desired function, and the icon of selected function will light up. Then press the Start/Stop button “” and the appliance will start working according to the selected function.

2. Custom mode

Connect the appliance to the power source, press the Power button “” and then press the function selection button “” to select your desired function. Then press the Temperature/Time button “”. When the display shows “00:00”, press “” or “” to adjust the temperature. After you finish setting the temperature, press

Temperature/Time button “” again to enter into the time-setting mode, then press “” or “” to adjust the time. After you have finished setting the time, press the Start/Stop button “” and the appliance will start working according to the selected function with new temperature and time.

3. Food flipping

To assure even cooking/browning, open the frying drawer halfway through the cooking time. Check, turn or vigorously shake foods in the frying drawer.

Operating Instructions

- Place the air fryer on a flat, heat resistant area near a plug socket.
- Firmly grasp the frying drawer handle to remove the drawer from the air fryer and place on a flat, clean surface.
- If the air fryer is cold, you may wish to preheat the air fryer. This can be done by setting your required temperature, adding 3-5 minutes onto the timer and pressing the power button.
- Place food into the frying drawer. Do not overfill the frying drawer with food. To ensure proper cooking and air circulation, do not fill the frying drawer to more than half full.
- Push the drawer into the air fryer and ensure that it is completely closed.
- Plug the air fryer into the plug socket if you have not already done so.
- To ensure even cooking, open the fryer drawer half way through the cooking time and flip/shake the food in the frying drawer. The

air fryer will stop cooking until the frying drawer has been re-inserted.

- **Be careful when flip/shaking the food in the frying drawer to avoid personal injury.**
- **Do not turn the food by shaking the whole machine.**
- **Take extra care when removing the drawer from the air fryer to avoid being scalded by hot steam.**
- When the timer has ran out, the air fryer will beep several times before automatically turning off. If further cooking is required, simply turn the air fryer back on, re-set the temperature and select the time you want it to cook for.
- When the food is cooked, you can turn off the air fryer. Always unplug the appliance when it is not in use.
- **After cooking, do not put the drawer directly onto plastic or other non-heat-resistant surfaces as you may scold the surface and/or damage your air fryer.**
- **Hot oil may accumulate at the bottom of the frying drawer. To avoid personal injury, remove the drawer and clean the excess oil once it has cooled slightly.**

Cooking Tips

- Olive oil spray and vegetable oil works well for air frying.
- When cooking pre-packaged foods, the general rule is to lower the temperature by 10°C and reduce the cooking time by 30-50% depending on the food and amount. **Always check the temperature of your food before eating to ensure it is up to temperature.**
- Do not overfill the frying drawer with food. Never fill the frying drawer to more than 50% full.
- To achieve the best results, flip/shake the food halfway through the cooking period.
- To avoid excess smoke when cooking fatty foods (chicken wings, sausages, etc), you may need to empty fat from the drawer between batches.

Cleaning, Maintenance and Storage

Cleaning

- Unplug the air fryer and remove the drawer. Ensure the frying drawer and shelf have cooled down completely before cleaning.
- Wash the frying drawer and shelf in hot, soapy water. Do not use metal kitchen utensils or abrasive cleaners as this may damage the non-stick coating.
- The frying drawer is dishwasher safe. For best results, place it on the top rack of your dishwasher to clean.
- Wipe the air fryer body with a soft, non-abrasive damp cloth to clean.

Storage

- Ensure the air fryer is unplugged and all parts are clean and dry before storing.
- Never store the air fryer while it is hot or wet.
- Store the air fryer either in its box or in a clean, dry place.

Spare Parts and Repairs

To order replacement parts, please go to www.nettadirect.com/parts.

You will need PDC information from your product, user manual or carton box. Alternatively, go to our website and use search bar to find the parts available.

You can also find this code on the [back of this user manual](#).

For our repair service, please contact our customer support with email on support@nettadirect.com they will provide with more details of repair service with NETTA.

Disposal of Product

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

DISPOSAL:

Please dispose of this product responsibly. This item cannot be disposed of with general waste. Please contact your local council authority for more information on how to dispose this product. If this product is disposed of with general waste, it will end up in a landfill and will leak hazardous substances into the groundwater – effecting our food chain.



Your Warranty

If you purchased with NETTA DIRECT, or one of our authorised resellers, you will automatically enrol your warranty for 1 (ONE) year. You do not need to register again for your warranty. All warranties will be carried out to our terms and conditions including warranty conditions which you can find out from our website at www.nettadirect.com.

Copyrights

NETTA and its logo including images and contents in this manual and website is copyrighted. All intellectual property rights belong to NETTA owner CONSUMABLE DIRECT LIMITED.

ANY UNAUTHORISED USE, MODIFICATION or DISTRIBUTION of the NETTA logo, website image, and its contents (from website, manuals) will violate worldwide copyright, trademark and associated laws.

We reserve the right to proceed with lawsuits to anyone who is found breaching our copyrights policy. For more details, please check our website copyright policy for more information.

Product Dependency Code (PDC)

Your PDC is below:

PDC: AF9001TB-GS
SKU: 104025

NETTA is a registered trademark of CONSUMABLE DIRECT LIMITED.
Product Produced for CONSUMABLE DIRECT LIMITED M30 0QF U.K.