

# 5L AIR COOLER



**RATED POWER**  
55W

**FAN SPEEDS**  
THREE

**REMOTE  
CONTROL  
OPERATED**

**WATER TANK**  
5L

**Thank you for purchasing this NETTA product.**

Please read the user manual carefully before operating this appliance.

We will update our instruction manuals if necessary.

For the most up-to-date user manual, please visit our official website: [www.nettdirect.com](http://www.nettdirect.com).

You can download a copy of up-to-date user manuals at any time in electronic format. We do not supply you with a paper-based user manual after each revision.

**Require a larger version of this  
Instruction Manual?**

**Please download electronically  
from our website and use PDF  
reader on your device to enlarge  
the text if needed.**

**[www.nettdirect.com](http://www.nettdirect.com)**

## Safety and Warnings

### Intended Use

This NETTA product is designed for household and indoor use only.

### Regular Check-Ups

Ensure the power cable and plug are not damaged before plugging into a socket.


## Safety Warnings

- If the supply cord is damaged, it must be replaced by manufacturer.
- This appliance can be used by children aged 8 years and above.
- It can also be used by people with reduced physical, sensory, or mental capabilities as long as they are supervised and understand the hazards involved.
- Children should not play with the appliance, nor should they undergo any cleaning/maintenance activities without supervision.
- Unplug the appliance when filling with water or cleaning.
- Never repair or modify this appliance yourself.
- Do not operate this appliance with wet hands in order to avoid an electric shock.
- To prevent injury or damage, please do not insert any foreign object into the air inlet or outlet.
- Do not use this appliance around flammable and explosive gasses. Avoid keeping this appliance in direct sunlight.
- Do not place this appliance on an un-even surface to prevent it from falling and causing damage.

## Safety Warnings

- After the water tank is filled with water, do not tilt, or collide with the unit when placing or moving it.
- Do not place items on the unit and do not cover the air outlet.
- Do not have the air inlet or outlet of the unit close to walls, curtains, or other objects as this may block the airflow.
- Do not place the unit directly below the power outlet.
- Do not use the appliance around water.
- This appliance has a safety switch. If the honeycomb filter support has not been installed properly, the unit will not work as usual. When the machine is working, do not remove the honeycomb filter.
- At any time, the water level in the tank should not exceed “MAX” level. During humidification, the water level should be monitored and should not fall below the “MIN” level.
- Never insert fingers, pencils, or any other object through the grille when the fan is running.
- Disconnect the fan when moving from one location to another.

## Operating the Product

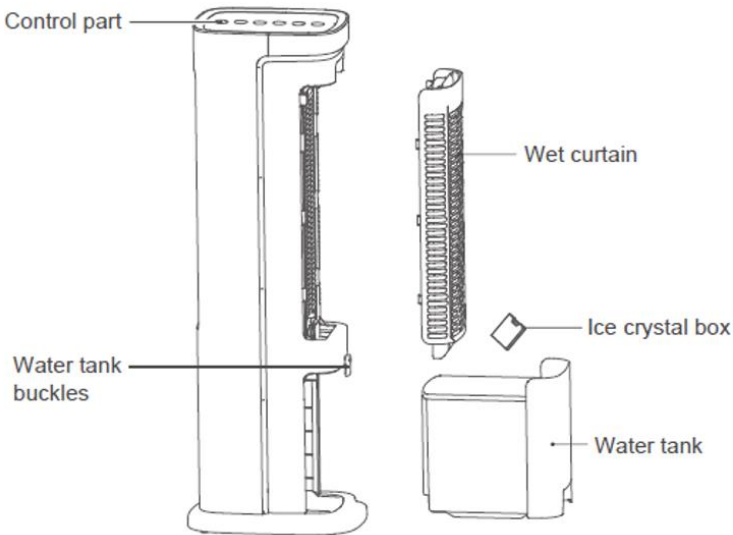


### Guidance on feeding water and the disassembly & cleaning of the water tank

- Please clean up water accumulated at the bottom of the water tank in a timely manner when the product is left unused.
- Please remove the power plug when feeding water and cleaning.
- Please make sure that the water pump module is fixed in position before start-up. Random displacement of the water pump module can cause the abnormalities of the product in cool wind function.
- There are two ways to feed water into the tank:
  1. Pull out half of the water tank and feed water directly without disassembling the water pump module.
  2. Separate the water pump module and fully pull out the water tank to feed water to clean the water tank.


## Operating the Product

### Guidance on feeding water and the disassembly & cleaning of the water tank


1. Pull the water tank buckle to the horizontal state.

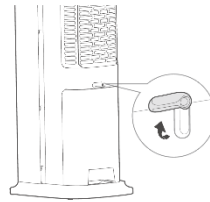


2. Pull out the water tank to the position as shown in the figure (push the water tank inside after feeding water).

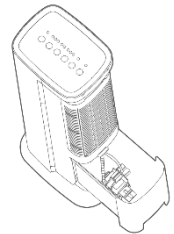


3. Unscrew the rotary knob 90° anticlockwise to separate the water tank from the water pump module (including the water pipe).

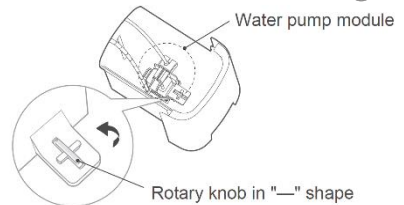


4. Pull out the water tank slowly to clean it or feed it water.

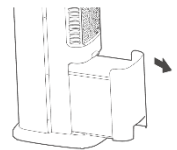

5. After feeding water or cleaning the water tank, install the water pump module in the water tank. Insert the front hook into the slot of the water tank and then rotate the rotary knob 90° clockwise and close it as shown in the figure.

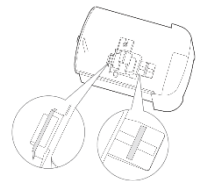

6. Push the water tank inside slowly and put the water tank buckle back into the vertical state.

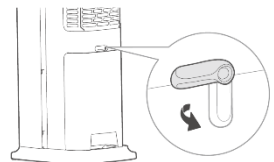


## Operating the Product


### Usage of the ice crystal box

- The ice crystal box can be frozen repeatedly and recycled.
- You can also choose not to use it based on the temperature.
- Please keep the ice crystal box closed to prevent from damage and leakage.
- The ice crystal box is made of eco-friendly and toxic-free materials and can be refrigerated safely.
- When using the frozen ice crystal box in the water tank, the temperature at the air outlet will drop after operating the cool wind function.
- Ice blocks can be used to replace the frozen ice crystal box.
- Control the level of the water tank, ensuring the water never exceeds the “MIN” or “MAX” indicator lines.

1. Pull out half of the water tank below the machine.

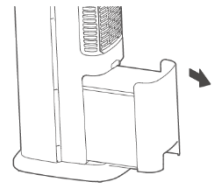




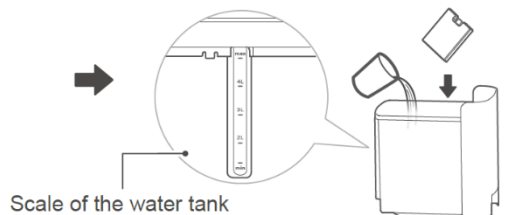



2. Take the ice crystal box out of the package and place it inside a freezer for more than 3 hours. Put the frozen ice crystal box in the water tank and feed water below the “MAX” indicator line.

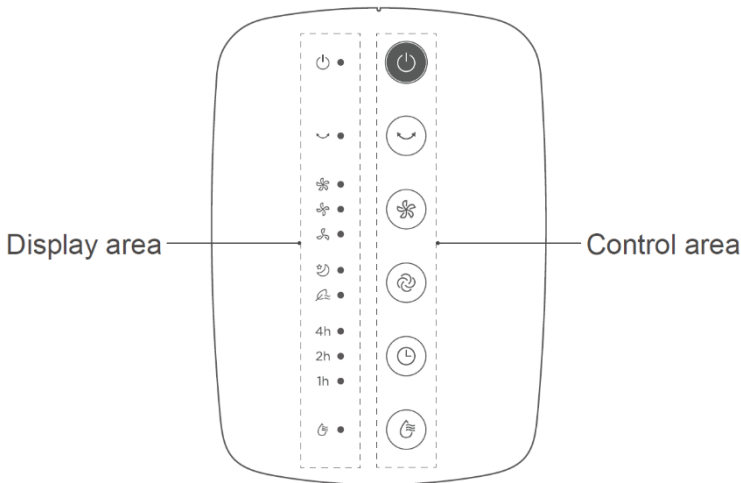

# Operating the Product

## Operating instructions of the machine body





Button	Function Description
 Startup/Standby	The product is activated or shut down.
 Air swing	This will start the oscillating function.
 Wind speed	Choose from high, medium, and low wind speeds.
 Wind type	Choose from normal, sleep, or natural wind types.
 Timing/ Reservation	A timer can be set in both 'standby' and 'start-up' states by shortly pressing the button. The cycle sequence is as follows: 1-2-3-4-5-6-7-0-1....
 Cool wind	Press this button to start or stop the cool wind function. This function is ideal for dry or hot weather. If the indicator light flashes, please feed water into the tank.



# Operating the Product

## Remote control button description

- The remote control should be used within 5 meters of the front of the product.

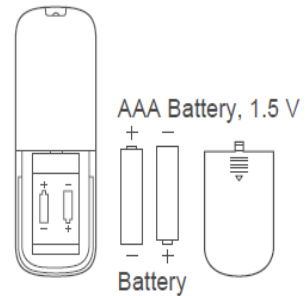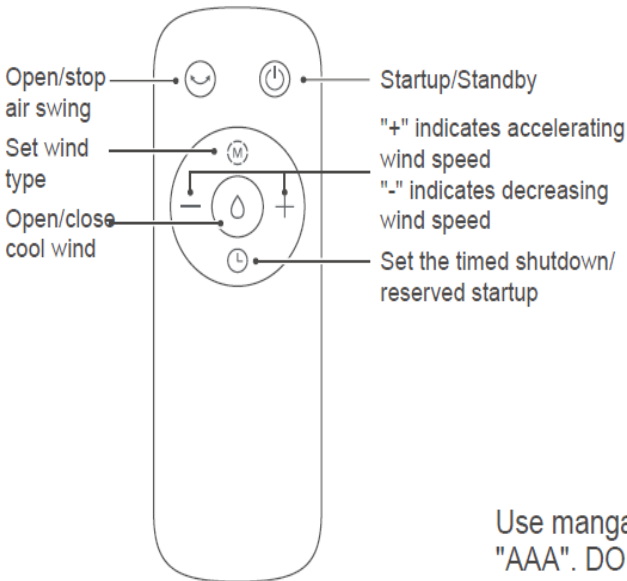


Use manganese or alkaline batteries of type "AAA". DO not use rechargeable batteries.


## Cleaning and Maintenance

### Guidance on the disassembly and installation of wet curtain parts


1. Remove the wet curtain support.

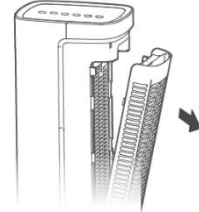


2. Rotate the bottom buckle at first and then remove the wet curtain.

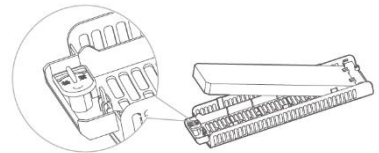

3. Take out the wet curtain for cleaning.

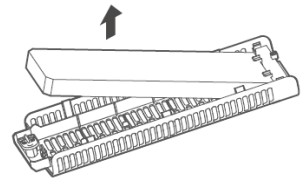

4. Re-install the wet curtain and support once finished.

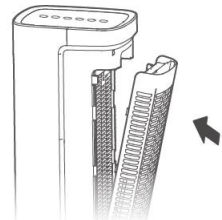

### Replacing the Water

After stopping the 'cool wind' function for 2 minutes, you should pull out the water tank and replace the water. This is because the water in the pipeline and the wet curtain flows back into the water tank.

## Cleaning and Maintenance

- This appliance requires little maintenance. Do not try and fix it by yourself. Always use a qualified servicer or electrician.
- Before cleaning and assembling, ensure the fan is unplugged.
- To ensure adequate air circulation to the motor, keep the vents at the rear of the motor free of dust.
- Please wipe the exterior with a soft cloth soaked in a mild detergent.
- Do not use any abrasive detergent or solvents to avoid scratching the surface. Do not use gasoline or thinner as a cleaner.
- Do not allow water or any other liquid into the motor housing or interior parts.
- Be sure to unplug the electrical supply source before cleaning.
- Plastic parts should be cleaned with a soft cloth dampened with mild soap. Thoroughly remove any remaining soap with a dry cloth.

<b>Fault</b>	<b>Fault Description</b>
The product cannot be normally operated after being installed.	The power cord fails to be plugged in or has bad contacts.
	The machine switch is not open.
The air volume is getting smaller.	The wet curtain is dirty and should be cleaned on a regular basis.
Abnormalities of cool wind function.	Check whether the water tank lacks water.

## Spare Parts and Repairs

---

To order replacement parts, please go to [www.nettadirect.com/parts](http://www.nettadirect.com/parts).

You will need PDC information from your product, user manual or carton box. Alternatively, go to our website and use search bar to find the parts available.

You can also find this code on the [back of this User Manual](#).

For our Repair Service, please contact our customer support with email on [support@nettadirect.com](mailto:support@nettadirect.com) they will provide with more details of repair service with NETTA.

## Disposal of Product

---

**IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.**

### **DISPOSAL:**

Please dispose of this product responsibly. This item cannot be disposed of with general waste. Please contact your local council authority for more information on how to dispose this product. If this product is disposed of with general waste, it will end up in a landfill and will leak hazardous substances into the groundwater – effecting our food chain.



## Your Warranty

---

If you purchased with NETTADIRECT, or one of our authorised resellers, you will automatically enrol your warranty for 1 (ONE) year. You do not need to register again for your warranty. All warranties will be carried out to our terms and conditions including warranty conditions which you can find out from our website at [www.nettadirect.com](http://www.nettadirect.com).

## Copyrights

---

NETTA and its logo including images and contents in this manual and website is copyrighted. All intellectual property rights belong to NETTA owner CONSUMABLE DIRECT LIMITED.

ANY UNAUTHORISED USE, MODIFICATION or DISTRIBUTION of the NETTA logo, website image, and its contents (from website, manuals) will violate worldwide copyright, trademark, and associated laws.

We reserve the right to proceed with lawsuits to anyone who is found breaching our copyrights policy. For more details, please check our website copyright policy for more information.

## Product Dependency Code (PDC)

---

Your PDC is below:

**PDC: AC100-20AR**  
**SKU: 103895**

NETTA is a registered trademark of CONSUMABLE DIRECT LIMITED.  
Product Produced for CONSUMABLE DIRECT LIMITED M30 0QF U.K.