

600W HEDGE TRIMMER



**RATED
POWER**
600W

LIGHTWEIGHT
3KG

BLADE GAP
16mm

**CUTTING
BLADE**
55cm

EN USER INSTRUCTION & OPERATION MANUAL
ES MANUAL DE INSTRUCCIONES Y OPERACIONES PARA EL
USUARIO
DE BENUTZERANLEITUNG & BETRIEBSANLEITUNG
FR MANUEL D'UTILISATION ET D'UTILISATION
IT ISTRUZIONI PER L'USO E MANUALE OPERATIVO

EN

Thank you for purchasing this NETTA product.

Please read the user manual carefully before operating this appliance.

We will update our instruction manuals if necessary.

For the most up-to-date user manual, please visit our official website:
www.nettdirect.com.

You can download a copy of up to date user manuals at any time in electronic format. We do not supply you with a paper-based user manual after each revision.

**Require a larger version of this
Instruction Manual?**

**Please download electronically from
our website and use PDF reader on
your device to enlarge the text if
needed.**

www.nettdirect.com

Safety and Warnings

Intended Use

This NETTA product is designed for private outdoor use only. It is not for use in public parks, sports grounds, agriculture, or forestry. Failure to use this product as intended will void the warranty.

Regular Check-Ups

Ensure power cables are not damaged before using.

Check all the knobs are functioning correctly.

General Cautions

- Always follow this instruction manual and go through all the safety checks.
- This is not toy - do not let children play with it.
- **DO NOT** modify this product in any way.
- Keep work areas clean and well lit.
- Do not operate tools in explosive atmospheres.
- Before using an electric powered appliance, check the rating label and voltage information on this manual, or the rating label on back of the machine.
- Always connect the device to a socket with Residual Current Device (RCD) fitted with your home circuits.
- If you are unsure, please seek a certified electrician for advice.
- The appliance must not be immersed in liquid.
- Do not use power tools in wet or damp conditions.
- Do not overload your power tools. Match each tool to the task.
- Do not use any power tool if the on/off switch is damaged.
- Check that the moving parts of your tool operate smoothly and are not cracked or damaged.

Risk of Personal Injury

DO NOT use the appliance other than for the intended use.

- Use personal protective equipment. Always use eye protection.
- Use ear protection.
- Do not wrap the device in a cloth or other material to suppress noise. This will hinder the proper ventilation of the device. This could ignite a fire and cause burns.
- Wear soft gloves when using this tool to prevent discomfort.
- Hold the power tool firmly to reduce the vibration levels.
- Ensure the switch is in the off position before connecting to a power source, picking up or carrying the tool.
- Remove any adjusting keys or wrenches before turning the tool on.
- Do not overreach. Keep proper balance at all times.
- Do not wear loose clothing or jewellery.
- Take a break if you feel vibration-related discomfort.
- DO NOT operate any appliance with a damaged cord or plug or after the appliance malfunctions or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
- If the supply cord is damaged it must be replaced by the manufacturer or an authorized service agent or a qualified technician in order to avoid a hazard.
- The use of accessories is not recommended by the manufacturer as they may cause injuries to persons.
- Do not let the cord hang over the edge of a table or counter or touch a hot surface.
- Do not place on or near a hot gas or electric burner or in a heated oven.
- Unplug from outlet when not in use and before cleaning.

Diagram of Product



1. Rear handle with on/off switch 2. Housing
3. Front handle with on/off switch 4. Blade 5. Guard

Before Starting the Machine

Connection

This hedge trimmer should only be connected to a single-phase AC current. Ensure that the mains voltage is the same as the operating voltage indicated on the rating plate.

Connect the power plug to the coupling of an appropriate extension cord. Form a loop, push it through the opening in the rear handle and hook over the cable holder.

Starting the Machine

Switching On/Off

Switching On: Press the on/off switch (3) of the front handle and the switch (1) of the rear handle with both hands at the same time.

Switching Off: Release any one of the switch (3) or (1).

The blade brake makes the blades stop immediately within 0.5s. The small flash in the area of the upper ventilation slots is normal and does not harm to you or the machine.

Cutting Hedges

Before starting work, select branches with a diameter bigger than 20mm and cut them with a pruning shear.

A trapezoidal cut corresponds to the natural growth of plants and results in optimal hedge growing.

First, cut the sides from bottom to top. Cut the upper part giving it the shape you prefer, in a straight horizontal form, roof-like or rounded.

The safety blade has laterally rounded and staggered cutting teeth to reduce danger of injury. The additional shock protection avoids inconvenient kickback when the blades come into contact with walls, fences, etc.

If the blades are jammed or blocked by obstacles, switch off the motor immediately, pull the plug and wait for the blades to completely stop. Then remove the blockage.

Caution! Metal obstacles, such as fences, will cause damage to the cutting blades.

Always keep your extension cord behind your back and start cutting at the point nearest the socket. Plan your working direction.

Storage and Maintenance

Before carrying out any maintenance operations, disconnect the plug from the power supply.

Check your machine regularly before starting work.

Damaged cutting blades must be replaced or repaired by a professional.

After each cutting operation, clean the cutting blade with a soft brush and cloth with lubricating fluid oil and spray a thin layer of protective oil.

Always keep the ventilation slots in the motor housing clean.

Never clean or spray the machine with water. Only clean with a moist cloth and never use detergents or solvents as this can damage the plastic parts of the machine.

Finally, dry the motor housing carefully.

Store the machine with the supplied protection cover.

SPECIFICATIONS

| | |
|---------------------------------|-----------|
| Nominal voltage | 230V~50Hz |
| Power | 600W |
| Electric Engine No Load Speed | 1500/min |
| Cutting Dia. | 20mm |
| Blade Size | 550mm |
| Guaranteed sound pressure level | 102 dB(A) |

Vibration

| | |
|--------------|---|
| Front handle | 3.709m/s ² k= 1.5 m/s ² |
| Rear handle | 2.576m/s ² k= 1.5 m/s ² |

Spare Parts and Repairs

To order replacement parts, please go to www.nettadirect.com/parts.

You will need PDC information from your product, user manual or carton box. Alternatively, go to our website and use search bar to find the parts available.

You can also find this code on the [back of this User Manual](#).

For our Repair Service, please contact our customer support by emailing support@nettadirect.com.

Disposal of the Product

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

DISPOSAL:

Please dispose of this product responsibly. This item cannot be disposed of with general waste. Please contact your local council authority for more information on how to dispose this product. If this product is disposed of with general waste, it will end up in a landfill and will leak hazardous substances into the groundwater – effecting our food chain.



Your Warranty

If you purchased with NETTADIRECT, or one of our authorised resellers, you will automatically enrol your warranty for 1 (ONE) year.

You do not need to register again for your warranty. All warranties will be carried out to our terms and conditions including warranty conditions which you can find out from our website at www.nettadirect.com.

PLEASE NOTE: Consumable parts will not be covered by warranty. If a consumable part needs replacing, you need purchase separately from our website.

Please quote with your original proof of purchase (invoice) and name or delivery address, postcode, so we can locate you when you contact us for warranty.

Copyrights

NETTA and its logo including images and contents in this manual and website is copyrighted. All intellectual property rights belong to NETTA owner CONSUMABLE DIRECT LIMITED.

ANY UNAUTHORISED USE, MODIFICATION or DISTRIBUTION of the NETTA logo, website image, and its contents (from website, manuals) will violate worldwide copyright, trademark, and associated laws.

We reserve the right to proceed with lawsuits to anyone who is found breaching our copyrights policy. For more details, please check our website copyright policy for more information.

Product Dependency Code (PDC)

Your PDC is below:

PDC: HTEG61A-550
SKU: 104088

NETTA is a registered trademark of CONSUMABLE DIRECT LIMITED.
Product Produced for CONSUMABLE DIRECT LIMITED M30 0QF U.K.