

# 710W JIG SAW



**RATED  
POWER**  
710 W

**VOLTAGE**  
230V

**FREQUENCY**  
50 Hz

**NO-LOAD  
SPEED**  
3000/min

**Thank you for purchasing this NETTA product.**

Please read the user manual carefully before operating this appliance.

We will update our instruction manuals if necessary.

For the most up-to-date user manual, please visit our official website:  
[www.nettdirect.com](http://www.nettdirect.com).

You can download a copy of up to date user manuals at any time in electronic format. We do not supply you with a paper-based user manual after each revision.

## Require a larger version of this Instruction Manual?

Please download electronically from our website and use PDF reader on your device to enlarge the text if needed.

**[www.nettdirect.com](http://www.nettdirect.com)**

## SAFETY & WARNINGS

### INTENDED USE

NETTA Design is for domestic and indoor use only. This product is not intended for use by people who have lack of experience and knowledge or have reduced ability, or sensory and mental capabilities. Keep supervised when groups of people use this item.

### REGULAR CHECKUPS

- Check cables every time before plugging into a socket, make sure power cables are not burst or snapped and that the power-plug has no damage.
- Check all the knobs are functional correctly.

## GENERAL CAUTIONS

- Always follow this instruction manual and go through all the safety checks.
- This is not toy - do not let children play with it.
- **DO NOT** modify this product in any way.
- Keep work areas clean and well lit.
- Do not operate tools in explosive atmospheres.
- Before using an electric powered appliance, check the rating label and voltage information on this manual, or the rating label on back of the machine.
- This product wattage is **710W**, ensure this device is connected to a power socket.
- Always connect the device to a socket with Residual Current Device (RCD) fitted with your home circuits.
- If you are unsure, please seek a certified electrician for advice.
- The appliance must not be immersed in liquid.
- Do not use power tools in wet or damp conditions.
- Do not overload your power tools. Match each tool to the task.
- Do not use any power tool if the on/off switch is damaged.
- Check that the moving parts of your tool operate smoothly and are not cracked or damaged.
- The cutting parts must be sharp and kept clean.

 
 
## RISK OF PERSONAL INJURY

- DO NOT use the appliance other than for the intended use.
- Use personal protective equipment. Always use eye protection.
- Use ear protection.
- Do not wrap the device in a cloth or other material to suppress noise. This will hinder the proper ventilation of the device. This could ignite a fire and cause burns.
- Wear soft gloves when using this tool to prevent discomfort.
- Hold the power tool firmly to reduce the vibration levels.
- Ensure the switch is in the off position before connecting to a power source, picking up or carrying the tool.
- Remove any adjusting keys or wrenches before turning the tool on.
- Do not overreach. Keep proper balance at all times.
- Do not wear loose clothing or jewellery.
- Take a break if you feel vibration-related discomfort.
- DO NOT operate any appliance with a damaged cord or plug or after the appliance malfunctions or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
- If the supply cord is damaged it must be replaced by the manufacturer or an authorized service agent or a qualified technician in order to avoid a hazard.
- The use of accessories is not recommended by the manufacturer as they may cause injuries to persons.
- Do not let the cord hang over the edge of a table or counter or touch a hot surface.
- Do not place on or near a hot gas or electric burner or in a heated oven.
- Unplug from outlet when not in use and before cleaning.

# ASSEMBLE THE PRODUCT

## Blade installation/uninstall

1. Make sure that the device is disconnected from the power source.
2. Select the blade depending on the material to be sawed.
3. Lift the plastic cover.
4. Press and twist the blade socket clockwise with the thumb of one hand and insert the blade with the other hand.
5. The blade must be directed away from the device.
6. Release the blade socket so that it turns back automatically to the previous position.
7. Pull the blade to check if it is installed correctly.

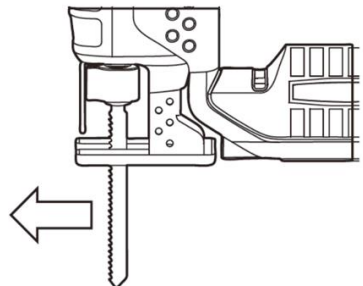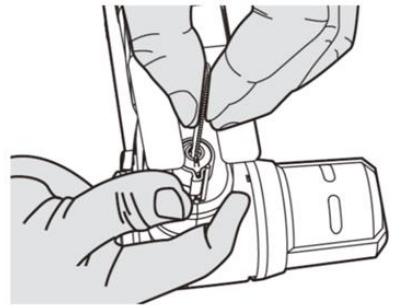

# OPERATING THE PRODUCT

## Turning the Device On/Off

1. To turn the device on or off, press the on/off switch.



**Attention!** After turning the device off, the blade continues to move – be careful.

## On/off switch lock

To lock the on/off switch, press it, and then press the on/off switch lock button.

To unlock the on/off switch, press it again.

## Stroke rate adjuster

 
It is possible to adjust the blade stroke rate. Rotate the stroke rate adjuster to select one of the settings from 1 to 6.

## Guide foot plate bevel adjustment

To adjust the guide foot plate bevel, unscrew two Allen screws on the bottom of the device using the Allen key (included).


The jigsaw with laser can be set at 45, 30, 15 and 0 degrees. The base has teeth which facilitate its locking.

For this reason, when adjusting, move the base slightly backward, set the required bevel, and then slide it forward to lock. Screw the Allen screws back.

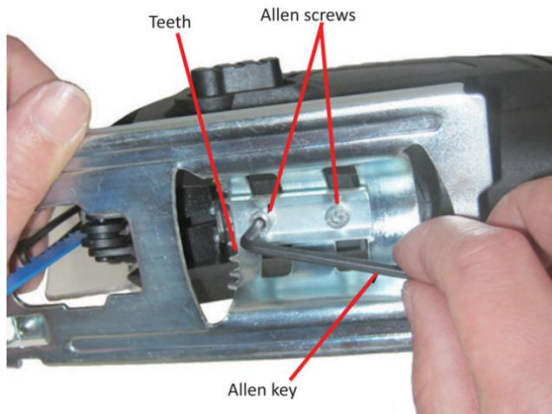

## **Blade pendulum action adjustment**

 It is possible to adjust the blade pendulum action in the range from 0 to 3. At "0", the blade will not perform additional pendulum action forward, which allows for easier cutting. At "3", the pendulum action will be the highest. Adjust the blade pendulum action depending on the hardness of the material being sawed. You can cut soft materials more aggressively by setting the blade pendulum action adjuster to "3".

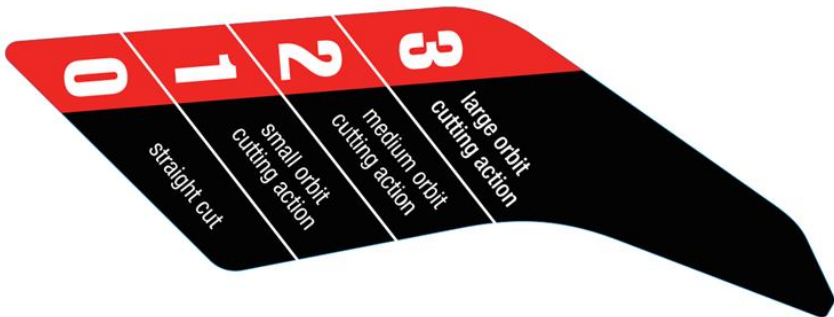


## **Installation of the parallel guide.**

**WARNING!** Before assembly or installation of accessories to make sure that the tool is switched off and unplugged.

1. For repeated, equal to the cutting width of 150mm, you can use

 the parallel guide (16) with the centimeter scale. It will provide fast performance, even and clean cut.

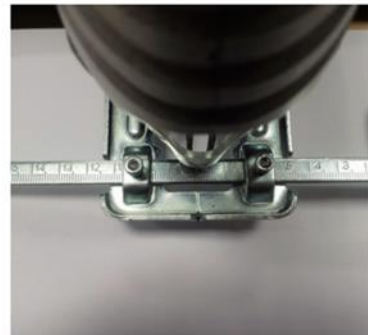

2. The rip fence mounted in a rectangular opening on the side of the base stop downward. Push the guide to the desired position defining an adequate cutting width as in the picture above. Tighten the alien screws using the Allen wrench included with the kit to secure the track in place.

## **Installation /removal of the connector for workshop vacuum tubes**

The connector for workshop vacuum tubes - or adapter - allows the user to maintain a clean working environment, by allowing the connection of the power tool to a workshop vacuum. The adapter must be connected to a vacuum, which will be resistant to dust generated during the processing of different materials.

The connector for dust extraction (15) should be put onto the sawdust exhaust channel (6). When installing - the detents, which are placed in the connector, should be inserted into the perforations made in the channel.

The adapter must be turned in the clockwise direction - as seen from the back of the unit – securing the connector in place. After the installation of the connector the vacuum cleaner suction pipe may be plugged in. which is resistant to dust created from different materials.

Make sure that the vacuum cleaner is turned on to ensure that dust and shavings produced during power operation will be absorbed. To remove the connector (15), first unplug the vacuum cleaner tube and turn the connector counterclockwise (viewed from the rear of the tool) and remove it from the exhaust channel (6).



## **THE LASER POINTER IS LOCATED ABOVE THE BLADE SOCKET.**

**DO NOT SHINE LASERS IN EYES. DO NOT DISSASSEMBLE THE LASER. DO NOT MODIFY THE LASER. DO NOT LEAVE THE TOOL UNSUPERVISED WITH THE LASER ACTIVIED.**



## CLEANING & STORAGE

Correct and regular cleaning will improve the safety and extend the lifespan of the device.



**Warning!** Turn the device until it cools down before off, disconnect it from the mains and wait cleaning or maintenance to avoid burns.

Protective features, ventilation openings and the motor housing should always be free from dust and other contamination.

Wipe the device with a damp cloth or blow it down with low-pressure compressed air.

It is recommended that you clean the device immediately after every use.

Protect the interior of the device from water penetration.

Do not immerse the device or parts of it in water or other liquids. The cutting parts must be sharp and kept clean. Properly maintained cutting elements that are properly sharpened, adhere better to the surface and provide better cutting control.

### Attention!



Do not use any chemical, alkaline, abrasive, or disinfecting substances to clean the device, as they can damage its surfaces.

## SPARE PARTS/REPAIR

We hope our products will last as long as possible to reduce the build-up of electrical waste in the world.

If any consumable parts need replacing, please check our website for stock availability and purchase.

If our website does not have the parts listed, but you still need consumable parts, please contact our customer support to check availability and process your order.

To order replacement parts, please go to [www.nettdirect.com/parts](http://www.nettdirect.com/parts).

You will need PDC information from your product, user manual or carton box. Alternatively, go to our website and use search bar to find the parts available.

You can also find this code on the [back of this User Manual](#).

For our Repair Service, please contact our customer support with email on [support@nettdirect.com](mailto:support@nettdirect.com) they will provide with more details of repair service with NETTA.

## DISPOSAL OF PRODUCT

---

**IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.**

### **DISPOSAL:**

Please dispose of this product responsibly. This item cannot be disposed of with general waste. Please contact your local council authority for more information on how to dispose this product. If this product is disposed of with general waste, it will end up in a landfill and will leak hazardous substances into the groundwater – effecting our food chain.



## YOUR WARRANTY

---

If you purchased with NETTADIRECT, or one of our authorised resellers, you will automatically enrol your warranty for 1 (ONE) year. You don't need to register again for your warranty. All warranties will be carry out our terms and conditions include warranty conditions you will find out from our website at [www.nettdirect.com](http://www.nettdirect.com).

**PLEASE NOTE:** Consumable parts will not be covered by warranty. If a consumable part needs replacing, you need purchase separately from our website. Please quote with your original proof of purchase (invoice) and name or delivery address, postcode, so we can locate you when you contact us for warranty.

## COPYRIGHTS

---

NETTA and its logo including images and contents in this manual and website is copyrighted. All intellectual property rights belong to NETTA owner CONSUMABLE DIRECT LIMITED.

ANY UNAUTHORISED USE, MODIFICATION or DISTRIBUTION of the NETTA logo, website image, and its contents (from website, manuals) will violate worldwide copyright, trademark and associated laws.

We reserve the right to proceed with lawsuits to anyone who is found breaching our copyrights policy. For more details, please check our website copyright policy for more information.

## PRODUCT DEPENDENCY CODE (PDC)

---

Your PDC is below:

PDC: TG65M7  
SKU: 103707

NETTA is a registered trademark of CONSUMABLE DIRECT LIMITED.  
Product Produced for CONSUMABLE DIRECT LIMITED M30 0QF U.K.