

550W HEDGE TRIMMER



**RATED
POWER**
550W

VOLTAGE
230-240V

**BLADE
LENGTH**
410mm

WEIGHT
3.7KG

Thank you for purchasing this NETTA product.

Please read the user manual carefully before operating this appliance.

We will update our instruction manuals if necessary.

For the most up-to-date user manual, please visit our official website:
www.nettdirect.com.

You can download a copy of up to date user manuals at any time in electronic format. We do not supply you with a paper-based user manual after each revision.

Require a larger version of this Instruction Manual?

Please download electronically from our website and use PDF reader on your device to enlarge the text if needed.

www.nettdirect.com

SAFETY & WARNINGS

INTENDED USE

NETTA Design is for domestic and indoor use only. This product is not intended for use by people who have lack of experience and knowledge or have reduced ability, or sensory and metal capabilities. Keep supervised when groups of people use this item.

REGULAR CHECKUPS

- Check cables every time before plugging into a socket, make sure power cables are not burst or snapped and that the power-plug has no damage.
- Check all the knobs are functioning correctly.

GENERAL CAUTIONS

- Always follow this instruction manual and go through all the safety checks.
- This is not toy - do not let children play with it.
- **DO NOT** modify this product in any way.
- Keep work areas clean and well lit.
- Do not operate tools in explosive atmospheres.
- Before using an electric powered appliance, check the rating label and voltage information on this manual, or the rating label on back of the machine.
- Always connect the device to a socket with Residual Current Device (RCD) fitted with your home circuits.
- If you are unsure, please seek a certified election for advice.
- The appliance must not be immersed in liquid.
- Do not use power tools in wet or damp conditions.
- Do not overload your power tools. Match each tool to the task.
- Do not use any power tool if the on/off switch is damaged.
- Check that the moving parts of your tool operate smoothly and are not cracked or damaged.

RISK OF PERSONAL INJURY

- DO NOT use the appliance other than for the intended use.
- Use personal protective equipment. Always use eye protection.
- Use ear protection.
- Do not wrap the device in a cloth or other material to suppress noise. This will hinder the proper ventilation of the device. This could ignite a fire and cause burns.
- Wear soft gloves when using this tool to prevent discomfort.
- Hold the power tool firmly to reduce the vibration levels.
- Ensure the switch is in the off position before connecting to a power source, picking up or carrying the tool.
- Remove any adjusting keys or wrenches before turning the tool on.
- Do not overreach. Always keep proper balance.
- Do not wear loose clothing or jewellery.
- Take a break if you feel vibration-related discomfort.
- DO NOT operate any appliance with a damaged cord or plug or after the appliance malfunctions or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
- If the supply cord is damaged it must be replaced by the manufacturer or an authorized service agent or a qualified technician to avoid a hazard.
- The use of accessories is not recommended by the manufacturer as they may cause injuries to persons.
- Do not let the cord hang over the edge of a table or counter or touch a hot surface.
- Do not place on or near a hot gas or electric burner or in a heated oven.
- Unplug from outlet when not in use and before cleaning.

DIAGRAM OF THE PRODUCT

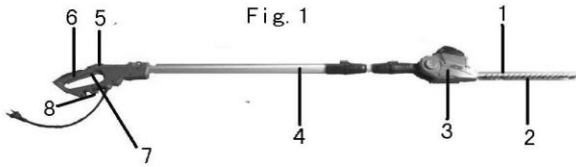 


Fig. 1

1. Blade Guard
2. Blade
3. Four-Position Pivoting Head
4. Telescopic Pole
5. Lock-Off Button
6. Rear Handle
7. Switch Trigger
8. Cord Retainer

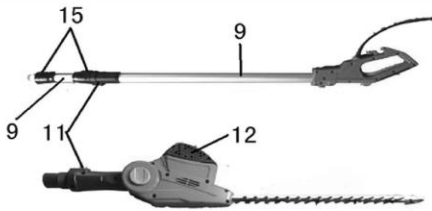 


Fig. 2

Fig. 2

9. Packed Tool
11. Collar
12. Trimmer Head
15. Collar

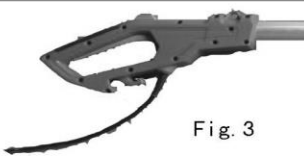 


Fig. 3

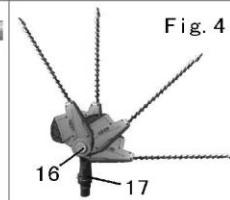 


Fig. 4

Fig. 4

 
16. Pivot Button
17. Notches

ASSEMBLING THE PRODUCT

Unpack the product and inspect it to ensure no damage has occurred. Do not discard the packaging until you have inspected and operated the item.

ASSEMBLING THE WORKING HEAD TO THE TELESCOPIC POLE

Insert part 1 into part 2, the tubes are egg-shaped and will only install one way. Twist part 3 to lock it into place.

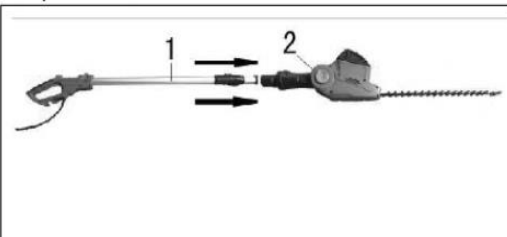


ASSEMBLING THE PRODUCT

EXCHANGING THE WORKING HEAD OF THE HEDGE TRIMMER OR CHAIN SAW

Push part 4, turn part 3 and pull part 1. Connect the needed head as shown in the last section.

 You may need to rotate the pole from side to side until it locks into place.

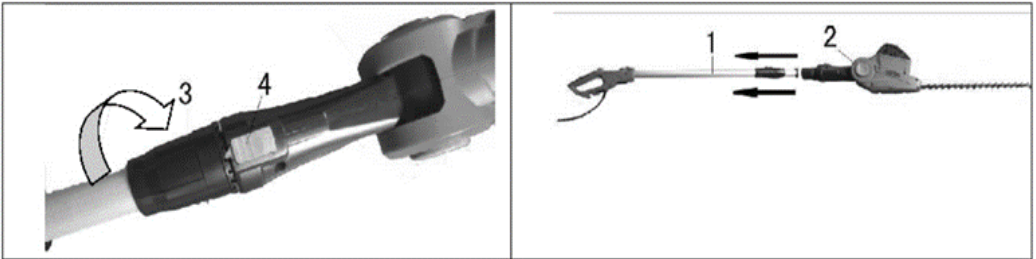

WARNING! Failure to lock the pole as directed could result in injury or death.

This device is only made for cutting and trimming hedges, bushes, and shrubs around your home. This tool is designed for adults. 16+ can use with supervision.

This hedge trimmer should only be connected to a single-phase AC socket outlet. Ensure the mains voltage matches the voltage indicated on the rating plate.

STOPPING AND STARTING THE DEVICE

Connect the hedge trimmer plug to the power supply.

To start the blade movement, push the lock-off button and then pull the switch trigger. To stop, release the switch trigger.

Note: Only use an approved outdoor extension cord when operating this tool.

Grasp the telescopic pole with your left hand the rear handle with your right.

ASSEMBLING THE PRODUCT

ADJUSTING THE PIVOTING HEAD

Disconnect the plug from the power supply and place the hedge trimmer on a sturdy and flat surface.

Push the pivot button and adjust the trimmer head until it snaps securely into place at one of the four positions indicated by the notches.

ADJUSTING THE TELESCOPIC POLE

Disconnect the pole hedge trimmer from the power supply.

Loosen the inner hexagon screw M6X20 with the hex key, push the poles towards each other to shorten the pole or pull away from each other to lengthen the pole.

Note: Extend the telescopic pole only to the length required to reach the hedges being trimmed. Do not extend the handle above waist height. When the desired length is achieved, tighten the inner hexagon screw M6X20 with a hex key. Always keep proper balance.

CUTTING TIPS

Do not force the hedge trimmer through heavy shrubbery.

Do not attempt to cut branches thicker than $\frac{3}{4}$ inch.

If blades become jammed, unplug the device, and allow to stop before touching.

Wear gloves when trimming thorny or prickly growth.

When trimming new growth, use a wide sweeping action so that the stems are fed directly into the cutting blade. Older growth will have thicker stems and will be trimmed easiest by using a sawing movement.

To cut to a set height, you can stretch a piece of string along the desired height of the hedge and trim just above it. Trim the side of the hedge so that it will be slightly narrower at the top. More of the hedge will be exposed when shaped this way, making it more uniform.

OPERATING THE HEDGE TRIMMER

Hold the unit firmly with both hands. Keep your left hand on the telescopic pole and your right hand on the rear handle.

The unit is used for cutting in either direction in a slow, sweeping action from side to side. Stand so that you are stable and balanced on both feet. Inspect and clear the area of any hidden objects.

To protect yourself from electrocution, do not operate within 50ft of overhead electrical lines.

Never use a blade after hitting a hard object without first inspecting it for damage. If damage is detected, do not use the device.

CLEANING & STORAGE

Before carrying out any checks or maintenance operations, disconnect the plug from the electric power supply.

Check your machine regularly before starting work.

Damaged cutting blades must be repaired or exchanged before working with the machine.

After each cutting operation, clean the cutting blade with a soft brush and cloth with lubricating fluid oil and spray a thin layer of fluid protective oil on the blades,

Always keep the ventilation slots in the motor housing clean.

Never clean or spray the machine with water. Clean the motor housing only with a moist cloth and never apply detergents or solvents. These may ruin the plastic parts of the machine. Finally, dry the motor housing carefully.

Store the machine with the supplied protection cover.

Only use the original accessories and spare parts.

SPARE PARTS/REPAIR

We hope our products will last as long as possible to reduce the build-up of electrical waste in the world.

If any consumable parts need replacing, please check our website for stock availability and purchase.

If our website does not have the parts listed, but you still need consumable parts, please contact our customer support to check availability and process your order.

To order replacement parts, please go to www.nettadirect.com/parts.

You will need PDC information from your product, user manual or carton box. Alternatively, go to our website and use search bar to find the parts available. You can also find this code on the [back of this User Manual](#).

For our Repair Service, please contact our customer support with email on support@nettadirect.com they will provide with more details of repair service with NETTA.

DISPOSAL OF PRODUCT

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

DISPOSAL:

Please dispose of this product responsibly. This item cannot be disposed of with general waste. Please contact your local council authority for more information on how to dispose this product. If this product is disposed of with general waste, it will end up in a landfill and will leak hazardous substances into the groundwater – effecting our food chain.



YOUR WARRANTY

If you purchased with NETTADIRECT, or one of our authorised resellers, you will automatically enrol your warranty for 1 (ONE) year. You do not need to register again for your warranty. All warranties will be carried out to our terms and conditions including warranty conditions which you can find out from our website at www.nettdirect.com.

PLEASE NOTE: Consumable parts will not be covered by warranty. If a consumable part needs replacing, you need purchase separately from our website. Please quote with your original proof of purchase (invoice) and name or delivery address, postcode, so we can locate you when you contact us for warranty.

COPYRIGHTS

NETTA and its logo including images and contents in this manual and website is copyrighted. All intellectual property rights belong to NETTA owner CONSUMABLE DIRECT LIMITED.

ANY UNAUTHORISED USE, MODIFICATION or DISTRIBUTION of the NETTA logo, website image, and its contents (from website, manuals) will violate worldwide copyright, trademark and associated laws.

We reserve the right to proceed with lawsuits to anyone who is found breaching our copyrights policy. For more details, please check our website copyright policy for more information.

PRODUCT DEPENDENCY CODE (PDC)

Your PDC is below:

PDC: PHTEG06AA-450

SKU: 103021

NETTA is a registered trademark of CONSUMABLE DIRECT LIMITED.
Product Produced for CONSUMABLE DIRECT LIMITED M30 0QF U.K.