

FULLY FITTED COTTON HEATED BLANKET



5 HEAT
SETTINGS

10 HOUR
TIMER

DUAL
CONTROLLER

MACHINE
WASHABLE

Thank you for purchasing this Wärmer product.

Please read the user manual carefully before operating this appliance.

We will update our instruction manuals if necessary.

For the most up-to-date user manual, please visit our official website: warmerblankets.com

You can download a copy of up-to-date user manuals at any time in electronic format. We do not supply you with a paper-based user manual after each revision.

**Require a larger version of this
Instruction Manual?**

**Please download electronically
from our website and use PDF
reader on your device to enlarge
the text if needed.**

warmerblankets.com

Safety and Warnings

Intended Use

This product is for domestic and indoor use only.

Regular Check-Ups

Ensure the power cable and plug are not damaged before plugging into a socket.

General Warnings

- If the electric blanket is folded, crumpled or used abnormally, the blanket can overheat which will activate the permanent protection function. This cannot be repaired at home and the product must be returned to the retailer.
- If the power supply for the electric blanket is lower than the recommended voltage, the temperature of the blanket will rise slowly, and the heating ability is relatively low. This is not a malfunction of the blanket and the user should pay attention to the voltage of the supply socket.
- Use only as an under blanket (use similar to a bedsheet, not a duvet).
- Ensure the electric blanket can be laid flat on your mattress.
- Do not use pins on the appliance. Do not scratch with sharp objects or beat the object with blunt devices. Do not attempt to secure the electric blanket with pins or other metal objects.
- Use the electric blanket under the body only. Do not wrap your body with the blanket or use in any other way.
- Do not turn on the electric blanket when there are heavy objects or folded bedding on it to avoid it overheating.
- Do not expose the electric blanket to direct sunlight.

General Warnings


- Do not iron the blanket and avoid damaging the insulation of the heating wires.
- Do not use with any other heating appliances e.g., hot water bottle.
- Do not use with anything that can start a fire on the bed such as cigarettes, sparks, etc.
- Switch off the blanket or pull the plug when leaving the house or not using the blanket.
- Do not dry clean this electric blanket.
- Children under 3 and other vulnerable people should not use this appliance due to their inability to react to overheating.
- After the electric blanket has been turned on, users should supervise it for an hour to prevent any possible fire.
- This product is not intended for medical use in hospitals.
- Do not use if wet. See 'Cleaning, Storage and Maintenance' for further instructions.
- Do not let the control unit or power cord get wet.
- When not in use, the blanket should be stored in a dry place. When storing the appliance, allow it to cool down before folding. Do not crease the appliance by placing items on top of it during storage.
- After storing, the blanket should be carefully checked before use to make sure the control or cords are safe. Do not switch on the power when the blanket is not totally safe.
- Do not attempt to perform any repairs on the electric blanket yourself.

- Do not use the electric blanket on an adjustable bed.
- If a heating wire has been cut, do not attempt to repair it by yourself. Please contact the retailer in this circumstance.
- For continuous or all-night use, please set the switch button to “1”.
- Do not try to repair a fuse link or thermal link. The appliance must be returned to the retailer if a link has ruptured.
- Do not unplug the power plug by pulling on the power cord and do not move the appliance by pulling on the soft power cord.
- The indicator lamp and electric blanket circuit are connected in parallel. The indicator lamp does not influence the electric blanket’s ability to generate heat when it is broken so care should be taken to ensure the electric blanket is functioning properly.
- Do not use folded, crumpled or rucked.
- Do not roll and drape the appliance while being used. Ensure the bed that the appliance is being used on will guarantee the electric blanket is laid flat. Do not use the electric blanket if the in any other circumstances to avoid overheating.
- Switch off the electric blanket power or pull out the electric blanket plug when you are going out or not using the electric blanket to avoid any accidental fires.
- The power cord of the appliance cannot be changed or repaired. If the cord is damaged, the appliance must be disposed of.
- Plug power cord into an AC 220V-240V~, 50/60Hz wall outlet (do not connect this appliance with DC) before use.

Users must observe all the above points. Failure to do so may result in the blanket overheating which could result in a fire, bodily injury, or property loss.

Using the Product

Fitting the detachable controller

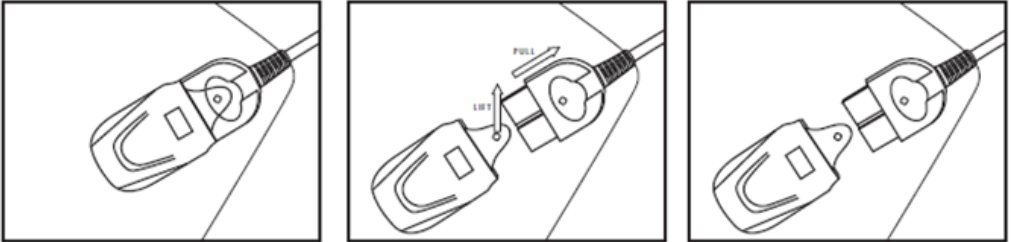

- To fit the controller plug, simply hold the socket with one hand and push the controller plug all the way until it is firmly in place.
- To remove the controller, lift the locking tab up with your finger and pull the plug directly out. Do not pull the controller cable and do not try and pull the controller plug out without lifting the locking tab as you will damage the socket.
- Do not fold, roll or kink the cable. Allow it to hang freely.
- Ensure the cable is not pulled so tight that it bends hard at the blanket connector end.
- Ensure that the electric blanket is sized to suit your mattress.
- Do not use a single blanket on a double, queen, king, or super king mattress.
- The blanket top must not hang over the edges of the mattress.

Securing your Electric Blanket

- Your electric blanket must be placed flat directly onto the mattress. Mattress protectors must be fitted over the electric blanket.
- Place the blanket onto the mattress with the controller connections at the head end of the bed.
- Only spread sheets or thin cotton-padded mattress on the blanket.
- Electric blankets must not be used on top of the user (as with normal blankets), instead they must be firmly secured to the mattress.
- Fit the side skirts around the edges of the mattress and then use the elastic skirt to ensure that the blanket fits snugly around the sides and underneath the mattress.
- Spread the skirt around the mattress edge ensuring even tension, making sure the blanket is placed evenly over the mattress. Then ensure that the blanket is flat and crease free.
- Failure to follow these fitting instructions may trigger the overheat protection system and render the blanket permanently inoperative. This will invalidate the warranty.
- The electric blanket should not be tucked in at the sides.
- Make your bed in the usual manner.
- After the blanket is secure and fitted correctly, plug the controller into the wall power socket and turn on.
- Do not cover the controllers at any time.
- Keep the controller away from external heat sources.

Using the Controller

- This blanket has a timer which can be set from 1-10 hours. You can adjust the timer as required but the default setting will be 8 hours.
- Do not use any other controller for this blanket.
- The temperature can be set to 5 heat settings.
- **Setting 3 can be used as a fast pre-heat setting (takes 15 mins). If you don't want to use the pre-heat setting, press 'Cancel', then 'Temperature' and it will be set to a constant temperature.**
- To select the required heat setting, press the temperature button. '3' is a preheat setting.
- **For all night use or continuous use, please set the switch button to "1". Do not set the switch button to "2" for all night use or continuous use.**
- Set the temperature by pressing "Temperature" (red light will glow).
- Set the time by pressing "Time" (green light will glow).
- When the time is up, the controller will turn off automatically.
- Dual Control: Equivalent to two single beds combined. Two people can adjust according to their own needs without interfering with each other.
- When the electric blanket runs, the control must be uncovered in a position that is easy to access. Ensure not to put the control under the quilt, pillow, or covered by other things. Do not leave the control close to any other heat source in case the control is overheated and damaged.
- Users must observe all the above points. Otherwise, the blanket could overheat - leading to fires, injury or property loss.

Electrical Field Effect

- When using the blanket, you may feel a tingling sensation. This is known as an 'electric field effect' and happens throughout all brands of electric blanket.
- It is caused by an electromagnetic field (EMF) and some people are more susceptible to feeling it than others. It is no cause for concern and is not an electric shock.

Overheat Protection System

- The blanket is fitted with numerous overheat safeguard systems. This offers protection against overheating or damage to the elements by disengaging the power to the elements before overheating hazards occur.
- Should there ever be a problem with the heating element in the blanket, it will automatically close down the operation and the blanket will turn off.
- The controller must not be covered. The controller has built-in protection, so that if the controller overheats or the heating element is damaged, it will automatically close down the operation permanently.
- Keep the controller away from external heat sources.

Cleaning, Maintenance and Storage

- Do not dry clean, wring or spin dry.
- Ensure all controllers are unplugged from the power point and from the electric blanket before cleaning.
- Ensure the controllers and plugs do not get wet.
- Machine wash on delicate cycle only or hand wash at 30°C max.
- Do not bleach or use detergents with bleach.
- Do not tumble dry. Do not iron.
- Line dry in shade only over several lines. Do not use pegs.
- Do not operate when folded.

Handwashing

- Never use hot water as this may shrink the blanket and void the warranty.
- Place the blanket in lukewarm water mixed with either a natural wool detergent or with mild soap flakes.
- Soak the blanket for approx. 5 minutes and then gently squeeze the soapy water through.
- Rinse the blanket thoroughly with clean lukewarm water until no more suds are visible and allow water to drain off.
- Refer to the drying section for drying instructions.
- With normal use, it is recommended that you hand wash your blanket once per year.

Machine Washing

- Place the blanket in the washing machine with either a natural wool detergent or with mild soap flakes.
- Set your machine to the delicate wool or gentle cycle (without spin dry) and set the water temperature to warm (30°C max).
- When the cycle has finished, allow water to drain off.
- Refer to the drying section for drying instructions.

Drying

- Spread the blanket out on a clean surface to dry in a shady area.
- Your blanket can also be dried on a clothesline provided the blanket is not creased or folded.
- Ensure pegs are not used on the heating element areas of the blanket if hanging on the line. The blanket must be thoroughly dried including controller sockets before being re-fitted to your bed.

Servicing

- There are no user serviceable parts on this blanket.
- It is recommended that your electric blanket is inspected by a qualified person after three years of use.

Storage

- When storing the blanket, allow it to cool down before folding. Fold neatly (or rolled) but not tightly, without sharp bends in the heating elements. Store where no other heavy objects will be placed upon it.
- Store in a dry place where it cannot be damaged.

Spare Parts and Repairs

To order replacement parts, please go to warmerblankets.com/collections/controllers

You will need PDC information from your product, user manual or carton box. Alternatively, go to our website and use search bar to find the parts available.

You can also find this code on the [back of this user manual](#).

For our repair service, please contact our customer support at warmerblankets.com/pages/contact

Disposal of Product

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

DISPOSAL:

Please dispose of this product responsibly. This item cannot be disposed of with general waste. Please contact your local council authority for more information on how to dispose this product. If this product is disposed of with general waste, it will end up in a landfill and will leak hazardous substances into the groundwater – effecting our food chain.



Your Warranty

If you purchased with Wärmer Blankets, or one of our authorised resellers, you will automatically enrol your warranty for 1 (ONE) year. You do not need to register again for your warranty. All warranties will be carried out our terms and conditions including warranty conditions you will find out from our website at warmerblankets.com.

Copyrights

Wärmer and its logo including images and contents in this manual and website is copyrighted. All intellectual property rights belong to Wärmer owner CONSUMABLE DIRECT LIMITED.

ANY UNAUTHORISED USE, MODIFICATION or DISTRIBUTION of the Wärmer logo, website image, and its contents (from website, manuals) will violate worldwide copyright, trademark, and associated laws.

We reserve the right to proceed with lawsuits to anyone who is found breaching our copyrights policy. For more details, please check our website copyright policy for more information.

Product Dependency Code (PDC)

Your PDC is below:

SKU: 103995 / 103996 / 103997

Wärmer is a registered trademark of CONSUMABLE DIRECT LTD.
Product Produced for CONSUMABLE DIRECT LIMITED M30 0QF U.K.