

# COVER MAX HEATED BLANKET



**RATED POWER**  
75W / 120W

**CABLE LENGTH**  
1.4M

**TIMER**  
2 OR 10 HOURS

**HEAT SETTINGS**  
NINE

**Thank you for purchasing this Wärmer product.**

Please read the user manual carefully before operating this appliance.

We will update our instruction manuals if necessary.

For the most up-to-date user manual, please visit our official website: [warmerblankets.com](http://warmerblankets.com)

You can download a copy of up-to-date user manuals at any time in electronic format. We do not supply you with a paper-based user manual after each revision.

**Require a larger version of this  
Instruction Manual?**

**Please download electronically  
from our website and use PDF  
reader on your device to enlarge  
the text if needed.**

**[warmerblankets.com](http://warmerblankets.com)**

# Safety and Warnings

## Intended Use

This product is for domestic and indoor use only.

## Regular Check-Ups

Ensure the power cable and plug are not damaged before plugging into a socket.

## General Warnings

- If the electric blanket is folded, crumpled or used abnormally, the blanket can overheat which will activate the permanent protection function. This cannot be repaired at home and the product must be returned to the retailer.
- If the power supply for the electric blanket is lower than the recommended voltage, the temperature of the blanket will rise slowly, and the heating ability is relatively low. This is not a malfunction of the blanket and the user should pay attention to the voltage of the supply socket.
- The indicator lamp and electric blanket circuit are connected in parallel. The indicator lamp does not influence the electric blankets ability to generate heat. If the lamp is broken, care should be taken to ensure the electric blanket is functioning properly.
- Use only as an under blanket (use similar to a bedsheet, not a duvet).
- Ensure the electric blanket can be laid flat on your mattress.
- Do not use pins on the appliance. Do not scratch with sharp objects or beat the object with blunt devices. Do not attempt to secure the electric blanket with pins or other metal objects.
- Use the electric blanket under the body only. Do not wrap your body with the blanket or use in any other way.

## General Warnings

- Do not turn on the electric blanket when there are heavy objects or folded bedding on it to avoid it overheating.
- Do not expose the electric blanket to direct sunlight.
- Do not iron the blanket and avoid damaging the insulation of the heating wires.
- Do not use with any other heating appliances e.g., hot water bottle.
- Do not use with anything that can start a fire on the bed such as cigarettes, sparks, etc.
- Switch off the blanket or pull the plug when leaving the house or not using the blanket.
- Do not dry clean this electric blanket.
- Children under 3 should not use this appliance due to their inability to react to overheating.
- After the electric blanket has been turned on, users should supervise it for an hour to prevent any possible fire.
- This product is not intended for medical use in hospitals.
- Wash by hand. Do not use if wet. If you want to clean the electric blanket, first disconnect the product from the power supply and ensure it is at room temperature. Then, put it on a flat surface and wipe the surface with a damp cloth. Once cleaning is finished, put the blanket in a cool and airy place and let it dry completely before using.
- Do not let the control unit or power cord get wet.

## General Warnings

- When not in use, the blanket should be stored in a dry place. When storing the appliance, allow it to cool down before folding. Do not crease the appliance by placing items on top of it during storage.
- After storing, the blanket should be carefully checked before use to make sure the control or cords are safe. Do not switch on the power when the blanket is not totally safe.
- Do not attempt to perform any repairs on the electric blanket yourself.
- The power cord of the appliance cannot be changed or repaired. If the cord is damaged, the appliance must be disposed of.
- Do not use the electric blanket on an adjustable bed.
- If a heating wire has been cut, do not attempt to repair it by yourself. Please contact the retailer in this circumstance.
- For continuous or all-night use, please set the switch button to “1”.
- Do not try to repair a fuse link or thermal link. The appliance must be returned to the retailer if a link has ruptured.

**Users must observe all the above points. Failure to do so may result in the blanket overheating which could result in a fire, bodily injury, or property loss.**

## Operating the Product

- Lay the electric blanket flat on the bed. The end with no controller is the foot end of the blanket.
- Fix the four corner fasteners of the electric blanket on the four corners of the bed or mattress with the non-metal belts.
- Only spread bedsheets on the blanket.
- Make sure they are laid flat to help conduct heat and so you are able to see if the blanket is uneven. If everything is flat on the bed, the electric blanket can be used safely.

## Operating the RT8 Controller

- This controller can control the left and righthand side of the electric blanket separately.
- When turning on the controller, the default setting is '5' for both sides. Press the left/right buttons to adjust the left/right temperature settings, respectively.
- The displayed value represents the current settings. The settings increase from 1-9. The higher the setting, the higher the temperature. Setting the blanket to 0 means it is not heated.
- To preheat the blanket, adjust the temperature setting between 6 and 10. The power indicator lamp should glow, and the blanket will start to heat. Preheating usually takes around 30-50 minutes.
- The default timing is 10 hours auto-off. You can set a 10 hour auto-off or a 2 hour auto-off timer, depending on your requirements. After the timer ends, the indicator for 2 hour auto-off flashes.
- If using all night or continuously, set the temperature to setting 1.
- Ensure the controller does not get covered by the quilt, pillows etc.

# Operating the Product

**To guarantee safe operation, pay attention to the following:**

- Pay attention and observe the power cords, plug and soft cords that are used to connect the appliance to the controller. Check whether there are any unusual situations before use. If you are uncertain about the condition and whether it is safe or not, do not continue to use the blanket. Return it to the retailer.
- During use, checks should be regularly carried out to ensure the electric blanket is lying flat, fitted firmly and not folded over.
- Examine the appliance frequently for signs of wear or damage. If there are such signs or if the appliance has been misused, return it to the retailer.
- The heating wire in the electric blanket should be spaced evenly with no crossings or folds between wires. If this occurs, do not use the blanket, and return it to the retailer.
- Avoid jumping on the bed if the blanket has been laid on it. If this happens, please check to ensure every part of the blanket is normal.
- When any accident or damage takes place (smoking, fire, abnormal sound/smell, etc.), you must first disconnect the blanket from the power supply by unplugging the power cable, before checking for damage.

## **Electrical Field Effect**

- When using the blanket, you may feel a tingling sensation. This is known as an 'electric field effect' and happens throughout all brands of electric blanket.
- It is caused by an electromagnetic field (EMF) and some people are more susceptible to feeling it than others. It is no cause for concern and is not an electric shock.

## **Cleaning, Maintenance and Storage**

- To clean the electric blanket, wipe it down with a soft damp cloth and mild detergent by hand.
- Do not put the controller in water.
- Allow it to dry thoroughly before using or storing the product.
- Do not use industrial solvents to clean this blanket.



## Spare Parts and Repairs

---

To order replacement parts, please go to [warmerblankets.com/collections/controllers](http://warmerblankets.com/collections/controllers)

You will need PDC information from your product, user manual or carton box. Alternatively, go to our website and use search bar to find the parts available.

You can also find this code on the [back of this user manual](#).

For our repair service, please contact our customer support at [warmerblankets.com/pages/contact](http://warmerblankets.com/pages/contact)

## Disposal of Product

---

**IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.**

### **DISPOSAL:**

Please dispose of this product responsibly. This item cannot be disposed of with general waste. Please contact your local council authority for more information on how to dispose this product. If this product is disposed of with general waste, it will end up in a landfill and will leak hazardous substances into the groundwater – effecting our food chain.



## Your Warranty

---

If you purchased with Wärmer Blankets, or one of our authorised resellers, you will automatically enrol your warranty for 1 (ONE) year. You do not need to register again for your warranty. All warranties will be carried out our terms and conditions including warranty conditions you will find out from our website at [warmerblankets.com](http://warmerblankets.com).

# Copyrights

---

Wärmer and its logo including images and contents in this manual and website is copyrighted. All intellectual property rights belong to Wärmer owner CONSUMABLE DIRECT LIMITED.

ANY UNAUTHORISED USE, MODIFICATION or DISTRIBUTION of the Wärmer logo, website image, and its contents (from website, manuals) will violate worldwide copyright, trademark, and associated laws.

We reserve the right to proceed with lawsuits to anyone who is found breaching our copyrights policy. For more details, please check our website copyright policy for more information.

## Product Dependency Code (PDC)

---

Your PDC is below:

PDC: TT(L×W)/1.1 m<sup>2</sup>-RT8-FT-ST / TT(L×W)/2 m<sup>2</sup>-RT8-FT-ST  
SKU: 103946/103857/103858

Wärmer is a registered trademark of CONSUMABLE DIRECT LTD.  
Product Produced for CONSUMABLE DIRECT LIMITED M30 0QF U.K.