

DIAMOND LATTICE HEATED BLANKET



OVERHEATING
PROTECTION

MACHINE
WASHABLE

DETACHABLE
CONTROLLER

HEAT SETTINGS
3

Thank you for purchasing this Wärmer product.

Please read the user manual carefully before operating this appliance.

We will update our instruction manuals if necessary.

For the most up-to-date user manual, please visit our official website: warmerblankets.com

You can download a copy of up-to-date user manuals at any time in electronic format. We do not supply you with a paper-based user manual after each revision.

**Require a larger version of this
Instruction Manual?**

**Please download electronically
from our website and use PDF
reader on your device to enlarge
the text if needed.**

warmerblankets.com

Safety and Warnings

Intended Use

This product is for domestic and indoor use only.

Regular Check-Ups

Ensure the power cable and plug are not damaged before plugging into a socket.

General Warnings

To reduce the risk of personal injury or damage to property, basic important safety instructions must be observed including the following:

- Read the instruction manual thoroughly and retain for future reference. Before use, ensure you know how the electric blanket works and how to operate it.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug – do not pull on the cord.
- Turn the power off and remove the plug when the electric blanket is not in use or before cleaning.
- Always use the electric blanket with a power outlet of the voltage marked on the rating label.
- Use only the type of controller marked on the rating label.
- Use only as an under-blanket.
- Do not use if it is damp or wet.
- This blanket is not intended for medical use in hospitals.
- Do not use together with another heating appliance.
- When in use, ensure the blanket & mains lead do not get trapped.

General Warnings

- This appliance is not intended for use by persons (including children under 16) with reduced physical, sensory or mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance.
- Children should be supervised to ensure that they do not play with the appliance.
- Examine the blanket frequently to check that there are no signs or wear and damage. If any damage/wear is spotted, do not use the blanket and contact your supplier.
- If the supply cord of this appliance is damaged, it must only be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid hazard.
- This appliance is not to be used by young children unless the controls have been pre-set by a parent or guardian, or unless the child has been adequately instructed on how to operate the controls safely.
- This appliance must not be used by persons insensitive to heat or other vulnerable people who are unable to react to overheating.
- Children under the age of three are not to use this appliance due to their inability to react to overheating.

Users must observe all the above points. Failure to do so may result in the blanket overheating which could result in a fire, bodily injury, or property loss.

Symbol Explanation



Read the instructions for use



Do not bleach



Do not tumble dry



Do not iron



Do not dry clean



Do not insert pins



Do not use folded or rucked



Maximum washing temperature 30°C, mild process.




Not to be used by very young children (0- 3) years

Fitting Instructions

The electric blanket must always remain covered during use to retain heat.

- Unfold the blanket and lay on top of your mattress.
- Align the blanket so the socket for the lead and controller are by the pillow.
- Use the ties supplied to secure the blanket to the mattress.
- Connect the controller to the mattress by plugging into the socket.
- Place your fitted sheet over the blanket.

Using the Product

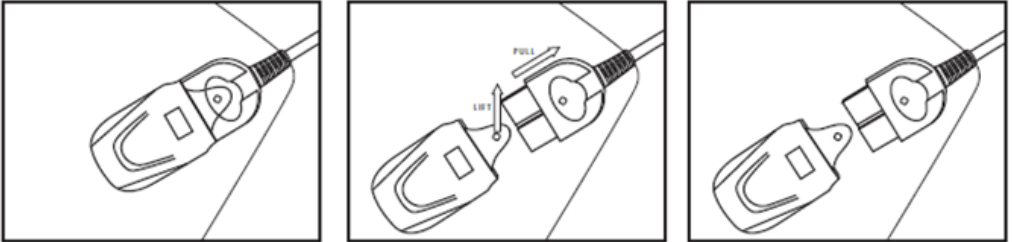

- To fit the controller plug, simply hold the socket with one hand and push the controller plug all the way until it is firmly in place.
- To remove the controller, lift the locking tab up with your finger and pull the plug directly out. Do not pull the controller cable and do not try and pull the controller plug out without lifting the locking tab as you will damage the socket.
- Do not fold, roll or kink the cable. Allow it to hang freely.
- Ensure the cable is not pulled so tight that it bends hard at the blanket connector end.
- Ensure that the electric blanket is sized to suit your mattress.
- Do not use a single blanket on a double, queen, king, or super king mattress.
- The blanket top must not hang over the edges of the mattress.
- After use, switch off the controller and remove the plug from the power socket. If the blanket is not to be used for a long period, store it in a cool and dry place.

Preheating the Blanket

- The controller has a pre-heat facility in order for you to warm your bed prior to getting into it.
- The time taken to preheat the bed will depend on the ambient temperature of the bedroom and whether an electric blanket has been used to heat the bed on a regular basis.
- At normal ambient temperature, you should allow approximately 30-60 minutes on heat setting '3'.
- You may get into bed while the blanket is still warming up, but please do not leave the blanket setting on '3' when you are in bed as this is intended to be a preheat setting.
- If you plan on sleeping or using for long periods, please set at '1' as to prevent overheating.
- A cold room or bed that has not been used for some time may require a greater length of time to preheat.

Electrical Field Effect

- When using the blanket, you may feel a tingling sensation. This is known as an 'electric field effect' and happens throughout all brands of electric blanket.
- It is caused by an electromagnetic field (EMF) and some people are more susceptible to feeling it than others. It is no cause for concern and is not an electric shock.

Overheat Protection System

- The blanket is fitted with numerous overheat safeguard systems. This offers protection against overheating or damage to the elements by disengaging the power to the elements before overheating hazards occur.
- Should there ever be a problem with the heating element in the blanket, it will automatically close down the operation and the blanket will turn off.
- The controller must not be covered. The controller has built-in protection, so that if the controller overheats or the heating element is damaged, it will automatically close down the operation permanently.
- Keep the controller away from external heat sources.

Cleaning, Maintenance and Storage

- Disconnect the blanket from the mains when not in use and before cleaning the blanket.
- Clean the surface of the cord with a neutral detergent if the cord is dirty and wipe it dry with a soft cloth.
- **DO NOT** immerse the controller/s in water or get them wet.
- **DO NOT** dry clean this blanket as it could damage the heating elements.
- **DO NOT** use industrial solvents such as benzene, kerosene, or similar solvents to clean this blanket.

- **Machine washing this blanket is possible, however, hand-wiping it down will prolong the life of the blanket.**
- To machine wash, remove the controller/s and place the blanket in a net bag and seal it.
- Use a small amount of detergent and set the washing machine to a 'delicate wash' setting (maximum temperature 30°C).
- When washed, remove the blanket from the net bag and drape it over a clothesline to dry. **DO NOT** use clothes pegs to secure it.
- **DO NOT** wring out the blanket to dry.
- **DO NOT** dry using a tumble dryer.
- **DO NOT** iron the blanket.
- **DO NOT** dry the blanket in the sun.
- **DO NOT** connect to the mains supply to dry it.
- **DO NOT** use an appliance, such as a hairdryer, to dry the blanket.
- **DO NOT** use the blanket if it is damp or wet. Allow the blanket to dry naturally.
- **DO NOT** try and repair the blanket if it is faulty – have it looked at by a qualified person.

Storage

- When not in use, allow it to cool down before folding, then gently fold the blanket and place back into the packing bag it arrived in.
- Make sure the blanket is dry before folding and packing it away. The blanket should be hung in a ventilated location to dry naturally.
- Do not use mothproofing agents on the blanket.
- Insulation of the blanket will be damaged if the blanket is dried under the sun, ironed or when mothproofing agents are used. Damage on the insulation material will cause a safety problem.
- Do not crease the appliance by placing items on top of it during storage.
- The blanket should be stored in a cool and dry place.

Spare Parts and Repairs

To order replacement parts, please go to warmerblankets.com/collections/controllers

You will need PDC information from your product, user manual or carton box. Alternatively, go to our website and use search bar to find the parts available.

You can also find this code on the [back of this user manual](#).

For our repair service, please contact our customer support at warmerblankets.com/pages/contact

Disposal of Product

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

DISPOSAL:

Please dispose of this product responsibly. This item cannot be disposed of with general waste. Please contact your local council authority for more information on how to dispose this product. If this product is disposed of with general waste, it will end up in a landfill and will leak hazardous substances into the groundwater – effecting our food chain.



Your Warranty

If you purchased with Wärmer Blankets, or one of our authorised resellers, you will automatically enrol your warranty for 1 (ONE) year. You do not need to register again for your warranty. All warranties will be carried out our terms and conditions including warranty conditions you will find out from our website at warmerblankets.com.

Copyrights

Wärmer and its logo including images and contents in this manual and website is copyrighted. All intellectual property rights belong to Wärmer owner CONSUMABLE DIRECT LIMITED.

ANY UNAUTHORISED USE, MODIFICATION or DISTRIBUTION of the Wärmer logo, website image, and its contents (from website, manuals) will violate worldwide copyright, trademark, and associated laws.

We reserve the right to proceed with lawsuits to anyone who is found breaching our copyrights policy. For more details, please check our website copyright policy for more information.

Product Dependency Code (PDC)

Your PDC is below:

PDC: TT(L×W)/0.65 m²-11X-DT-ST / TT(L×W)/1.4 m²-11X-DT-ST /
TT(L×W)/1.9 m²-11X-DT-ST

SKU: 104033 / 104034 / 104035

Wärmer is a registered trademark of CONSUMABLE DIRECT LTD.
Product Produced for CONSUMABLE DIRECT LIMITED M30 0QF U.K.