

# ELECTRIC HEATED THROW



**RATED POWER**  
120W

**OVERHEATING  
PROTECTION**

**OVERCURRENT  
PROTECTION**

**HEAT SETTINGS**  
9

**Thank you for purchasing this Wärmer product.**

Please read the user manual carefully before operating this appliance.

We will update our instruction manuals if necessary.

For the most up-to-date user manual, please visit our official website: [warmerblankets.com](http://warmerblankets.com)

You can download a copy of up-to-date user manuals at any time in electronic format. We do not supply you with a paper-based user manual after each revision.

**Require a larger version of this  
Instruction Manual?**

**Please download electronically  
from our website and use PDF  
reader on your device to enlarge  
the text if needed.**

**[warmerblankets.com](http://warmerblankets.com)**

# Safety and Warnings

## Intended Use

This product is for domestic and indoor use only.

## Regular Check-Ups

Ensure the power cable and plug are not damaged before plugging into a socket.

## General Warnings

- If the power supply for the electric blanket is lower than the recommended voltage, the temperature of the blanket will rise slowly and the heating ability is relatively low. This is not a malfunction of the blanket and the user should pay attention to the voltage of the supply socket.
- Do not use pins on the appliance. Do not scratch with sharp objects or beat the object with blunt devices. Do not attempt to secure the electric blanket with pins or other metal objects.
- Do not let the control unit or power cord get wet.
- Wash by hand or machine. Do not use if wet. See 'Cleaning, Storage and Maintenance' for further instructions.
- Do not dry clean this electric blanket.
- Do not use with any other heating appliances e.g., hot water bottle.
- This product is not intended for medical use in hospitals.
- The power cord of the appliance cannot be changed or repaired. If the cord is damaged, the appliance must be disposed of.
- Do not turn on the electric blanket whilst it is folded.

## General Warnings

- Do not expose the electric blanket to direct sunlight.
- Do not iron the blanket and avoid damaging the insulation of the heating wires.
- Do not use with anything that can start a fire such as cigarettes, sparks, etc.
- Switch off the blanket or pull the plug when leaving the house or not using the blanket.
- Children under 3 should not use this appliance due to their inability to react to overheating.
- When not in use, the blanket should be stored in a dry place. When storing the appliance, allow it to cool down before folding. Do not crease the appliance by placing items on top of it during storage.
- After storing, the blanket should be carefully checked before use to make sure the control or cords are safe. Do not switch on the power when the blanket is not totally safe.
- Do not attempt to perform any repairs on the electric blanket yourself.
- Do not use the electric blanket on an adjustable bed.
- If a heating wire has been cut, do not attempt to repair it by yourself. Please contact the retailer in this circumstance.
- Do not try to repair a fuse link or thermal link. The appliance must be returned to the retailer if a link has ruptured.

**Users must observe all the above points. Failure to do so may result in the blanket overheating which could result in a fire, bodily injury, or property loss.**

# Operating the Product

## Symbol explanation



Read the instructions for use



Do not bleach



Do not tumble dry



Do not iron



Do not dry clean



Do not insert pins



Do not use folded or rucked process



Maximum washing temperature 30°C, mild



Not to be used by very young children (0- 3) years


- This blanket is intended to be used as a ‘throw’ or ‘over blanket’ and therefore should always be placed on top of a person and not underneath them.
- It is not to be used as an ‘under blanket’.
- Connect the controller to the blanket (the blanket has a socket attached that the controller slots into) and ensure it is fully connected.
- Ensure there is a mains supply is nearby and that when in use, the mains lead will not be in a position that could cause people to trip over it. When plugged into the mains supply, the controller must be within easy reach of the user.
- Please set at ‘H’ (preheat setting) for 30-60 minutes before using.
- The starting up state is the standby state. The digital display of temperature is ‘0’ and the timer display is ‘0’.
- Press ‘TEMP’ and the temperature display is ‘7’ and the timer display is ‘9’.

- Press 'TEMP' again and the temperature display will circulate from L-1-2-3-4-5-6-7-L as you cycle through the settings. If using for prolonged periods, set at 'L' or '1'.
- Press 'HIGH' and the temperature display will show 'H'. This is designed as a preheating setting and will automatically change to 'L' after 1 hour.
- Press 'TIME' and the timer will circulate from 1-9 hours.
- If the temperature on the controller displays as 'C', this means the controller has overheated. Please disconnect the blanket from the mains and wait for the controller to cool down. Once it has cooled down, it will then be safe to use again.
- If the temperature is displayed as 'P', please check whether the coupler of the electric blanket has been connected firmly and restart it. If the fault cannot be removed, it means the internal connection of the electric blanket has problems and you need to contact our customer care team.
- If the controller shows 'E', please shut down and then restart. If it still occurs, this indicates that the internal connection has short circuited and that the blanket is damaged. Please contact our customer care team.
- When using the blanket, some people may be susceptible to a tingling sensation when alone or when touching someone else using the blanket. This tingling feeling is known as an electric field effect and is occasionally known to happen across all makes and brands of electric blankets. It is caused by the current flowing through the element creating an Electromagnetic Field. Some people are more susceptible to this feeling than others. This is no cause for concern and is in no way an electric shock.

## Cleaning, Maintenance and Storage

**Always unplug and remove the controller from the throw blanket before cleaning.**

To remove the controller, lift the locking tab on the blanket connector and then pull the controller out of the blanket connector.

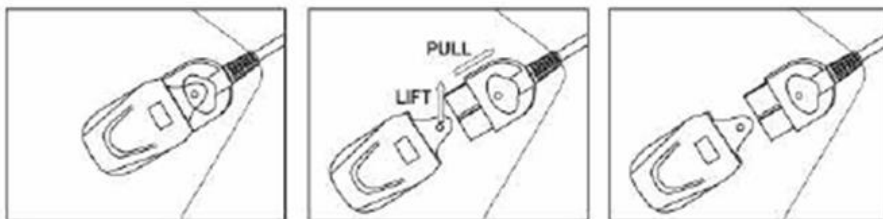

The power cable must never come into contact with water. It is recommended to wash the blanket only if it becomes dirty or dusty. Before using the blanket, make sure it is completely dry.

• Do not dry clean.



• Do not iron.



• Do not tumble dry.



• Do not bleach.



• Machine wash, Permanent press.

Initial water temperature should not exceed 30°C.



## **Hand Washing**

Immerse the blanket in water for 10 minutes, using mild detergent and lukewarm water. Then, carefully rinse the blanket with cold water, without wringing or squeezing it out.

## **Machine Washing**

The blanket may be washed on the wool or delicate setting of the washing machine at a maximum temperature of 30°C.

## **Drying**

Hang the blanket to air dry naturally in a horizontal position until completely dry. Do not expose to direct sunlight. Do not dry with a hairdryer or heater.

## **Maintenance**

Examine the blanket regularly to check that there are no signs of wear or damage. If any damage or wear is spotted, do not use the blanket and seek specialist advice. If the mains lead or controller is damaged, do not open or attempt to repair them as they must be serviced by a qualified person.

## **Storage**

When not in use, allow to cool and dry, then fold neatly but not tightly in the original packaging without sharp bends in the heating elements. Store where no other objects will be placed upon it in a cool dry place.



## Spare Parts and Repairs

---

To order replacement parts, please go to [warmerblankets.com/collections/controllers](http://warmerblankets.com/collections/controllers)

You will need PDC information from your product, user manual or carton box. Alternatively, go to our website and use search bar to find the parts available.

You can also find this code on the [back of this user manual](#).

For our repair service, please contact our customer support at [warmerblankets.com/pages/contact](http://warmerblankets.com/pages/contact)

## Disposal of Product

---

**IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.**

### **DISPOSAL:**

Please dispose of this product responsibly. This item cannot be disposed of with general waste. Please contact your local council authority for more information on how to dispose this product. If this product is disposed of with general waste, it will end up in a landfill and will leak hazardous substances into the groundwater – effecting our food chain.



## Your Warranty

---

If you purchased with Wärmer Blankets, or one of our authorised resellers, you will automatically enrol your warranty for 1 (ONE) year. You do not need to register again for your warranty. All warranties will be carried out our terms and conditions including warranty conditions you will find out from our website at [warmerblankets.com](http://warmerblankets.com).

# Copyrights

---

Wärmer and its logo including images and contents in this manual and website is copyrighted. All intellectual property rights belong to Wärmer owner CONSUMABLE DIRECT LIMITED.

ANY UNAUTHORISED USE, MODIFICATION or DISTRIBUTION of the Wärmer logo, website image, and its contents (from website, manuals) will violate worldwide copyright, trademark, and associated laws.

We reserve the right to proceed with lawsuits to anyone who is found breaching our copyrights policy. For more details, please check our website copyright policy for more information.

## Product Dependency Code (PDC)

---

Your PDC is below:

PDC: TSK160x120-1SC / TSK200x130-1SC / TSK180x130-1SC / TSK200x180-1SC  
SKU: 103496 / 103497 / 103932 / 104018 / 104019 / 104020 / 104021

Wärmer is a registered trademark of CONSUMABLE DIRECT LTD.  
Product Produced for CONSUMABLE DIRECT LIMITED M30 0QF U.K.