

21x29.7cm



## SUNMER GAZEBO

- Operating Instructions
- Warning Information



⚠ WARNING	⚠ ADVERTENCIA	⚠ AVERTISSEMENT
<p>• Read warnings before using • <b>Avoid pinching your hands and fingers.</b> • This product may contain one or more chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. <i>Wash hands thoroughly after handling.</i></p>	<p>• Lea las advertencias antes del uso • <b>Evite pellizcarse las manos y dedos.</b> • Este producto puede contener sustancias químicas consideradas por el Estado de California como causantes de cáncer, de malformaciones congénitas u otros daños en el sistema reproductivo. <i>Lávese las manos después de manipular estas piezas. bien las manos después de manipular el producto.</i></p>	<p>• Lisez avant d'utiliser. • <b>Évitez de pincer vos mains et vos doigts.</b> • Ce produit peut contenir des produits chimiques reconnus par l'état de la Californie comme causant le cancer, des anomalies congénitales ou d'autres effets nuisibles sur la reproduction. <i>Se laver minutieusement les mains après avoir utilisé le produit.</i></p>



### OPERATION

1. Place your frame in the center of the set up area, with a partner on the other side of the 10' frame. Hold onto the two outer legs and lift frame off the ground slightly for clearance. Take a few steps backward until you have extended the frame a full arms length - approx. 4' (Fig 1.1). To improve the opening and closing action of your frame, place the canopy top over the top of the frame (Fig 1.2).

2. Use the hook & loop strips to secure each corner of the top to the frame on corresponding hook & loop already attached to the frame (Fig 2.1) and (Fig 2.2), your canopy top should now be attached to frame.

3. Grab the bottom of the middle frame section where it forms a "V" shape (Fig 3.1), lift frame off the ground slightly and slowly walk backward until the frame is fully extended. Two people hold the X truss on the opposite side and expand it until it touches the eaves of the top (Fig 3.2). Take care to avoid pinching your hands or fingers.

4. Prior to locking the leg sliders, partially fold back the canopy at each corner to increase visibility, hold the leg of the frame with one hand and lift the slider (Fig 4.1) while pushing the slider up, until the slider passes over the locking button (Fig 4.2), return folded corner of the canopy to proper position.

5. The adjustable legs offer multiple height levels. To adjust, lift the leg up and pull the inner leg until the button pops into place (Fig 5.1) Repeat one the other legs.

**Always remember to take your pop-up tent down in inclement weather to prevent damage.**

**Tent should also be properly anchored during extended use.**

#### Warning:

Please note that we do not take any responsibility for sides, roof and frame when they have broken or damaged due to wrong set up and if it has been set up in the rain as it buckles the frame by the water weight pressed on the roof. This requires 2-3 people to assemble the gazebo. You are required to use the provided guy ropes and stakes to secure the item properly. We will not be responsible to accept a return or provide a refund for the item if it has been damaged and broken by incorrect assembly / use error. This item should not be left unattended assembled overnight as again, we will not be responsible for any damage to the product caused by overnight.



(Fig 1.1)



(Fig 1.2)



(Fig 2.1)



(Fig 2.2)



(Fig 3.1)



(Fig 3.2)



(Fig 4.1)



(Fig 4.2)




(Fig 5.1)



(Fig 5.2)

**This Product is Produced for:**  
Consumable Direct Ltd  
M32 0JT  
UK

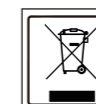

Dispose of the packaging in the proper manner. Make use of the local facilities provided for collecting paper and cardboard. Appliances marked with this symbol must not be disposed of along with household refuse. You are legally bound to dispose of old appliances separately from general household waste. Information about where they can be disposed free of charge is available from your local authorities.