

# MINI FRIDGE



**RATED  
POWER**  
48W

**QUIET  
OPERATION**  
28db

**CURRENT**  
AC & DC

**DETACHABLE  
SHELF**

**Thank you for purchasing this NETTA product.**

Please read the user manual carefully before operating this appliance.

We will update our instruction manuals if necessary.

For the most up-to-date user manual, please visit our official website: [www.nettdirect.com](http://www.nettdirect.com).

You can download a copy of up-to-date user manuals at any time in electronic format. We do not supply you with a paper-based user manual after each revision.

**Require a larger version of this  
Instruction Manual?**

**Please download electronically  
from our website and use PDF  
reader on your device to enlarge  
the text if needed.**

**[www.nettdirect.com](http://www.nettdirect.com)**

## Safety and Warnings

### Intended Use

NETTA Design is for domestic and indoor use only. This product is not intended for use by people who have lack of experience and knowledge or have reduced ability, or sensory and mental capabilities.

### Regular Check-Ups

Ensure the power cable and plug are not damaged before plugging into a socket.

## General Warnings

- Prevent the fans from getting stuck. The fans becoming stuck will result in the motor overheating which will cause a fire. Keep towels, clothes and similar things away from the fridge.
- Ensure that the cord, plug and socket are not loose. If these are loose, this may result in the cord and socket overheating and breaking – potentially causing a fire.
- Keep the appliance away from flammable items and dampness to prevent explosions or fire.
- Do not break up or re-fit the appliance.
- Do not switch the function of cool/warm abruptly. Switch the function on after 30 minutes of the appliance being switched off.
- Do not rinse this appliance with water.
- Prevent the appliance from being upside down.
- Do not drop the appliance.

## General Warnings

- Children should be supervised to ensure that they do not play with the appliance.
- Do not use electrical appliances inside the food storage compartments of the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer.
- Keep ventilation openings clear of obstructions.
- This appliance is intended to be used in households and similar applications such as: in staff kitchens, farmhouses, hotels, motels and bed & breakfasts.

## Attachments

### AC Power (Household Use)

- Put the plug of the AC power cord into the household wall socket.
- Insert the connector into the back of the mini fridge.
- Shift the power switch to the AC side.

### DC Power (In-car Use)

- The car engine is required.
- Put the plug of the DC power cord into the socket of the cigarette lighter.
- Insert the connector into the back of the mini fridge.
- Shift the power switch to the DC side.

## Operating the Product

- *To obtain an optimised cooling effect, we suggest putting in pre-chilled foods and drinks. It will take 2-3 hours for cooling food and drink.*
- *The warm setting is not designed to heat cold food, but it will preserve hot foods at a warm temperature.*
- *If applied properly, the temperature of foods can be kept for hours.*
- **Ensure you leave a small gap between the back of the fridge and the products inside. This will prevent the product you put inside from freezing.**
- Ensure that the switch of the mini fridge is in the off position.
- Insert the connector of the power cord into the socket at the back of the appliance.
- Insert the plug of the power cord into the wall socket and turn on.
- To operate the 'cooling' setting, set the power switch to cooling. The green indicator light will show when cooling.
- To operate the 'warming' setting, set the power switch to warming. The red indicator light will show when warming.

**Remember to wait at least 30 minutes between switching functions.**

## Cleaning, Maintenance and Storage

- Unplug your mini fridge.
- Wash the interior with warm water and a neutral detergent, then dry all surfaces thoroughly.
- Do not use abrasive cleaners.
- Use mild soapy water to clean the door seal.
- Before moving the appliance, unplug it and remove all items.
- Never hold/carry the appliance by the door.

## Troubleshooting

<b>Problem</b>	<b>Solution</b>
<b>Not Cooling.</b>	Check the power cable is connected and the fuse is intact. The appliance is over-filled. Appliance exposed to direct sunlight or a heat source.
<b>Unusual Noises/Noisy Operation.</b>	Appliance is not on a level/firm surface or may be touching other items.
<b>Outer Surfaces are Wet.</b>	Water source or leak near to the appliance. Dry surfaces thoroughly and move the appliance.
<b>Inner Surfaces are Wet.</b>	Door opened too often or kept open too often.

## Spare Parts and Repairs

---

To order replacement parts, please go to [www.nettadirect.com/parts](http://www.nettadirect.com/parts).

You will need PDC information from your product, user manual or carton box. Alternatively, go to our website and use search bar to find the parts available.

You can also find this code on the [back of this User Manual](#).

For our Repair Service, please contact our customer support with email on [support@nettadirect.com](mailto:support@nettadirect.com) they will provide with more details of repair service with NETTA.

## Disposal of Product

---

**IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.**

### **DISPOSAL:**

Please dispose of this product responsibly. This item cannot be disposed of with general waste. Please contact your local council authority for more information on how to dispose this product. If this product is disposed of with general waste, it will end up in a landfill and will leak hazardous substances into the groundwater – effecting our food chain.



## Your Warranty

---

If you purchased with NETTADIRECT, or one of our authorised resellers, you will automatically enrol your warranty for 1 (ONE) year. You do not need to register again for your warranty. All warranties will be carried out to our terms and conditions including warranty conditions you will find out from our website at [www.nettadirect.com](http://www.nettadirect.com).

## Copyrights

---

NETTA and its logo including images and contents in this manual and website is copyrighted. All intellectual property rights belong to NETTA owner CONSUMABLE DIRECT LIMITED.

ANY UNAUTHORISED USE, MODIFICATION or DISTRIBUTION of the NETTA logo, website image, and its contents (from website, manuals) will violate worldwide copyright, trademark and associated laws.

We reserve the right to proceed with lawsuits to anyone who is found breaching our copyrights policy. For more details, please check our website copyright policy for more information.

## Product Dependency Code (PDC)

---

Your PDC is below:

PDC: AQ-5L/AQ-15L  
SKU: 103485/103889/103972/104016/103486

NETTA is a registered trademark of CONSUMABLE DIRECT LIMITED.  
Product Produced for CONSUMABLE DIRECT LIMITED M30 0QF U.K.