

50L SENSOR BIN



CAPACITY
50L

FOUR
C BATTERIES
REQUIRED

INDICATOR
LIGHT

HANDS-FREE
OPERATION

Thank you for purchasing this NETTA product.

Please read the user manual carefully before operating this appliance.

We will update our instruction manuals if necessary.

For the most up-to-date user manual, please visit our official website: www.nettdirect.com.

You can download a copy of up to date user manuals at any time in electronic format. We do not supply you with a paper-based user manual after each revision.

**Require a larger version of this
Instruction Manual?**

**Please download electronically
from our website and use PDF
reader on your device to enlarge
the text if needed.**

www.nettdirect.com

Safety and Warnings

 
Intended Use

NETTA Design is for domestic and indoor use only. This product is not intended for use by people who have lack of experience and knowledge or have reduced ability, or sensory and mental capabilities.


General Warnings

1. Align batteries according to the positive and negative poles.
2. Do not submerge the lid into water because it is equipped with many electrical components. The trash can may be wiped with a damp cloth.
3. Do not manually force the lid to close; this can cause damage to the internal gears. If the gears are damaged, the automatic lid will not function properly.
4. Replace used batteries in a timely manner to prevent battery acid leakage. Battery acid may cause damage to the electrical components of the trash can.
5. Do not mix new and used batteries.
6. Do not place trash can in direct sunlight or a heavily moisturized environment.
7. Do not mix alkaline, standard (zinc-carbon), or rechargeable (NiCad, NiMH, etc) batteries.
8. Batteries are harmful if swallowed so keep away from young children.
9. Make sure there is enough room for the lid to operate without any blockages.


Overview

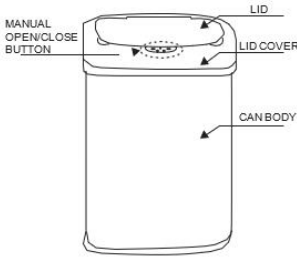

Picture 1

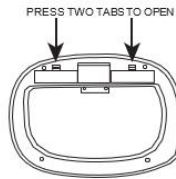 

Picture 2

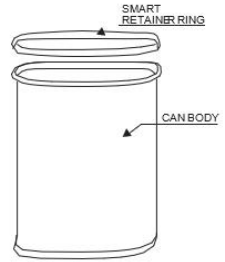 

Picture 3

Instruction

Remove the Lid Cover from the bin. Open the cover of the battery compartment located on the underside of " Picture 2" and insert four "C" size batteries then close the battery cover.

How does the smart retainer ring work?



Put the bin bag inside the bin.



Wrap the bag over the ring.



Put the ring and bag onto the top edge of the bin



The final result should look like this.

Insert the bin bag into the bin. Place the top of the bin bag through the middle of the retainer ring and wrap over the ring. Put the ring onto the top edge of the bin.

Then press the lid down onto the top of the bin. Place the rear side of the lid first then align the front and press down.

Turn on the power switch on the back of the lid. (see Picture 4). A red indicator light will turn on for 3 seconds. Then it will flash once every ten seconds, which shows that the system is on and ready.



Picture 4

To open the lid, just place your hand or any object about 7 inches (18cm) above the Infrared Sensor Zone. It will automatically close 6 seconds after your hand or object moves away.

If you press the open button next to the LED light indicator (button on the left for manual operation), the lid will open and remain open until you press the close button (on the right). This manual function allows flexible choice. If you want to close the lid, press the close button (on the right). After 2 seconds, the trash bin returns to the automatic mode.

Technical Facts

- The indicator light in the normal waiting mode flashes red once every 10 seconds.
- When the lid automatically opens, the indicator light shows green.
- While the lid is opened by the manual button, it flashes green once every three seconds.
- When the batteries are nearly used up, the indicator light flashes yellow once every 10 seconds.
- Replace the battery immediately after it runs out of energy.

Four new "C" size alkaline batteries can last up to 10,000 usages before needing to change batteries.

Cleaning, Maintenance and Storage

To clean the body of the bin, wipe it with a damp cloth.

To clean the sensors on the bin, wipe the sensor with a dry cloth.

Troubleshooting

Errors	Solutions
Lid does not open	Make sure the power is on by pressing the power button.
	Check if the batteries are placed in correctly.
	Wipe the sensor with a dry cloth.
Lid does not close / Indicator light is constantly green	Press the “Open/Close” button to close the lid.
	Check to see if there are any objects within the sensor area. If there are, remove them.
	Wipe the sensor with a dry cloth to ensure the sensor is clean and that there is no moisture on it.

If the above solutions do not correct the problem, please contact our support team at support@nettadirect.com.

Spare Parts and Repairs

To order replacement parts, please go to www.nettadirect.com/parts.

You will need PDC information from your product, user manual or carton box. Alternatively, go to our website and use the search bar to find the parts available.

You can also find this code on the [back of this user manual](#).

For our repair service, please contact our customer support via email at support@nettadirect.com. They will provide you with more details of the repair service offered by NETTA.

Disposal of Product

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

DISPOSAL:

Please dispose of this product responsibly. This item cannot be disposed of in general waste. Please contact your local council authority for more information on how to dispose this product. If this product is disposed of with general waste, it will end up in a landfill and will leak hazardous substances into the groundwater – effecting our food chain.



Your Warranty

If you purchased with NETTADIRECT, or one of our authorised resellers, you will automatically enrol your warranty for 1 (ONE) year. You do not need to register again for your warranty. All warranties will be carried out to our terms and conditions, including warranty conditions, which you can find out from our website at www.nettadirect.com.

Copyrights

NETTA and its logo including images and contents in this manual and website is copyrighted. All intellectual property rights belong to NETTA owner CONSUMABLE DIRECT LIMITED.

ANY UNAUTHORISED USE, MODIFICATION or DISTRIBUTION of the NETTA logo, website image, and its contents (from website, manuals) will violate worldwide copyright, trademark and associated laws.

We reserve the right to proceed with lawsuits to anyone who is found breaching our copyrights policy. For more details, please check our website copyright policy for more information.

Product Dependency Code (PDC)

Your PDC is below:

PDC: YS-50LOP
SKU: 104096 / 104097

NETTA is a registered trademark of CONSUMABLE DIRECT LIMITED.
Product Produced for CONSUMABLE DIRECT LIMITED M30 0QF U.K.