

ROUND WAFFLE MAKER



**RATED
POWER**
700W

WEIGHT
1.7KG

**NON-STICK
PLATES**

WARRANTY
365 DAYS

Thank you for purchasing this NETTA product.

Please read the user manual carefully before operating this appliance.

We will update our instruction manuals if necessary.

For the most up-to-date user manual, please visit our official website:
www.nettadirect.com.

You can download a copy of up to date user manuals at any time in electronic format. We do not supply you with a paper-based user manual after each revision.

**Require a larger version of this
Instruction Manual?**

**Please download electronically from
our website and use PDF reader on
your device to enlarge the text if
needed.**

www.nettadirect.com

SAFETY & WARNINGS...

INTENDED USE

NETTA Design is for domestic and indoor use only. This product is not intended for use by people who have lack of experience and knowledge or have reduced ability, or sensory and mental capabilities.


REGULAR CHECKUPS

- Ensure cables and plugs are not damaged before plugging in.
- Check all the knobs are functioning correctly.

GENERAL CAUTIONS

- Read all instructions.
- Use only on AC220-240V – For household use only.
- Do not touch hot surfaces. Use the handles.
- To protect against risk of electric shock, do not immerse the cord, plug or cooking unit in water or any other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.
- Do not operate any appliance that has malfunctioned or been damaged in any way. Never try and fix the appliance yourself. If faulty, you must contact the seller.
- Do not use outdoors or for commercial purposes.
- Do not let the power cord hang over the edge of a table or counter and do not let it touch hot surfaces.
- Do not place on or near a hot gas or electric burner or heated oven.
- Do not operate with an external timer or remote-control system.
- Unplug the unit when finished using.
- Extreme caution must be exercised when moving an appliance.
- Children should not play with the appliance. Cleaning and user maintenance should not be made by children without supervision.

DIAGRAM OF PRODUCT

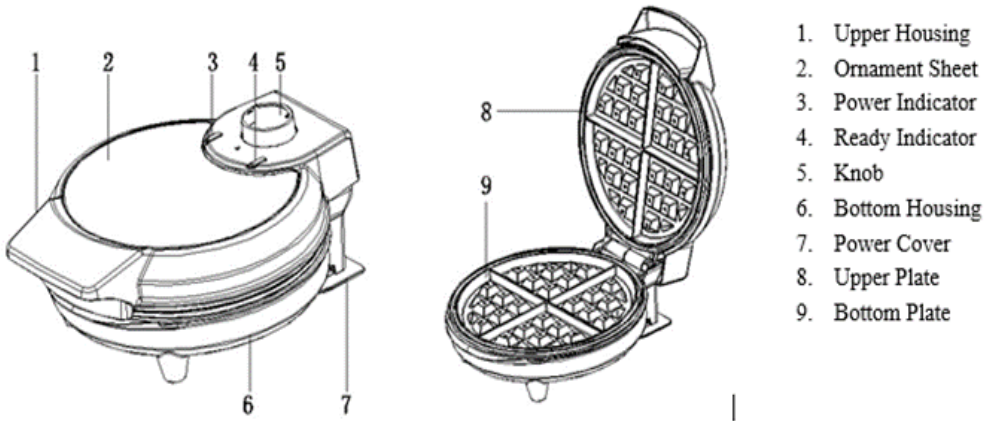

BEFORE FIRST USE

- Read all instructions carefully and keep them for future reference.
- Remove all packaging.
- Clean the cooking plates by wiping with a damp cloth or sponge.
- Do not immerse the unit in water or run water directly on to it.
- Dry with a cloth or paper towel.
- For the best results, lightly coat the cooking plates with oil.

When your waffle maker is heated for this first time, it may emit a slight smoke or odour. This is normal and does not affect the safety of your appliance.

HOW TO USE

- Close the waffle maker and plug into the correct power socket. You will notice that the 'ready' light will come on, indicating that the waffle maker has begun preheating. You can adjust the temperature with the knob.
- It will take approximately 3 minutes to reach baking temperature and then the 'ready' light will go off.
- Open the waffle maker, lightly spray with cooking oil and divide the batter mixture onto the hot plates using a piping bag or jug (do not use plastic piping bags as they will melt if they touch the hot plates).
- Close the lid of the waffle maker.
- Cook for about 3-5 minutes or until golden brown.
- To remove waffles, always use a plastic or wooden spatula. Never use a sharp object or metal as this will damage the non-stick surface of cooking plates.
- Once finished cooking, disconnect the plug from the wall outlet and leave unit open to cool.

STORAGE

- Always unplug the waffle maker before storage.
- Always make sure the waffle maker is cool and dry before storing.
- The power cord can be wrapped around the bottom of the base for storing and the waffle maker can be stored vertically to save space.

CLEANING

- Always unplug the waffle maker and allow it to cool before cleaning. The unit is easier to clean when slightly warm. There is no need to disassemble the waffle maker for cleaning. Never immerse the waffle maker in water or put in a dishwasher.
- Wipe cooking plates with a damp cloth to remove food residue. For baked on food residue, squeeze some warm water mixed with detergent over the food residue then clean with a non-abrasive plastic scouring pad or place wet kitchen paper over the grill to moisten the food residue.
- Do not use anything abrasive that can scratch or damage the non-stick coating.
- Do not use metal utensils to remove your foods as they can damage the non-stick surface.
- Wipe the outside of the waffle maker with a damp cloth only.
- Rinse and dry thoroughly with a clean cloth.
- Before the next use, lightly grease the cooking plates for easy removal of cooked waffles.

SPARE PARTS/REPAIR

To order replacement parts, please go to www.nettadirect.com/parts.

You will need PDC information from your product, user manual or carton box. Alternatively, go to our website and use search bar to find the parts available.

You can also find this code on the [back of this User Manual](#).

For our Repair Service, please contact our customer support with email on support@nettadirect.com they will provide with more details of repair service with NETTA.

DISPOSAL OF PRODUCT

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

DISPOSAL:

Please dispose of this product responsibly. This item cannot be disposed of with general waste. Please contact your local council authority for more information on how to dispose this product. If this product is disposed of with general waste, it will end up in a landfill and will leak hazardous substances into the groundwater – effecting our food chain.



YOUR WARRANTY

If you purchased with NETTADIRECT, or one of our authorised resellers, you will automatically enrol your warranty for 1 (ONE) year. You do not need to register again for your warranty. All warranties will be carried out to our terms and conditions including warranty conditions you will find out from our website at www.nettadirect.com.

COPYRIGHTS

NETTA and its logo including images and contents in this manual and website is copyrighted. All intellectual property rights belong to NETTA owner CONSUMABLE DIRECT LIMITED.

ANY UNAUTHORISED USE, MODIFICATION or DISTRIBUTION of the NETTA logo, website image, and its contents (from website, manuals) will violate worldwide copyright, trademark, and associated laws.

We reserve the right to proceed with lawsuits to anyone who is found breaching our copyrights policy. For more details, please check our website copyright policy for more information.

PRODUCT DEPENDENCY CODE (PDC)

Your PDC is below:

PDC: SW-258W
SKU: 103352

NETTA is a registered trademark of CONSUMABLE DIRECT LIMITED.
Produced in China for CONSUMABLE DIRECT LIMITED M30 0QF U.K.