

Artificial Christmas Tree

Without Lights



**FIRE
RESISTANT
TIPS**

**HIGH-
QUALITY
PE & PVC**

**REAL
PINECONES**

**FOLDABLE
BASE**



Thank you for purchasing this VERYMERRY product.

Please read the user manual carefully before operating this appliance.

We will update our instruction manuals if necessary.

For the most up-to-date user manual, please visit our official website: www.netta.co.uk.

You can download a copy of up-to-date user manuals at any time in electronic format. We do not supply you with a paper-based user manual after each revision.

**Require a larger version of this
Instruction Manual?**


**Please download electronically
from our website and use PDF
reader on your device to enlarge
the text if needed.**

www.netta.co.uk

Assembling the Product

This package contains:

- Tree Top
- Middle Section
- Bottom Section
- Tree Stand

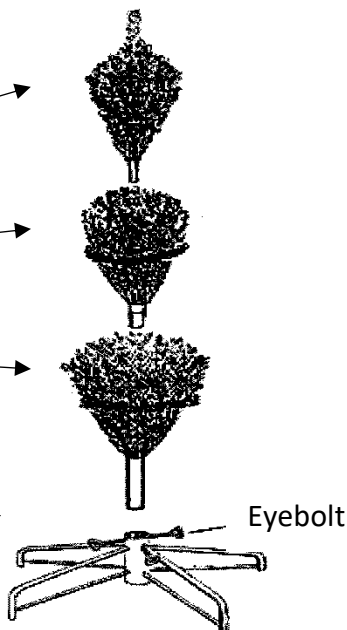

1. Assemble the Tree Stand. For metal fold-up stands, open and line up the hole for the Eyebolts and insert the Eyebolts.
2. Insert the Bottom Section of the tree into the stand and secure it by tightening the eyebolts. **Do not over-tighten the eyebolts.**
3. Remove the band from the Bottom Section of the tree and shape the branches. See instructions for shaping your tree in the next section of the manual.
4. Once the Bottom Section is complete, insert the Middle Section of the tree into the Bottom Section pole. Remove the band from the Middle Section of the tree and shape it.
5. Once the Middle Section is complete, insert the Tree Top into the Middle Section Pole.

Shaping your Tree

1. Open the branch as illustrated in Fig. A
2. Form a fan shape with the front branches (Fig. B).
3. Pull two branches forward towards the centre and curve them upwards (Fig. C)
4. Place one branch to each side, curving it upwards (Fig. D & E).
5. Continue this sequence as illustrated in Fig. C, D & E until complete (Fig. F).
6. Curve the branch ends upward for a natural look.

**A****B****C****D****E****F**

Shaping your Tree Top

1. When the rest of the tree has been shaped, insert the Tree Top into the Middle Section Pole.
2. Pull the branches of the lower layers in an even circular pattern, curving the branches upward for a natural look.
3. Repeat for each layer until complete.

Spare Parts and Repairs

To order replacement parts, please go to netta.co.uk/collections/parts

You will need PDC information from your product, user manual or carton box. Alternatively, go to our website and use search bar to find the parts available.

You can also find this code on the [back of this User Manual](#).

For our Repair Service, please contact our customer support with email on support@netta.co.uk they will provide with more details of repair service with NETTA.

Your Warranty

If you purchased with NETTADIRECT, or one of our authorised resellers, you will automatically enrol your warranty for 1 (ONE) year. You do not need to register again for your warranty. All warranties will be carried out to our terms and conditions including warranty conditions you will find out from our website at www.netta.co.uk.

Copyrights

NETTA and its logo including images and contents in this manual and website is copyrighted. All intellectual property rights belong to NETTA owner CONSUMABLE DIRECT LIMITED.

ANY UNAUTHORISED USE, MODIFICATION or DISTRIBUTION of the NETTA logo, website image, and its contents (from website, manuals) will violate worldwide copyright, trademark and associated laws.

We reserve the right to proceed with lawsuits to anyone who is found breaching our copyrights policy. For more details, please check our website copyright policy for more information.

Product Dependency Code (PDC)

Your PDC is below:

PDC: YF-T0758-5 / YF-T1218-6 / YF-T1786-7
SKU: 103940 / 103941 / 103942

VERYMERRY is a registered trademark of CONSUMABLE DIRECT LIMITED.

Product Produced for CONSUMABLE DIRECT LIMITED, 78 CAWDOR STREET, ECCLES, GREATER MANCHESTER, M30 0QF, U.K.