

ALARM PADLOCK

Sounds a piercing 110dB alarm for 10 seconds when tampered

Anti-muffle design: alarm sound can not be concealed

2 Settings: lock with alarm or without alarm

Alarm resets automatically

Batteries are inaccessible when the lock is engaged for added security

Weather proofed

Zinc alloy body, case-harden, chrome hi-grade steel shackle resists cutting

Powered by (6) 1.5V LR44 button cell batteries (included)

Includes:

(6) LR44 button cell batteries

(3) High-security cut keys

IMPORTANT NOTE:

- Batteries are worn out when alarm continues beeping, please replace batteries.

- To turn off the alarm, unlock the padlock and remove the shackle.


Battery Replacement

1. Remove shackle from lock casing.
2. Locate screws inside lock body, and unscrew (illustration A).
3. Remove bottom of lock casing and locate battery cartridge (illustration B).
4. Remove old batteries from cartridge and replace with the same new batteries.

Illustration A




Illustration B

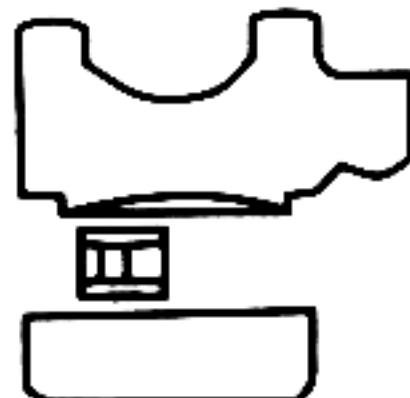

Usage Directions:

1. Insert the key, turn in a clockwise to pull out the shackle.
2. Replace shackle into lock hole with groove on key port side. The lock will vibrate to indicate that the alarm is active.
3. After 15 seconds when the lock is vibrated again, it will give off an alarm and keep going with every movement or vibration.
4. Each alarm sounding will last approximately 10 seconds.
5. The padlock will not sound, while the shackle with groove is opposite the key port side.

Use With Alarm (for use on stationary objects or vehicles)

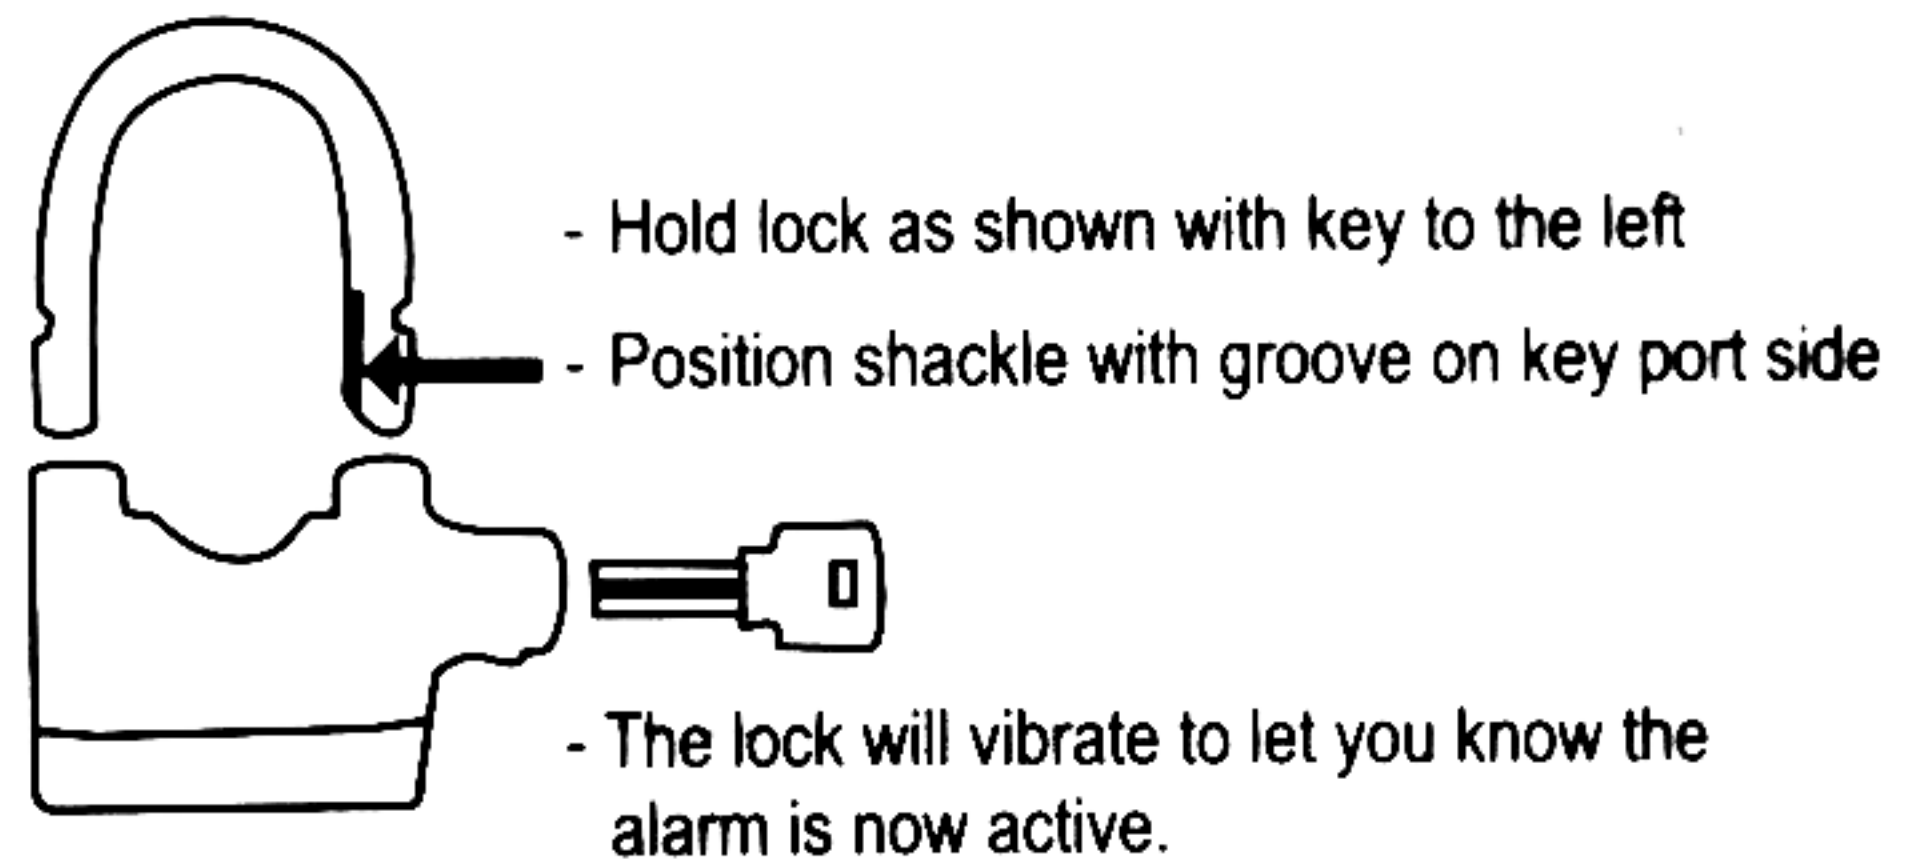

Use Without Alarm (for use on moving objects or vehicles)

