## MICRO SD CARD SONGS TRANSFER

- Insert a Micro SD Card in the Pocket FM Bluetooth Speaker.
- Connect with a PC / Laptop using the provided mini USB cable. Your PC / Laptop will recognize the Pocket FM Bluetooth Speaker as an external drive.
- · Now explore the folders within the inserted Micro SD card and transfer songs.

## TECHNICAL SPECIFICATIONS

**Output Power** : 3W (RMS) FM Radio Frequency Frequency : 100Hz-18KHz **Battery Capacity** 

Playback Time : DC5V -- 500mA : Up to 10 Hours Input

Maximum Current : 400mA Charging Time : 3 to 6 Hours Consumption

USB / SD Playback : MP3, WAV

: 87.5 - 108Mhz

: 1800mAh

#### TROUBLESHOOTING

The speaker is not working.

Check if the speaker is turned ON and the volume is adjusted properly. Make sure that the device is paired/cable connected and the music source volumes is not muted.

· There is no power when speaker is turned ON.

Please make sure that the speaker is properly charged before use.

In Radio mode all channels are not found.

Extend the Antenna. Insert the AUX cable for better reception. Move to better coverage area.

## WARRANTY STATEMENT

Amkette's Pocket FM Bluetooth Speaker is backed by a 1year performance warranty against any manufacturing defects in material or workmanship from the date of original purchase. This warranty entitles the purchaser to get the product repaired or replaced under the following conditions:

- The warranty applies to the original purchaser. Proof of original purchase is required.
- The warranty does not cover the damage caused by misuse, abuse or improper storage.
- In no event shall Amkette be responsible for any direct, incidental, consequential or other damages of any kind. Please contact our Technical Support Line and/or send the defective product, postage pre-paid, together with the proof of purchase to our Customer Care Service Center to avail warranty service. Return postage will be paid by us.

## **CUSTOMER CARE**

Amkette House, C-64/4, Okhla Phase-II, New Delhi-110020



1800-11-9090 (Toll Free) (9:30 AM - 6:00 PM)



+91 9312691448 (9:30 AM - 6:00 PM)



techsupport@amkette.in

For Hassle Free Service Register Your Product at www.amkette.com/register



## IN THE BOX









# **POWER ON / OFF**

- Insert the provided 1800mAh Battery.
- Now slide right → the ON / OFF button to turn ON the Speaker.
- To turn OFF the Speaker, slide left ← the ON / OFF button.

#### **HOW TO CHARGE**

Use the provided mini USB cable with product and connect it to the USB interface of a PC / Laptop or USB charger. Depending on the charger it will take 3 to 10 hours to fully charge. The LED lights will start blinking when charging, and will stop once fully charged.

#### **FM RADIO MODE**

- · Press the Mode button to switch to FM Mode.
- Long press Play / Pause button to search and auto save the channels.
- Alternatively, user can also type in the frequency directly and press the Play / Pause button to listen to a particular channel.
- · Use Next / Previous buttons to switch stations.

## **DIGITAL CLOCK SETTINGS**

To set time, follow the below steps:

- Press the Mode button to switch to Clock Mode.
- Long press the Mode button, the hours clock will start flashing.
- Input valid entry using the input pad.
- Now short press the Mode button, Minutes clock will start flashing.
- · Again use the input pad to type in minutes digits.
- Press Play / Pause button to confirm the settings.

### **BLUETOOTH PAIRING**

- Turn the speaker ON, by default the speaker is in Bluetooth Mode.
- Search for "Amkette FM Bluetooth Speaker" on your Smartphone and connect.
- Short press the "Play" button to answer the phone call.
- Double click the "Play" button to redial the last call last time.

Note: When the speaker is under Bluetooth mode, it will be connected to the last connected device by default. If you want to connect the speaker to another device, you need to disconnect from the original device

# **RECORDING FUNCTION**

Note: The recording function works only when the Micro SD card is inserted.

- · Insert the Micro SD card.
- Press the record button "REC" to start recording.
- Press the record button "REC" again to stop the recording.

The recorded audio auto-plays when the recording is stopped and is saved into Micro SD card.

## **USB / MICRO SD CARD PLAYBACK**

- Insert a Micro SD card or a USB drive to play MP3 music.
- $\bullet\,$  Press the Next / Previous buttons to change songs.
- Alternatively, user can also type in the song number directly to play it.

# **USB SPEAKER MODE**

Connect with a PC using a mini USB cable to play songs from your PC  $\it /$  Laptop directly.

# EARPHONE / HEADPHONE JACK CONNECTION

Use a Earphone / Headphone for a personal audio experience.

If prompted for a password, please enter "0000" and click OK.