

 


QUICK START GUIDE

BOOMER COMPACT SOUNDBAR PRO


WIRELESS SPEAKER WITH INTEGRATED SUBWOOFER + REMOTE CONTROL

KNOW YOUR SPEAKER

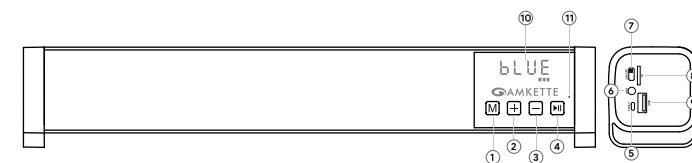

- 1 Mode Button 2 Vol. Up 3 Vol. Down 4 Play / Pause 5 Type C Charging Port
- 6 AUX Port 7 ON/OFF 8 TF Card 9 USB Port 10 LED Display 11 MIC

 KNOW YOUR REMOTE CONTROL

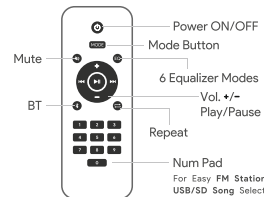

- Power ON/OFF
- Mode Button
- 6 Equalizer Modes
- Vol. +/-
- Play/Pause
- Repeat
- Num Pad
- For Easy FM Station or USB/SD Song Selection

 
WHAT'S IN THE BOX

Speaker, Remote Control, Aux Cable, Charging Cable, 2xAAA Batteries, Quick Start Guide

GETTING STARTED: CHARGING THE SPEAKER

Charge the speaker before use and keep speaker OFF for faster charging.

- Connect the Type C end of the included Type C cable to the USB Charging Port of the speaker.
- Connect the standard USB plug end of the cable to a powered USB port on a Desktop / Laptop or any 5V USB AC adaptor (Not included).

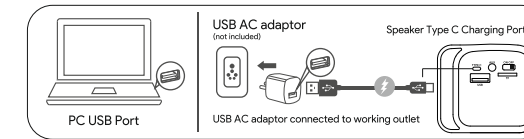

The status indicator light will be solid RED when charging and will turn OFF once fully charged.

POWER ON / OFF


Slide Down to Switch ON the speaker. **ON** Slide Up to Switch OFF the speaker. **OFF**

BT PAIRING

BT pairing with Smartphone or Laptop for the first time.

- Turn ON the "Amkette CSB-16 W Speaker".
- Open BT Setting on your device.
- Select "Amkette CSB-16 W Speaker".

 Note 1: When the speaker is under BT mode, it will be connected to the last connected device by default. If you want to connect the speaker to another device you need to disconnect from the original device.

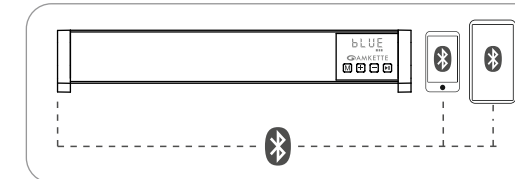

OPERATING FM RADIO

- Press (MODE **M**) button) to switch into FM mode.
- Long Press (Play / Pause **▶**) button) to automatically search for available channels. When the searching is finished, it will start to play the first channel.
- Single Press (Volume **+** / **-** button) to browse and select channels.

Note: Use AUX cable for better FM reception.

AUX PLAYBACK

- Simply insert an AUX cable to enable AUX Playback.
- Long Press (Volume **+** / **-** button) for Volume Up / Down.
- Single Press (Play / Pause **▶**) button) to Mute the speaker.

USB / MICRO SD PLAYBACK

- Simply insert a USB Drive or MICRO SD CARD to start listening.
- Long Press (Volume **+** / **-** button) for Volume Up / Down.
- Single Press (Volume **+** / **-** button) for Next / Previous track.
- Single Press (Play / Pause **▶**) button) to Pause the speaker.

Note: It supports FAT 32, NTFS, EXFAT Drive.

MODE SWITCHING

When the speaker is ON, single-press the **Mode Button** on the Speaker or Remote to switch between BT, USB, Micro SD Card and AUX modes.

TWS (TWIN SPEAKER PARING) You can pair two of these speakers for a truly grand experience.



Turn ON both the speakers. Make sure they are not connected to any device.

- Long Press Mode **M** button on ONE of the Speakers.
- Both the speakers will make a single beep sound and get paired in TWS mode.
- Turn on your BT device (Smartphone or Laptop) and connect with "Amkette CSB-16 W Speaker".

To discontinue the TWS functionality of the speaker long press Mode **M** button. You will hear a single beep sound when TWS functionality is discontinued.

TROUBLESHOOTING

The speaker is not working.

- Check if the speaker is turned ON and the volume is adjusted properly.
- Make sure that the device is paired / cable connected and the music source volumes is not muted.

There is no power when the speaker is turned ON.

- Please make sure that the speaker is properly charged before use.

The speaker is not able to pair with my device.

- Turn OFF the BT of any other device which is already paired & then retry.
- Restart the devices and speaker, and then retry.

I am using FM mode but the speaker is unable to receive any Radio channels.

- Use AUX cable for better FM reception.
- You can adjust the speaker in different positions and directions to get a better signal.

SPECIFICATIONS

BT	v5.0
Input	DC5V/500mA
FM Radio	YES
Frequency Response	100Hz-20KHz
Modes	AUX, USB, MICRO SD CARD
Ouput	8W x 2 + 1 x Passive Radiator
Drivers	52mm Neodymium
Range	Up to 10m
TWS	YES
Playback Time	up to 8 Hours
Charging Time	2-3 Hrs
MIC	YES
Battery Capacity	2000 mAh
Weight	710g
Dimensions	400*55*70mm

WARRANTY

Amkette Boomer FX Pro Speaker is backed by a 1 year performance warranty against any manufacturing defects in material or workmanship from the date of original purchase. This warranty entitles the purchaser to get the product repaired or replaced at its discrete under the following conditions:

- The warranty applies to the original purchaser. Proof of original purchase is required.
- The warranty does not cover the damage caused by misuse, abuse or improper storage.
- In no event shall Amkette be responsible for any direct, incidental, consequential or other damages of any kind.

Please contact our Technical Support Line and/or send the defective product, postage pre-paid, together with the proof of purchase to our Customer Care Service Center to avail warranty service. Return postage will be paid by us.

Customer Care Service Center

Amkette House, C-64/4, Okhla, Phase-II, New Delhi-110020

1800-11-9090 (Toll Free) (9:30 AM - 6:00 PM) +91 9312691448 (9:30 AM - 6:00 PM) techsupport@amkette.in

For Hassle Free Service Register Your Product-www.amkette.com/register