

TECHNICAL SPECIFICATIONS

Output Power	: 3W	FM Radio Frequency	: 87.5 – 108MHz
Frequency	: 100Hz—18KHz	Battery Capacity	: 1800mAh
Input	: 5V --- 500mA	Playback Time	: 12 Hrs
Maximum Current Consumption	: 400mA	Charging Time	: 3 Hrs
		USB / SD Playback	: MP3, WAV

TROUBLESHOOTING

- **The speaker is not working.**
Check if the speaker is turned ON and the volume is adjusted properly. Make sure that the device is paired/cable connected and the music source volumes is not muted.
- **There is no power when speaker is turned ON.**
Please make sure that the speaker is properly charged before use.
- **In Radio mode all channels are not found.**
Extend the Antenna. Insert the AUX cable for better reception. Move to better coverage area.

Warranty Statement

 
 
 
Amkette's Portable Multimedia FM Speaker is backed by a 1 year performance warranty against any manufacturing defects in material or workmanship from the date of original purchase. This warranty entitles the purchaser to get the product repaired or replaced under the following conditions:

- The warranty applies to the original purchaser. Proof of original purchase is required.
- The warranty does not cover the damage caused by misuse, abuse or improper storage.
- In no event shall Amkette be responsible for any direct, incidental, consequential or other damages of any kind.

Please contact our Technical Support Line and/or send the defective product, postage pre-paid, together with the proof of purchase to our Customer Care Service Center to avail warranty service. Return postage will be paid by us.

Customer Care Service Center

Amkette House, C-64/4, Okhla, Phase-II, New Delhi-110020




For Hassle Free Service Register Your Product
www.amkette.com/register



Let us care for our planet.
Please help us dispose
off this product
responsibly, if not in
use any longer.
Visit www.amkette.com/ewaste

POCKET FM Multimedia Speaker

 AMKETTE
Digital Life Redefined

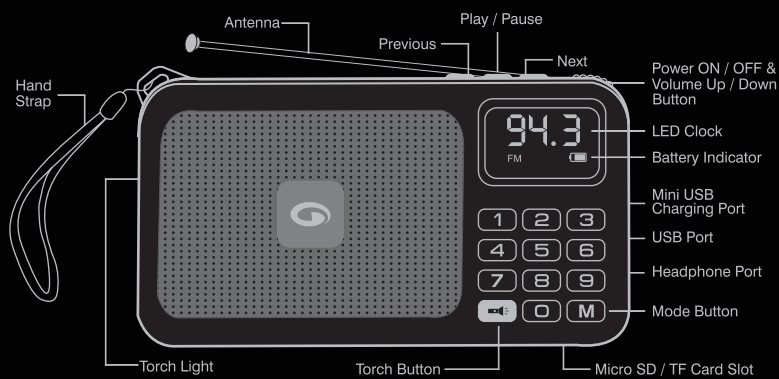

User Guide

IN THE BOX



Speaker



User Guide



Mini USB Cable



Battery



Hand Strap

POWER ON

- Insert the provided 1800mAh battery.
- Now rotate the ON / OFF button anti clockwise to turn on the product.

HOW TO CHARGE

Use the provided mini USB cable with product and connect it to the USB interface of a PC / Laptop or USB charger. Depending on the charger it will take 3 to 10 hours to fully charge. The LED lights will start blinking when charging, and will stop once fully charged.

DIGITAL CLOCK SETTINGS

- To set time, follow the below steps.
- Long press the Mode button, the hours clock will start flashing.
 - Input valid entry using the input pad.
 - Now short press the Mode button.
 - Minutes clock will start flashing.
 - Again use the input pad to type in minutes digits.
 - Press Play / Pause button to confirm the settings.

FM RADIO MODE

- Press the Mode button to switch to FM mode.
- Long press play / pause button to search and auto save the channels.
- Alternatively, user can also type in the frequency directly & press the Play / Pause button to listen to a particular channel.
- Use Next / Previous buttons to switch stations.

USB / SD CARD PLAYBACK

- Insert a SD card or a USB drive to play music.
- Press the Next / Previous buttons to change songs.
- Alternatively, user can also type in the song number directly to play it.

USB SPEAKER MODE

Connect with a PC using a mini USB cable to play songs from your PC / Laptop directly.

SD CARD SONGS TRANSFER

- Insert a SD Card in the Multimedia FM Speaker
- Connect with a PC / Laptop using the provided mini USB cable. Your PC / Laptop will recognize the Pocket Multimedia FM Speaker as an external drive.
- Now explore the folders within the inserted SD card and transfer songs.

CONNECTION JACK

Use a Earphone / Headphone for a personal audio experience.