



# MASSARELLI'S®

MAKERS OF FINE STONE GARDEN ACCENTS

## SET UP INSTRUCTIONS

### 3561 52" CLASSIC LION HEAD FOUNTAIN

Open the bag containing the pump kit **P16018**. In the kit you will find:

- 1 - 40160 (160 gallon per hour pump)
- 1 - hose clamp
- 1 - 27" long piece of 1/2" clear tubing
- 1 - rubber stopper

1. Place the pedestal on a firm and level surface where fountain will remain. To level pedestal, place level on the top of the pedestal. Level in (2) Two directions left to right and front to back. Shim as needed. Place the largest shell on the ground near the pedestal.

2. Find the pump, the piece of 1/2" clear tubing 27" long, the rubber stopper and the hose clamp. Place the pump in the pump house located in the center of the large shell and run the plug end of the electrical cord down the PVC pipe in the pump house. Retrieve the power cord from under shell. Run the power cord down the hole that is through the pedestal. Retrieve the power cord from under pedestal and place in groove in the bottom of the pedestal. Place the large shell on the pedestal. While placing the shell on the pedestal carefully pull the remainder of the power cord until all is hidden inside the fountain. Slip the rubber stopper onto the power cord about 10" from the pump. Insert the rubber stopper snugly into the PVC pipe.

Attach one end of the 1/2" clear tubing onto the outlet side of the pump with the hose clamp.

Adjust the dial type flow control located on the front of the pump to the full open (+) position.

4. Position the large shell on pedestal and level. To level shell, place the level on the top rim of the pump house in the center of the shell. Level in (2) Two directions left to right and front to back. **Shim if needed.**

5. Find the second shell. On a padded surface **carefully** lay the second shell on its side. In the center of the second shell there is a PVC pipe. Clean any excess concrete and or tape from both ends of this PVC pipe.

6. Place a piece of padding on the pump house located in the center of the large shell. Place the second shell on pump house while running the 1/2" clear tubing up thru the hole in the center housing of the second shell. Remove padding. Position the second shell centered on top of the pump house located in center of large shell. To level shell, place the level on the top outside rim of the shell. Level as stated in step #4.

7. Find the finial. In the center of the finial you will see a PVC pipe. Clean any excess concrete and or tape from this PVC pipe. Trim the 1/2" clear tubing 1/2" shorter than the height of the finial. Insert the 1/2" clear tubing into the PVC pipe in the bottom of the finial and slide the finial down onto the center housing of the second shell. Position the finial on the fountain.

8. Find the drain plugs and insert them snugly into the drain insert located in both shells of the fountain. Remove any tape and or dirt from the drain insert before you insert the drain plug.

9. Fill shells with tap water and plug pump into a 110VAC GFCI protected outlet. Adjust the water flow to the finial using the dial type flow control located on the front of the pump until the desired result is achieved.

3561sup

4/25/11