

WARNING - BEFORE INSTALLING THIS PRODUCT

- Verify all parts listed are in the box. If any parts are missing please contact the retailer for assistance.
- Read and understand all warnings and safety guidelines.
- Inspect product and if damage is found **DO NOT INSTALL**. Please contact the retailer for replacement.
- Verify that your electrical system can support the specified voltage limits for this product.
- If you are not qualified to work on vehicle wiring systems please seek professional assistance.
- Once installed do not look directly into LEDs while in operation! This may cause momentary blindness and/or eye damage.
- Usage of this product is at sole risk and responsibility of the user. Please follow all local, state and federal laws.

INCLUDED

- 1x LED light Bar
- 1x Cigarette lighter plug switch
- 1x Permanent mount switch
- 2x Magnet / suction feet
- 1x Stainless steel mounting bracket
- Mounting hardware


INSTALLATION

Both cigarette lighter plug switch and permanent mount switch are provided in the package. If you want to use the permanent mount switch:


1. Unscrew the cigarette plug switch from the light bar harness.
2. Connect the permanent switch to the light bar harness.
3. Connect the 2 wires on the permanent switch to a 12 VDC fused (5A) power supply. Connect black wire to chassis ground.
4. Mount switch in your preferred location.

Two magnetic/suction feet are mounted by default on the light bar. To switch to the permanent mount:

1. Remove the magnetic/suction feet by removing the rubber on the magnet and remove the bolt.
2. Use the same bolt to mount the stainless steel bracket to the light bar.
3. Use 4 bolts of proper length (not provided) to mount the stainless steel plate to the vehicle.

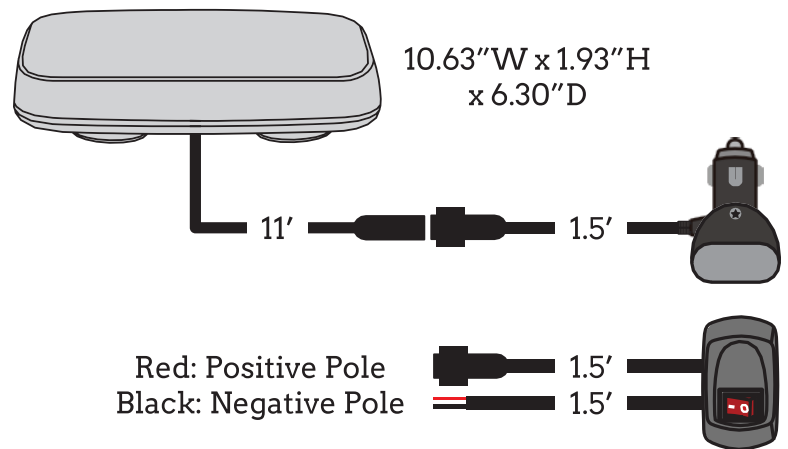


MAGNETIC/SUCTION FEET

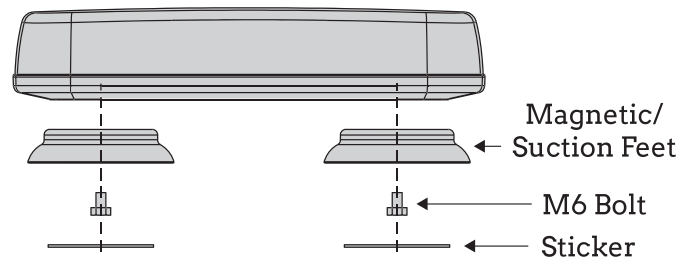

***Magnetic/suction feet not recommended for highway use. For speeds above 45mph the permanent mount must be used.**

PERMANENT MOUNT

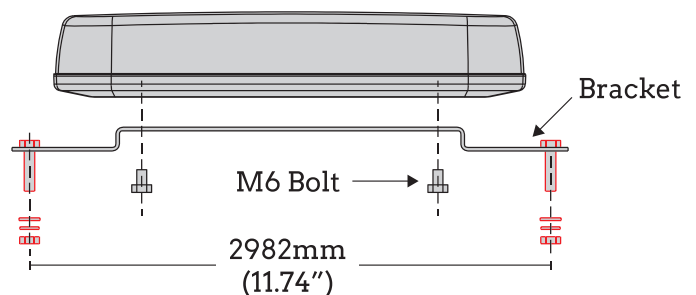

***Hardware shown in red not included.**

MODE SELECTION

Flash Pattern Selection:

1. Press the Pattern Selection button for less than 1 second to switch to the next pattern.
2. Press and hold the Pattern Selection button for 1-3 seconds to switch to the previous pattern.

Color Selection:

1. Press and hold the Pattern Selection button for 3-5 seconds to cycle through amber, amber/white and white color modes.
2. Press and hold the Pattern Selection button for more than 5 seconds to switch to low power mode. Press and hold for another 5 seconds to switch back to high power mode.

FLASH PATTERNS			
1	Single	14	CW Rotation
2	Single - Slow	15	CCW Rotation
3	Double	16	CW Constant Flash
4	Triple	17	CCW Constant Flash
5	Quad	18	CW Single
6	Octa	19	CCW Single
7	Twelve	20	CW - CCW Constant Flash
8	Half / Half - Octa	21	Double - Rotation
9	Cross - Octa	22	All Quick - Half Quad
10	One - One Single	23	All Quick - Single - Fast Quad
11	One - One Octa	24	Left Steady - Right Single
12	CW Triple	25	Right Steady - Left Single
13	CCW Triple	26	Steady On



CCW= Counterclockwise **CW**= Clockwise
26 flash patterns repeat in amber or white or amber/white color modes.

WARRANTY

ARC Lighting provides a 5 year warranty against manufacturing defects from date of purchase. If warranty service is needed, please contact the authorized dealer of where your product(s) were originally purchased.

Customer Support:

- Phone: (888) 608-2220
- Email: support@arc.lighting
- Website: www.arc.lighting/warranty-claim



⚠ **WARNING: CANCER AND REPRODUCTIVE HARM**
WWW.P65WARNINGS.CA.GOV