

4-7/8" (124mm)

.....

2-3/8" (61mm)

4-3/8" (112mm)

с

2' (610mm)

 $\overline{}$

0

Mounting gasket



SPECIFICATIONS

- Input Voltage: 12-24VDC
- Operating Current: 0.84A @ 12VDC
- Operating Temperature: -40° to 149°F (-40° to 65°C)

15/16"

(24mm)



INCLUDED

1x LED light bar

- 1x Mounting Bezel
- 1x 3M VHB tape
- 1x Mounting Gasket
- Mounting hardware



INSTALLATION

- 1. Mount to a flat surface or one with minimal curvature
- 2. Mark drill hole locations on the mounting surface using the gasket or VHB tape as a template.
- 3. Drill a 9/16" (14mm) hole for the wires protruding from the rear of the unit at the correct location. Deburr any sharp edges from this hole.
- Mount the light along with the 4. mounting gasket. Use the selftapping screws provided to secure.

WIRING

Black - To chassis ground = White - To +VDC and memory function 1 (fuse @ 2A) = Gray - To +VDC and memory function 2 (fuse @ 2A) **Red** - To +VDC and memory function 3 (fuse @ 2A) Yellow - Pattern selection

- Apply YELLOW wire to +VDC:
 - Less than 1 second for next pattern
 - 2-4 seconds for previous pattern
 - 7+ seconds for steady burn
- Synchronization: After setting each light at the right pattern, connect yellow wires of all light heads together.

0

Phase Operation: Phase 1 flashes simultaneously with Phase 1, Phase 2 flashes simultaneously with Phase 2, Phase 1 alternates with Phase 2 (Up to 8 units can be synchronized.)







BUILTBRIGHT

INSTALLATION INSTRUCTIONS WORK BAR STROBE 4 #BB6010A



FLASH PATTERNS			
1	Single Flash, ECE R65 Phase 1*	12	Quintuple Flash Phase 2
2	Single Flash, California Title 13 Phase 1*	13	Combination Single/Double Flash Phase 1
3	Double Flash Phase 1*	14	Combination Single/Double Flash Phase 2
4	Triple Flash Phase 1*	15	Combination Single/Triple Flash Phase 1
5	Single Flash, ECE R65 Phase 2	16	Combination Single/Triple Flash Phase 2
6	Single Flash, California Title 13 Phase 2	17	Combination Single/Quintuple Flash Phase 1
7	Double Flash Phase 2	18	Combination Single/Quintuple Flash Phase 2
8	Triple Flash Phase 2	19	Single Flash Left/Right Split
9	Quadruple Flash Phase 1	20	Strobe
10	Quadruple Flash Phase 2	21	Cruise(20%)
11	Quintuple Flash Phase 1	22	Steady Burn

* Sync w/ 6002X Series Mini Bar



WARRANTY

ARC Lighting provides a 5 year warranty against manufacturing defects from date of purchase. If warranty service is needed, please contact the authorized dealer of where your product(s) were originally purchased.

Customer Support:

- Phone: (888) 608-2220
- Email: support@arc.lighting
- Website: www.arc.lighting/warranty-claim







BASTROP, TEXAS 78602 UNITED STATES OF AMERICA WWW.BUILT-BRIGHT.COM



