 



Tutorial: Use of Jrumz Expression Plus

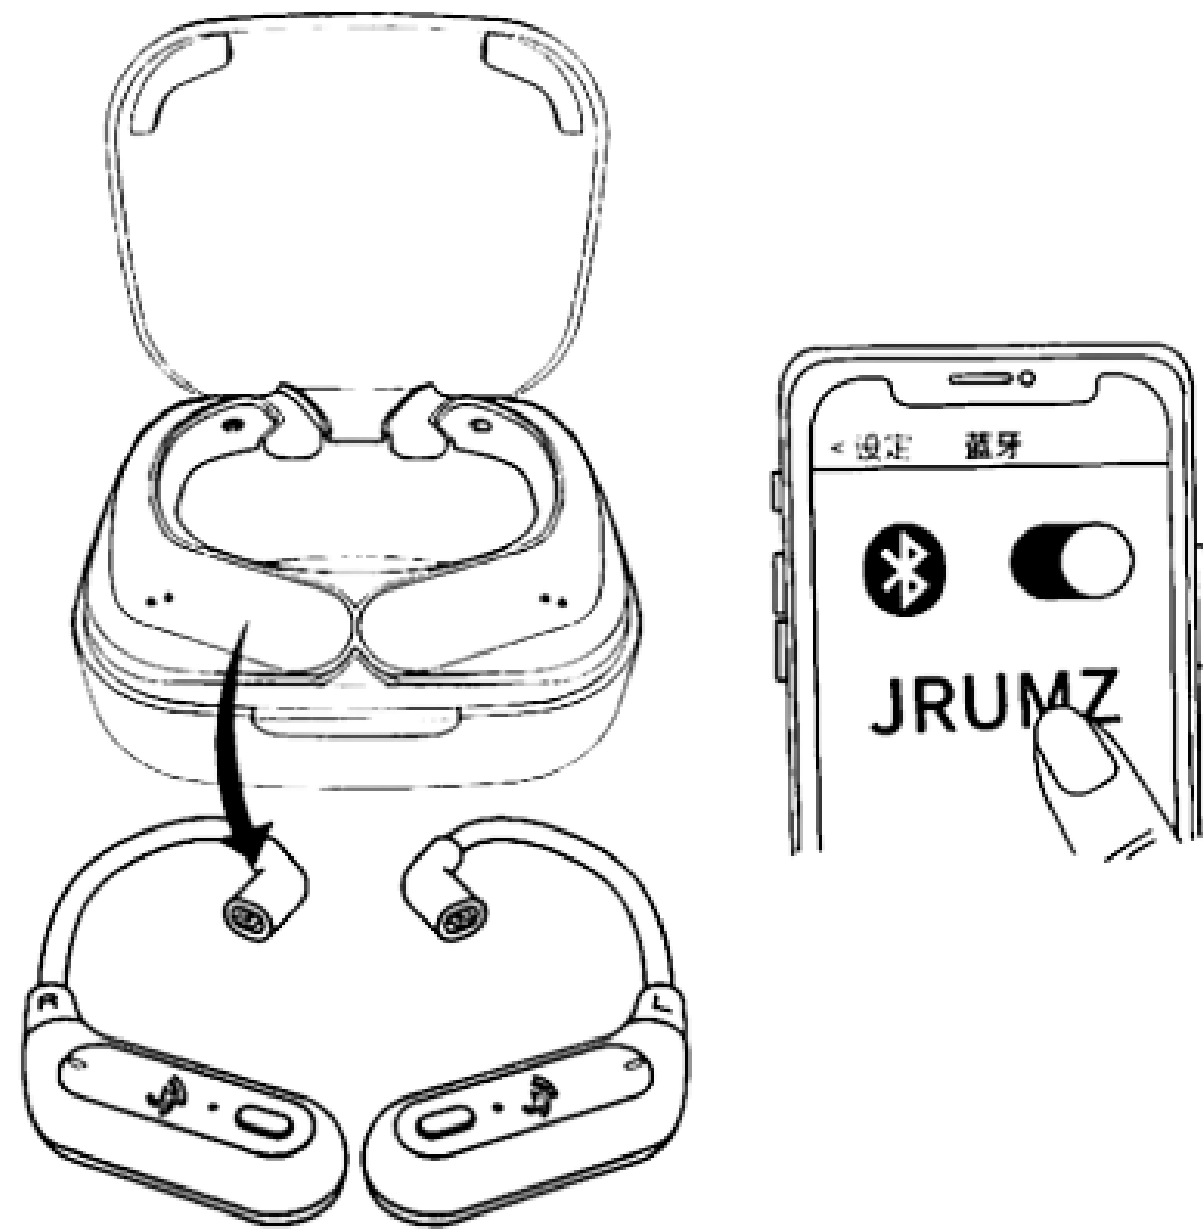

- ① Open the charging case cover. The Jrumz earphones will automatically power on and enter pairing mode.
- ② Open the Bluetooth settings in your mobile device and search for JRUMZ. Connect to JRUMZ. The JRUMZ earphones should pair with your mobile device within 6 seconds.
- ③ Once the JRUMZ earphones pair with the mobile device, the earphones will automatically connect to the mobile device each time the earphones are removed from the charging case.

*Please confirm that your mobile device is in Bluetooth pairing mode when connecting to JRUMZ. Otherwise, it will not automatically connect to the JRUMZ earphones.

 
Correctly And Comfortably Wearing JRUMZ

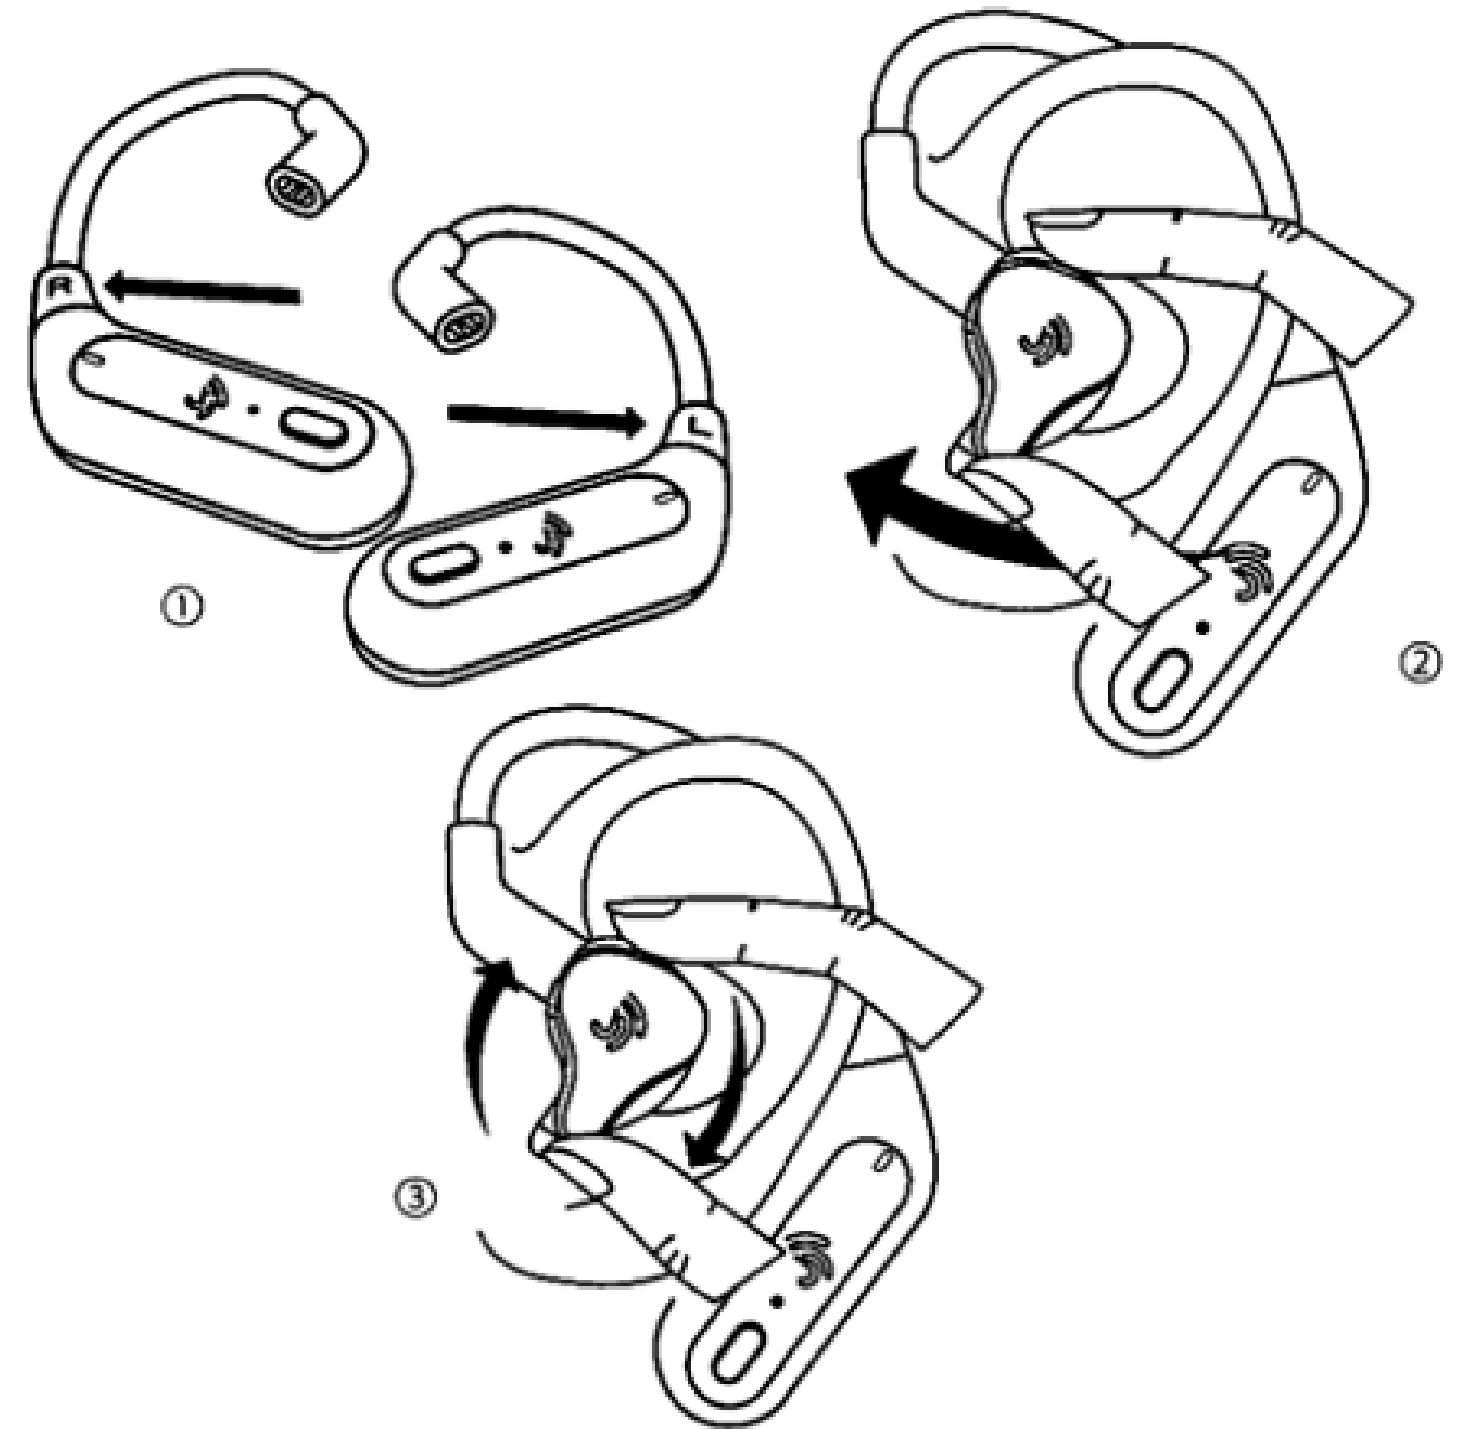

- ① Correctly distinguish the left and right earphone by checking the logo on each earpiece. "L" represents the left side, while "R" represents the right.
- ② Place the earphone in your ears by placing the blue-tooth piece behind your ear and gently pushing the earphone straight into your ear.
- ③ Once you place the blue-tooth piece onto the back of your ear, slightly rotate it to adjust the seal and comfort for the best audio experience.


Function and Operation of JRUMZ

Left and right earphone touch keys are available on the device.
The functions may differ depending on the device.

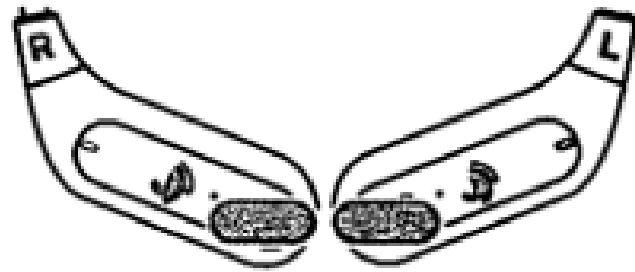


Manual startup

the left and right earphones press the touch key for 3 seconds to turn on.
(The blue light of the earphone indicator will be on for 2 second and there will be a prompt sound.)

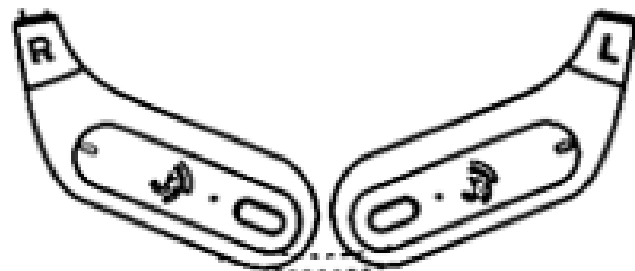

Pairing left and right earphones

When the earphone is turned on, it will automatically enter the pairing state.
(After the pairing is successful, the red & blue lights of the main unit alternately flash, the blue light of the auxiliary machine flashes slowly, and there is a prompt tone.)

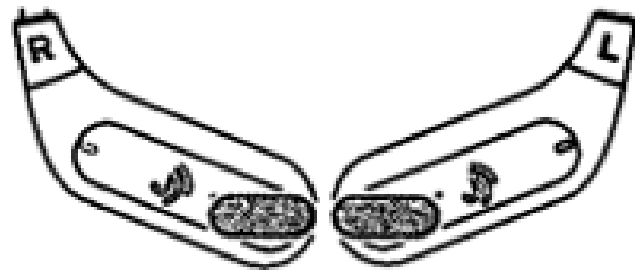

Manual shutdown


Press the control button for 6 seconds, and the earphone will be shut down.
(when the machine is shut down the red light is always on for 2 seconds and with a prompt sound)

Three-way calling

If there is a new call during your current call, utilize the following operation modes to handle the call:


- ① No operation, keep current call, call waiting
- ② Short press any ear-hook multifunction button to answer the third party call and hang up current call
- ③ Long press any ear-hook multifunction button for 2 seconds to reject the third party call and remain on the current call

Function and Operation of JRUMZ

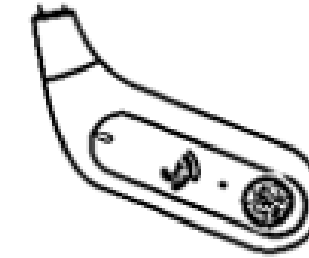


Pause/Play Music

When playing music, click the control button to pause playing, and then click the touch key to continue playing.

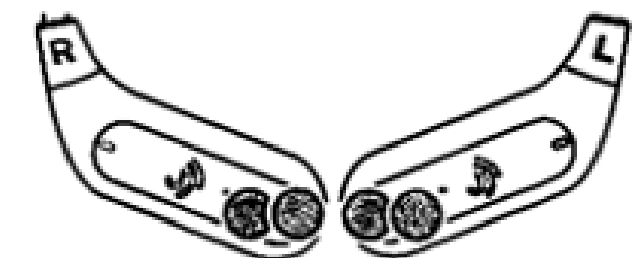


Previous/Next music

When playing music, double-click the control button of the left ear to switch to the previous song. Double-click the control button of the right ear to switch to the next song.

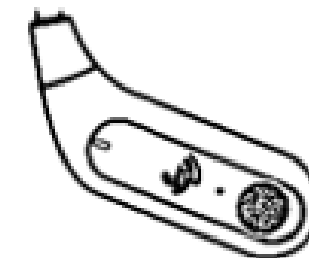


Answer/hang up

during the calling state, click the control button to answer the phone, and then click the touch key to hang up the phone.

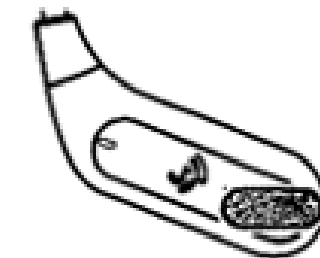


Reject Call

during the calling state, press the control button long to reject the call.

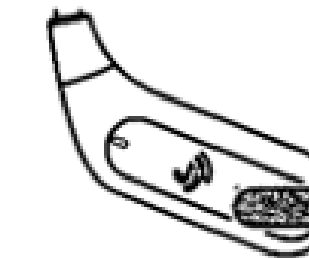

Start Siri (Voice Assistant)

Press the control button for 2 seconds to start Siri (Voice Assistant). This function may vary from device to device.

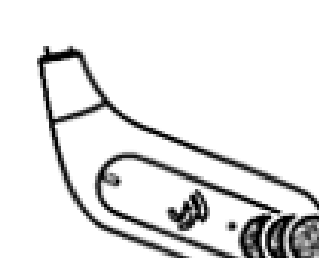

High-performance mode

Press the multi-function button three times to enter or exit the low-latency high-performance mode.

Earphone Charging Function




(1) Earphone Battery Power

(a) When the earphone battery is low, a tone will broadcast every 30 seconds signaling that it is time to recharge the earphone. If the earphone is not charged within 5 minutes of the broadcasted tone, a red light indicator will flash 5 times per minute until the earphone completely loses power.

(2) Earphone Charging

(a) Place the earphones in the charging case and close the charging case cover. The earphones will automatically begin to charge.
(b) When the battery is completely drained, it may take up to 2 hours for the earphones to fully charge.

How to Charge the Earphone Case

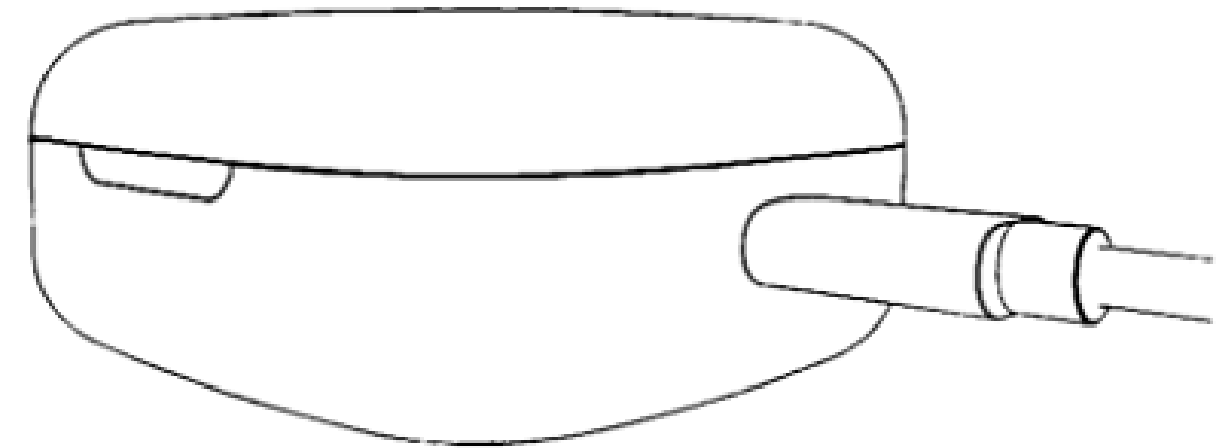

(1) Understanding of the electric quantity of the charging case

⚡ When putting the earhook into the charging case, or opening/closing the charging case cover, the LED light in the case flashes slowly three times and goes out, indicating the current battery level of the charging case.

● Red light: 0-30% power ● Yellow light: 30-70% power ● Green light: 70-100% power

(2) Charging of charging case

Plug in the charging line to charge the charging case. Unplug the charging case and the indicator light goes out.


● Charging: LED red light in the case is always on.
● Fully charged: the LED green light in the case is always on.

⚠ Charging Considerations

- ① In order to ensure the service life and safety of the equipment, do not use the fast charger to charge.
- ② The charger certified by the regular manufacturer must be selected.
- ③ Repeated charging and discharging will lead to the decrease of battery efficiency as time passes.

Instructions for Single Ear Use


Device allows you to freely switch between left and right earphones.

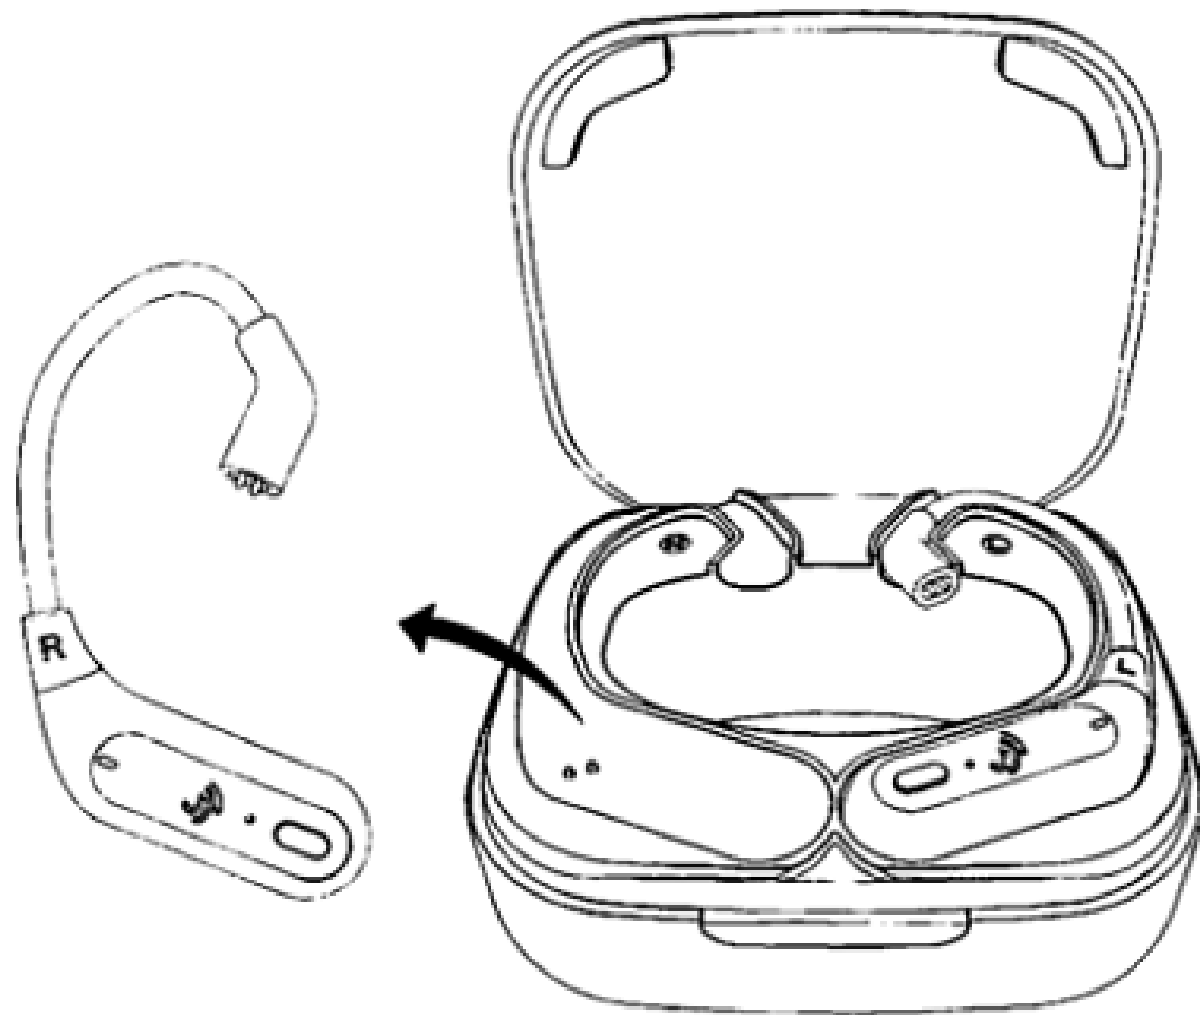

1. Earphones may be used as stand alone single ear devices. Remove the unneeded earphone. Utilize the power button to shut it off or place it back in the charging case. The stand alone earphone that is powered on will remain connected to the last connected device.
2. The earphone will prompt that the connection is successful, can play music and take voice calls.
3. If you need to use both ears, remove the needed earphone from the charging case and turn it on to start using both earphones simultaneously again.

Note: The unneeded earphone must be shut down or placed in the charging case in order to utilize one stand alone earphone. The stand alone earphone will continue to work in the original mode until the other earphone is powered on. Once the unneeded earphone is powered back on it will automatically reconnect to the host mobile device.

How to Unpair Earphones from Your Devices

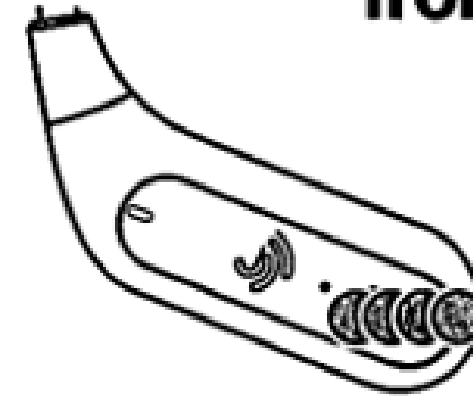


Clearing earphone pairing information can solve problems such as unsuccessful connection of most earphones.

- ① Remove any earphone from the charging case. Press and hold the multifunction button for 6 seconds to turn off the earphone.
- ② Press and hold the multifunction button until the red and blue light on the earphone flashes alternately and then let go of the button. Click the multifunction button 4 times. The red and blue lights will flash 3 times at the same time and the earphone will shut down.
- ③ Remove the other earphone and repeat the steps above.
- ④ Once the left and right earphones are both shut down, place them into the charging case at the same time and close the charging case cover to remove pairing information.

Safety

- ① Do not disassemble or modify the earphones for any reason, or the earphones may break down or burn out;
- ② Do not touch the equipment with liquid, oil or other volatile liquid, or it may cause serious damage to the equipment;
- ③ Beware of sharp edges, uneven metal surfaces, metal parts, fittings and packaging to avoid any possible damage;
- ④ Do not use the equipment in the environment temperature too low or too high (below -5 °C or 45 °C above);
- ⑤ Please avoid using the device indicator light close to the eyes of children or animals;
- ⑥ Do not use the equipment in thunderstorms, which may lead to abnormal operation of the equipment and increase the risk of electric shock.
- ⑦ Please do not use this product in dangerous places.

How to Unpair Earphones from Your Devices

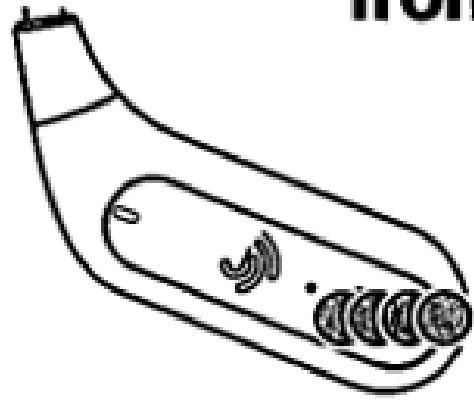

Clearing earphone pairing information can solve problems such as unsuccessful connection of most earphones.

- ① Remove any earphone from the charging case. Press and hold the multifunction button for 6 seconds to turn off the earphone.
- ② Press and hold the multifunction button until the red and blue light on the earphone flashes alternately and then let go of the button. Click the multifunction button 4 times. The red and blue lights will flash 3 times at the same time and the earphone will shut down.
- ③ Remove the other earphone and repeat the steps above.
- ④ Once the left and right earphones are both shut down, place them into the charging case at the same time and close the charging case cover to remove pairing information.

Safety

- ① Do not disassemble or modify the earphones for any reason, or the earphones may break down or burn out;
- ② Do not touch the equipment with liquid, oil or other volatile liquid, or it may cause serious damage to the equipment;
- ③ Beware of sharp edges, uneven metal surfaces, metal parts, fittings and packaging to avoid any possible damage;
- ④ Do not use the equipment in the environment temperature too low or too high (below -5°C or 45°C above);
- ⑤ Please avoid using the device indicator light close to the eyes of children or animals;
- ⑥ Do not use the equipment in thunderstorms, which may lead to abnormal operation of the equipment and increase the risk of electric shock.
- ⑦ Please do not use this product in dangerous places.

Product Problem Solutions

Problems	Solution
Does only one earphone have the sound when using both earphones?	Pairing was not successful. It is recommended to unpair the earphones from the Bluetooth device and reconnect.
Can't find JRUMZ Bluetooth connection on mobile device?	Place the earphones back in the charging case and close the lid. Now, reopen the lid and remove the earphones from the charging case.
Did the earphone automatically turn off?	The earphone does not have enough power. Place earphones in the charging case to charge. Also verify that the charging case has enough power to charge earphones. If not, charge the charging case.
Did the earphones disconnect from the device while using them?	The earphones are likely out of range of the mobile device and should automatically reconnect once returned within the appropriate Bluetooth range.
Did the earphone fail to auto-reconnect to a mobile device?	Make sure your mobile device is in Bluetooth mode, or it will not automatically reconnect.
Earphones not charging?	The earphones are not placed correctly in the charging case. Reposition the earphones in the charging case on the appropriate sides. If this does not work, verify that the charging case is charged. If not, charge the case.
Is there noise on the phone?	Change the conversation environment to a quieter setting or bring the earphone closer to the mobile device.
Is the earphone signal intermittent?	Place the phone on the same side of the earphone and move away from the outside interference signal.

note: the contents of this manual are for reference only and are subject to change without notice.