



Aeroo

Quick Start Guide

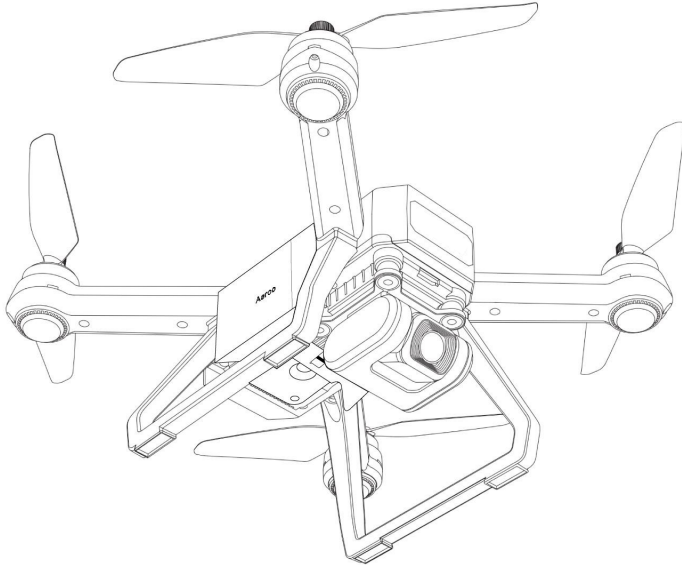

Charge


1.

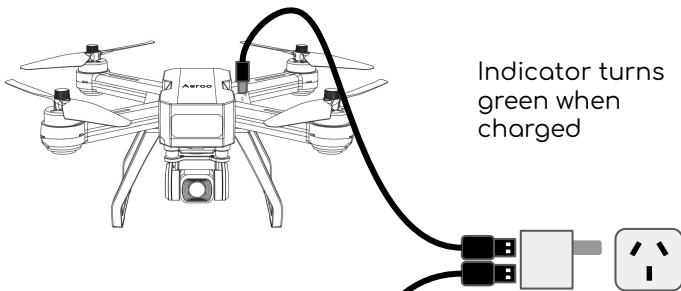

2.




3.

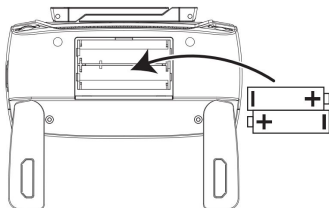


Start

1.

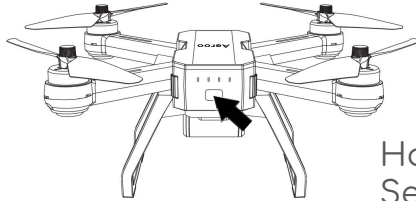


Hold for 3 Seconds
Set on flat ground

2.

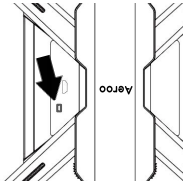

Slide to On.
Red light shows

3.

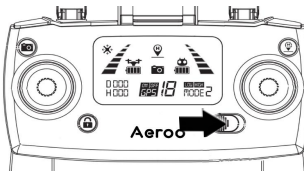


Slide to On.
Screen shows


Install

“M RC Pro” App



Connect

1. Enter Settings → Wifi on your device
2. Ensure Wifi is turned on and select “Drone4E_*****” from the list of available networks
3. Once the  icon is shown, you are connected to the drone. Exit settings and enter the M RC Pro app

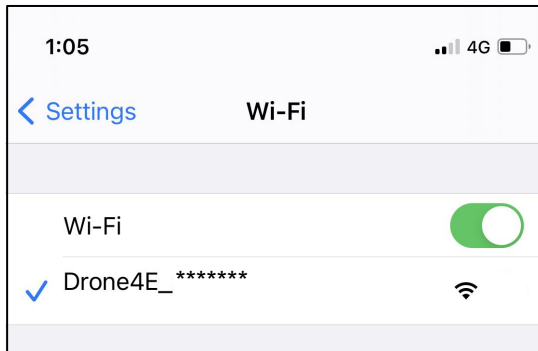


Calibrate


Required before every flight.

When prompted by flashing ✖ icon on controller LCD or ✉ in app:

Rotate 360° 3 times horizontally

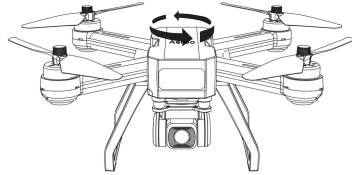



Rotate 360° 3 times vertically

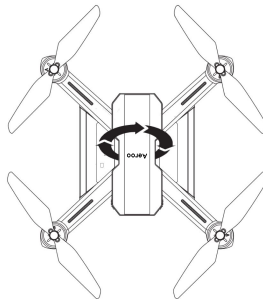

Control

Ensure GPS is ON

Unlock Aeroo by pressing the red 


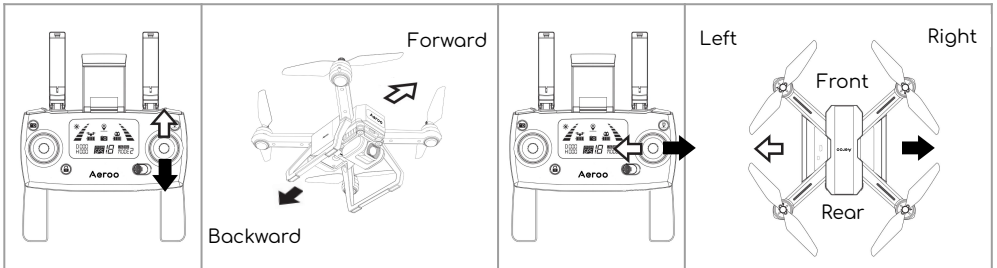
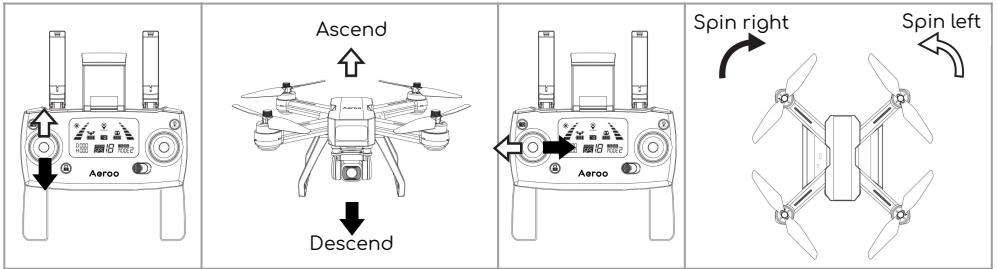


Release

Short press the red ● to release in flight

The mechanism will not work until the motors are unlocked

Maximum 250g payload

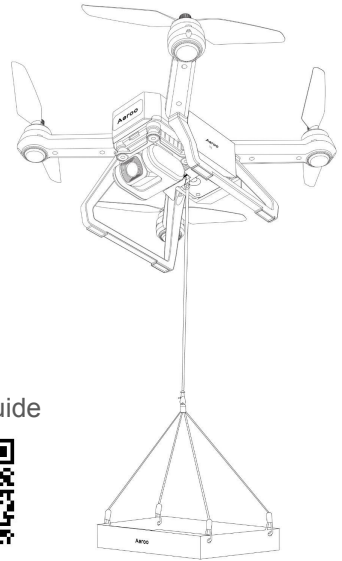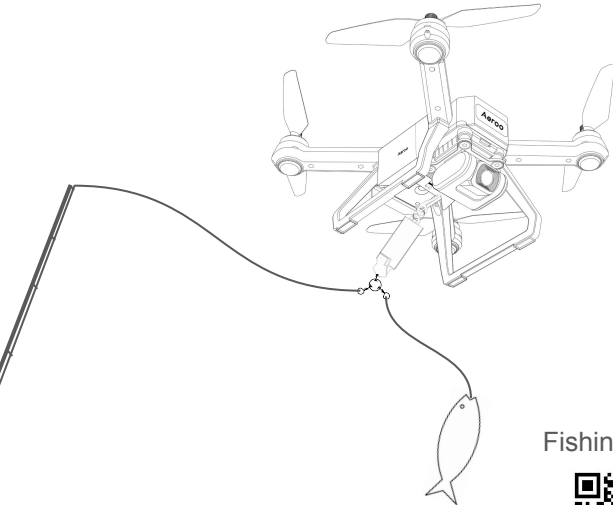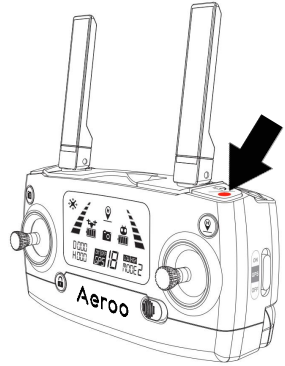


Fishing Guide





IMPORTANT: Read fishing guides here:
and precautions in the User Manual pg 16
before using Aeroo to drone fish

Aeroo

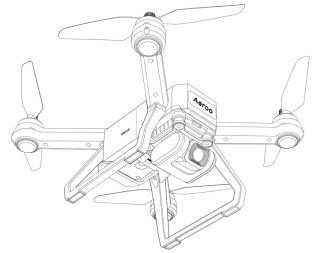

We strongly recommend reading the full manual to get the most out of your Aeroo drone.

If reading isn't your style... Check out our videos on youtube.

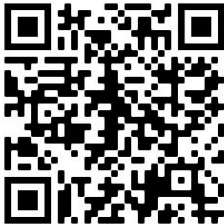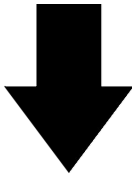

Do Not Fly in:

- High Temperatures → 30°C+
- Strong Winds → gusts 30kph+
- Rain/Storms

Read local drone regulations before flight

Use at your own risk and take all possible precautions to ensure the safety of yourself and others