



Technical Advice

12 / 24V-power supply voltage

Auxgate STEREO MKII is **exclusively** for the purpose and use in vehicles with **12V (13,8V) power supply voltage**. Any direct connection to a 24V supply will damage the Auxgate.

In vehicles with 24V power supply voltage, for example trucks, which work with an voltage converter from 24 down to 12V, the VOICE MKII **does not automatically** switch on together with the radio-unit.

To produce relief use the **Auxgate STEREO MKII-S** with the added special blue remote cable. Connect the remote to the 6,3mm jack at the STEREO housing and thereafter to the 12V-ignition-power (switching 12V-signal). The STEREO will be activated with the ignition and can be used in an optimal way e.g. in combination with a portable navi. Any power off will deactivate the **Auxgate STEREO MKII-S** .

Yours i-sotec Team