 


The default system of this product is Windows.

Quick Start Guide


1 Connect 2.4 GHz Receiver

Connect the 2.4GHz receiver to the device USB port.



Switch toggle to 2.4GHz mode

 


G /  / BT
G = 2.4GHz

Type-C Cable
2.4GHz Receiver
Extension Adapter For Receiver




Note: For the best wireless experience, we recommend using the extension adapter for receiver and putting the 2.4GHz receiver somewhere on your desk close to your keyboard for a low rate of latency and fewer signal interferences.

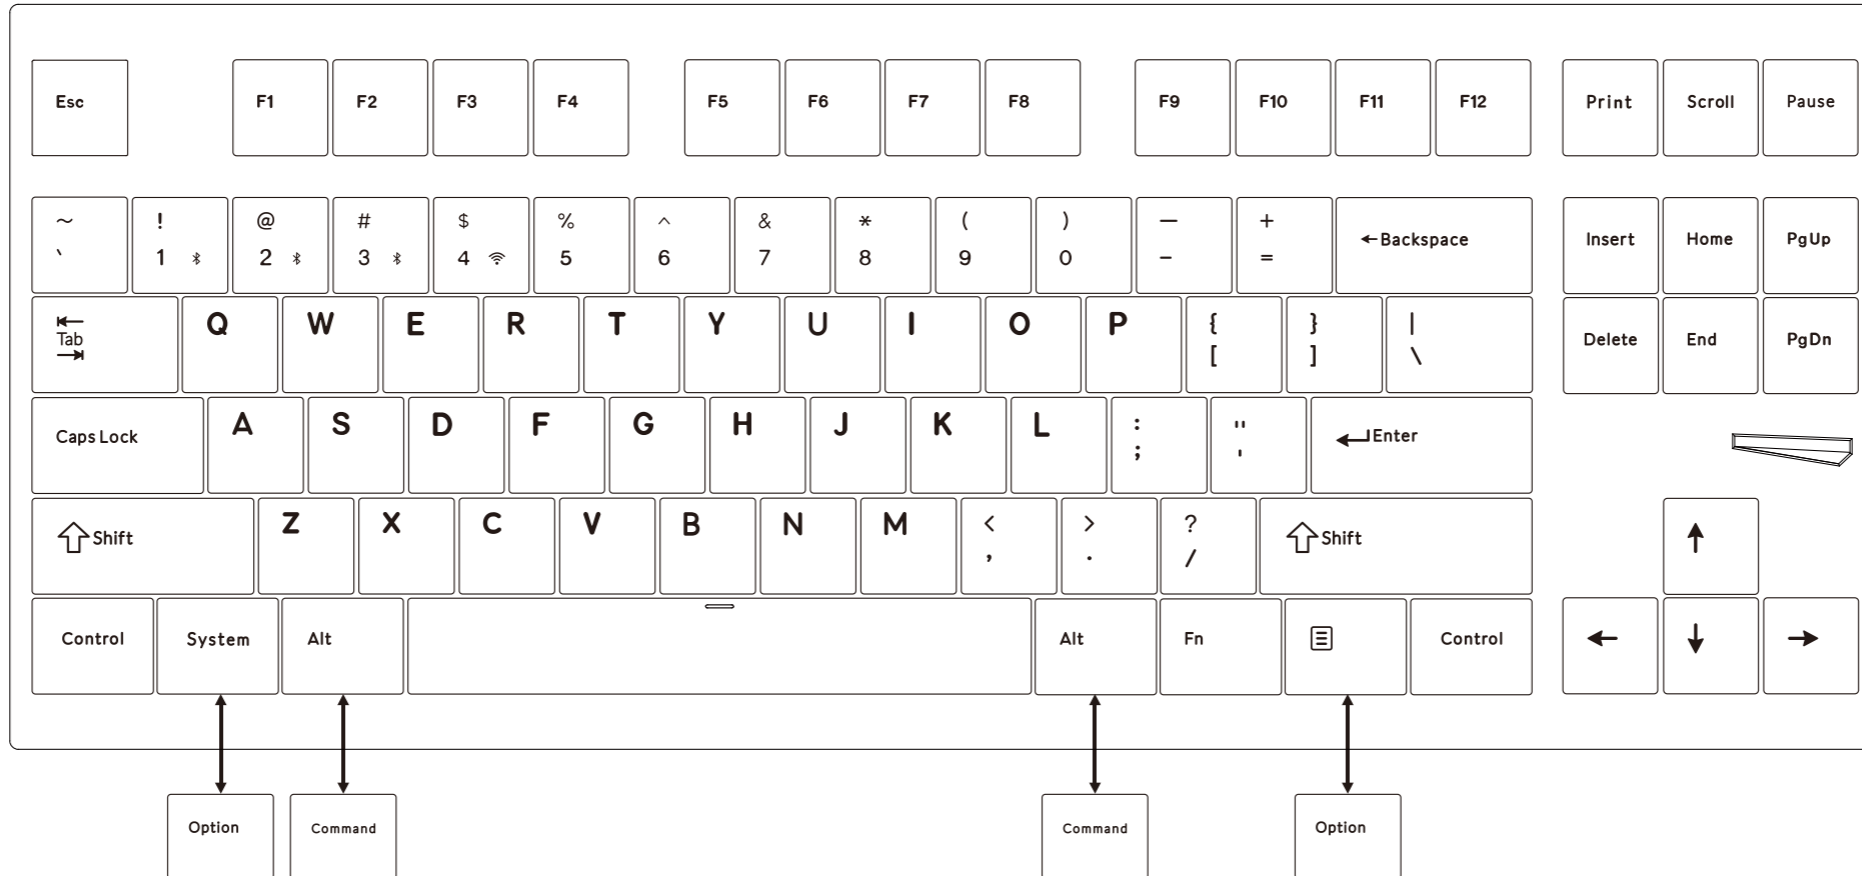


2 Connect Bluetooth



 Switch toggle to Bluetooth



 Press Fn + 1 (for 3 seconds) and pair with device named Lemokey L4.

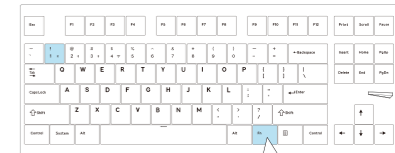


Fn + 1

3 Connect Cable



4 The Lemokey Launcher App

 
Please visit launcher.lemokey.com to use the online Launcher web app to remap the keys, create macro commands, or flash the firmware. If the Launcher cannot recognize your keyboard, please reach our support to get the instructions.

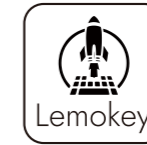

*The online Launcher can only run on the latest version of Chrome, Edge, and Opera browsers.
*The Launcher only works when the keyboard is connected by wire to the computer.

5 Switch to Mac

 Please find the Mac keycaps in the box, and follow the instructions below to find and replace the following keycaps.

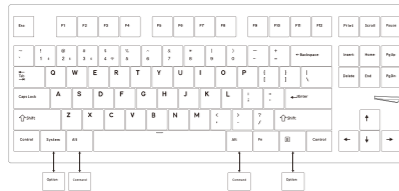


Use the online launcher app to remap the Windows keys to Mac keys.




6 The Backlight

 Press Fn + Q to change the lighting effect

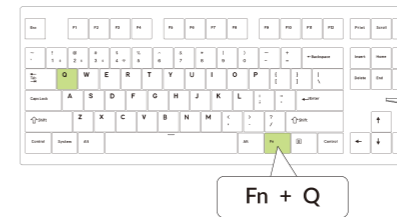

 Press Fn + Tab to turn the backlight on/off

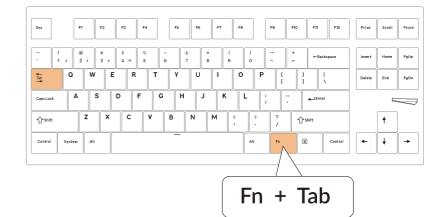


7 Adjust The Backlight Brightness

Press Fn + W to increase the backlight brightness




 Press Fn + S to decrease the backlight brightness

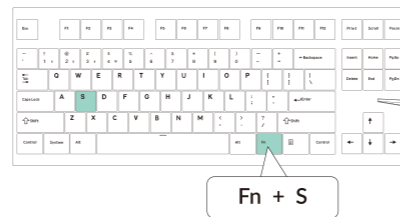


8 Adjust The Backlight Speed

 Press Fn + T to increase the light effect speed

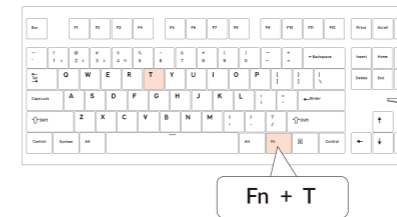


 Press Fn + G to decrease the light effect speed

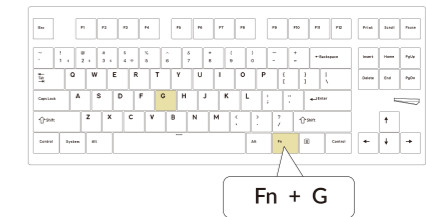

9 The Key Rollover

 Press Fn + N to switch N-key rollover / 6-key rollover

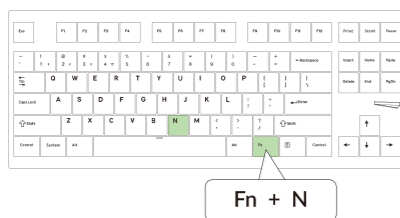

6-key rollover: the keyboard can detect up to 6 simultaneous key inputs.
N-key rollover: the keyboard can detect all key inputs without limit to the number of key presses.

* The keyboard turns on the 6-key rollover by default.

10 Factory Reset & Firmware Update

 
 
Troubleshooting? Don't know what's going on with the keyboard?

Factory reset your keyboard

1. Power on your keyboard.
2. Press and hold fn + J + Z (for 4 seconds). The keyboard backlight will flash in red quickly for 3 seconds, indicating that the keyboard has been reset.

Flash your keyboard firmware

1. Visit launcher.lemokey.com to open the online Launcher web app.
 2. Ensure the keyboard is in Cable or Wired mode and plug in the power cable.
 3. Find the 'Firmware update' tab on the left side of the Launcher and connect your keyboard with it.
 4. Follow the instructions on the Launcher and complete the firmware update.
- * Step-by-step guide, search the keyword "firmware" on lemokey.com.

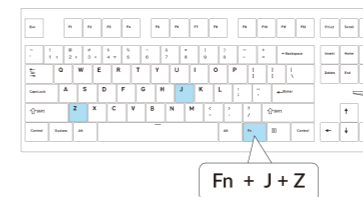

Not Happy

✉ support@lemokey.com