

1 The Lemokey Launcher App

 
Please visit launcher.lemokey.com to access the keyboard online launcher app. This app enables users to remap keys, adjust key actuation points, assign multiple commands to a single key, enter game controller mode, and more. If it cannot recognize your keyboard, please reach our support to get instruction.



*The online launcher app can only run on the latest version of Chrome, Edge, and Opera browsers yet.

2 Switch to Mac

Please find the Mac keycaps in the box, and follow the instructions below to find and replace the following keycaps.

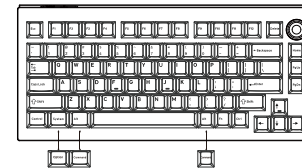


+

Use the online launcher app to remap the Windows keys to Mac keys.




3 The Backlight

 Press Fn + Q to change the lighting effect

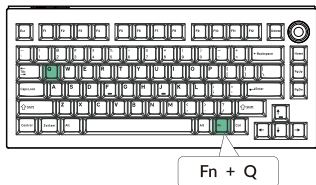

Fn + Q

 
Press Fn + Tab to turn the backlight on/off

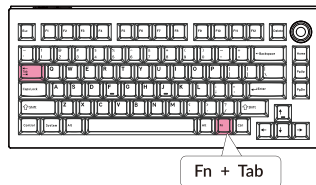

Fn + Tab


4 Adjust The Backlight Brightness

 Press Fn + W to increase the backlight brightness

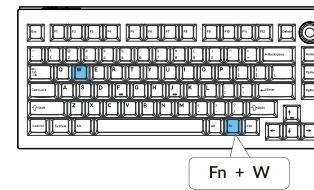

Fn + W

 
Press Fn + S to decrease the backlight brightness

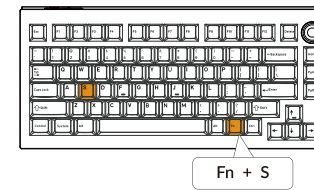

Fn + S


5 Adjust The Backlight Speed

 Press Fn + T to increase the light effect speed

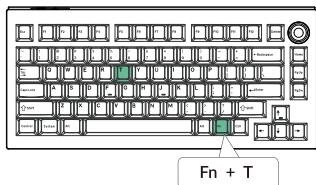

Fn + T

 
Press Fn + G to decrease the light effect speed

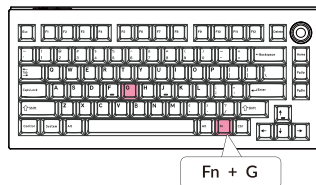

Fn + G


6 The Light Bar

 Press Fn + O to change the lighting effect

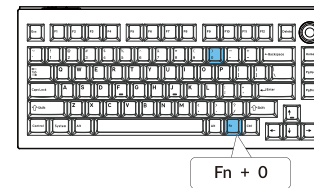

Fn + O

 
Press Fn + 9 to change the light bar color

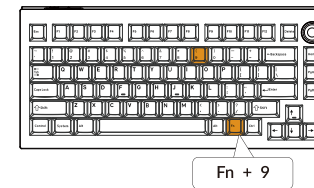

Fn + 9


7 Adjust the Light Bar Brightness

 Press Fn + "+" to increase the light bar brightness

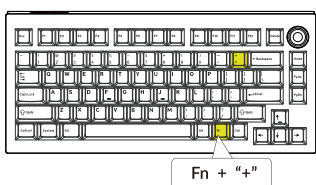

Fn + "+"

 Press Fn + "-" to decrease the light bar brightness

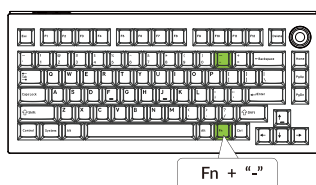

Fn + "-"

8 Factory Reset & Firmware Update

Troubleshooting? Don't know what's going on with the keyboard?

Factory reset your keyboard

 
1. Power on your keyboard.
2. Press and hold Fn + J + Z (for 4 seconds). The keyboard backlight will flash in white quickly for 3 seconds, indicating that the keyboard has been reset.

Flash your keyboard firmware

1. Visit launcher.lemokey.com to open the online Launcher web app.
2. Plug in the power cable.
3. Find the 'Firmware Update' tab on the left side of the Launcher and connect your keyboard with it.

4. Follow the instructions on the Launcher and complete the firmware update.

* Step-by-step guide, search the keyword "firmware" on lemokey.com

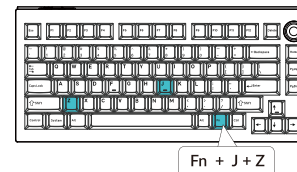

Fn + J + Z



Not Happy

✉ support@lemokey.com

Quick Start Guide

The default system of this product is Windows.

