

The heart of your home
mayer

99 bottles Wine Cooler

MMWC99MAG

eLeMentAL
series

Please read this instruction manual thoroughly before operating and keep it for future reference

Table of Contents

WARNINGS

~~IMPORTANT SAFETY INSTRUCTIONS~~

OVERVIEW

BEFORE INSTALLING THE APPLIANCE

INSTALLING THE APPLIANCE

AMBIENT TEMPERATURE

MOVING YOUR APPLIANCE

BEFORE FIRST USE

OPERATION

AUTOMATIC DEFROSTING

OPERATING NOISES

TIPS FOR SAVING ENERGY

CLEANING AND MAINTENANCE

TROUBLESHOOTING

SPECIFICATIONS

WARNINGS

This appliance is intended to be used in household and similar applications such as

- staff kitchen areas in shops, offices and other working environments;
- farm houses and by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments;
- catering and similar non-retail applications.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

The appliance shall not be exposed to rain.

WARNING: Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

WARNING: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

WARNING: Do not damage the refrigerant circuit.

WARNING: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

For the details concerning the method of cleaning, please see section "Cleaning and maintenance" on pages xx.

For disposal of the appliance:

To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. And the disposal should only be done through public collection points.

For installation, servicing:

Appliance should be placed on a horizontal floor and keep the ventilation freely. Don't try to replace or repair any components by yourself, ask the service agency for help if necessary.

For handling:

Always handle the appliance with care to avoid any damage.

INSTALLATION: DO NOT INSTALL THIS APPLIANCE IN AREAS THAT ARE TOO HUMID OR TOO COLD, SUCH AS OUTDOOR OR GARAGES.

IMPORTANT SAFETY INSTRUCTIONS

 
- This appliance is intended to be used exclusively for the storage of wine.
- Do not place heavy objects on the top of the appliance.
- Unplug the appliance from the mains socket when not in use or before cleaning.
- Do not stand or support yourself on the base or doors, etc.
- Do not store food in the appliance as the interior temperature may not be cool enough to prevent spoilage.
- Always carry, store and handle the appliance in a vertical position.

Dispose of your old appliance

The appliance contains refrigerant and gases in the insulation.

Refrigerant and blowing gases must be disposed off professionally. Ensure that tubing of the refrigerant circuit is not damaged prior to proper disposal.

OVERVIEW

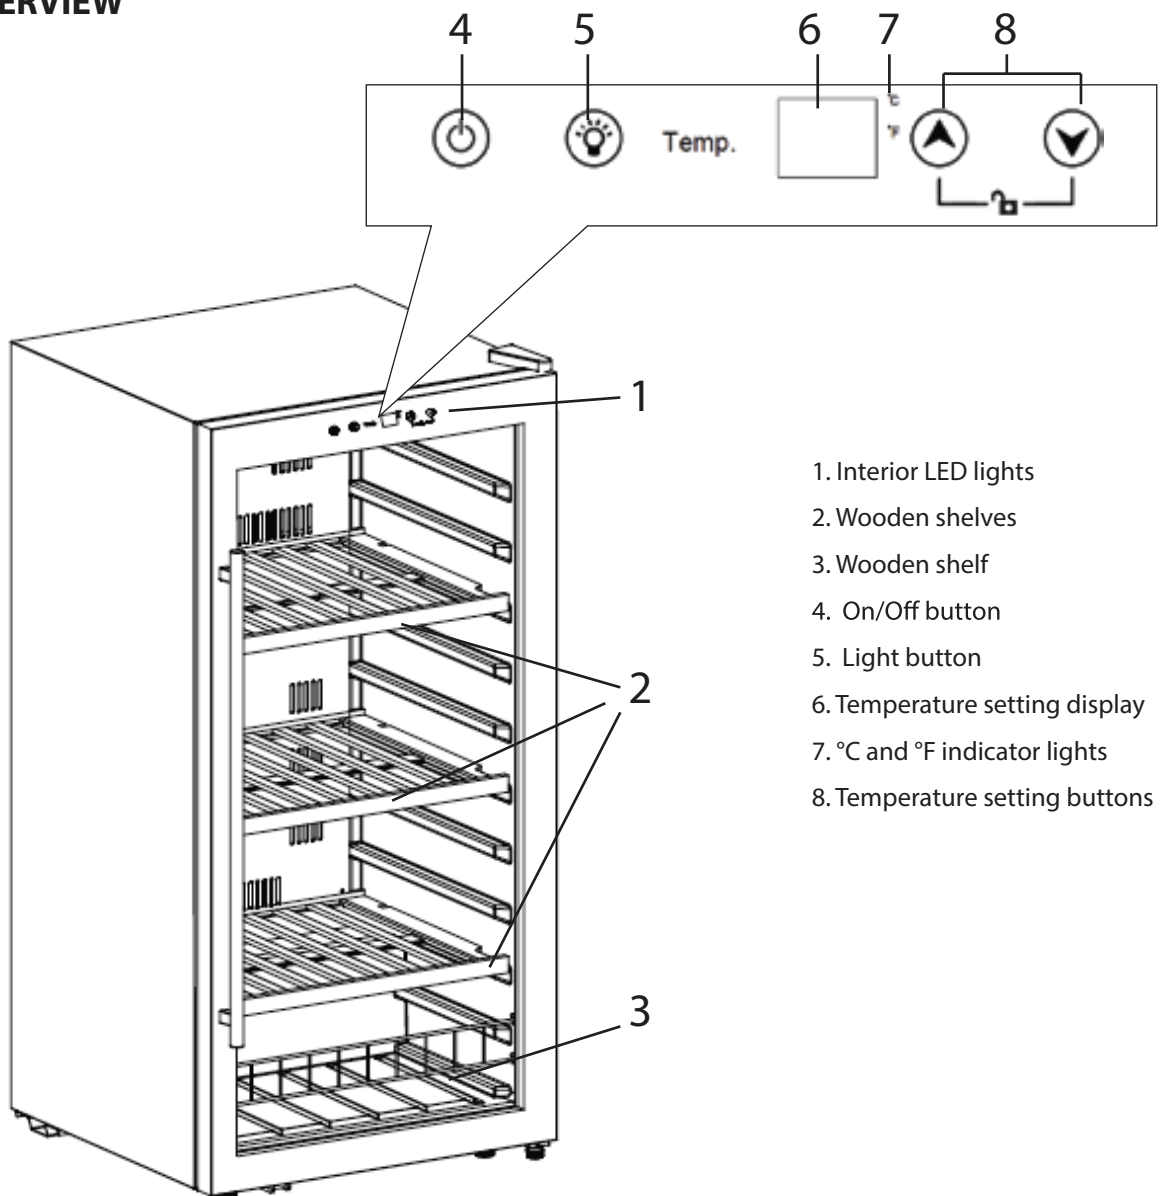

BEFORE INSTALLING THE APPLIANCE

Before connecting your appliance to the power supply, check that the voltage stated on the rating label of your appliance corresponds to the voltage in your home. A different voltage could damage the appliance.

The plug is the only way to unplug the appliance and should therefore be accessible at all times. To turn off main power to the appliance, detach the plug from the outlet. Do not immerse the appliance, the power cord or the plug in water or other liquid.

The appliance must be grounded. The manufacturer is not responsible for damages that may occur as a result of usage without grounding.

INSTALLING THE APPLIANCE

This appliance is designed to be free standing only.

Install the appliance in a dry, well ventilated room. The installation location should neither be exposed to direct sunlight nor near a heat source, e.g. a cooker, radiator, etc.

To ensure adequate ventilation for the appliance, allow a minimum of 10 cm of airspace on each side of the cabinet.

 
For uneven surfaces, front feet can be aligned.

Installing the door handle

1. Remove the door gasket on the side. There will be 2 designated holes for the handle to be installed.

2. Tighten the screws to fix the handle to the door. DO NOT over tighten the screws.

3. Replace the door gasket.

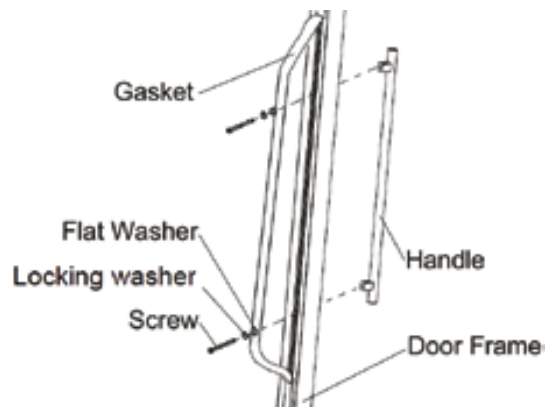

AMBIENT TEMPERATURE

This appliance is designed to operate in ambient temperature between 10°C and 32°C. If these temperatures are exceeded, i.e. colder or warmer, the appliance will not operate correctly.

MOVING YOUR APPLIANCE

- Make sure that the appliance is unplugged from the mains socket. Remove all bottles and shelves to avoid any shock.
- Always move the appliance vertically.
- After moving, wait for 30 minutes before plugging in the appliance.

Your appliance uses isobutane (R600a) as a refrigerant. Although R600a is an environmentally friendly and natural gas, it is explosive. Therefore you should be careful during shipment and installation to prevent your appliance's cooler elements from being damaged. In the event of a leak caused by damage to the cooler elements, move your appliance from open flame or heat sources and ventilate the room where the appliance is located for a few minutes.

BEFORE FIRST USE

- Remove all packaging.
- Clean the inside of the appliance with warm water and a little liquid detergent to remove manufacturing and transportation dust.

OPERATION








Ensure that the appliance is placed on a flat and stable surface.

Plug the appliance into the mains socket. The display will show the current actual temperature of the internal cabinet.



Allow the appliance to cool down for 2-3 hours before placing wine bottles in the appliance.

Selecting the temperature



The temperature can be set from 5°C to 18°C. The default factory temperature is set at 12°C.

1. Repeatedly press  /  to select the required temperature.
 - Each time you press  /  the temperature will be increased or decreased by 1°C.
2. The temperature selected will flash on the display for approximately 3 seconds, then the display will return to the current actual temperature of the internal cabinet.
 - The current actual temperature will vary depending on the quantity of bottles stored and how often the door is opened.
 - To view the set temperature, press  /  , the set temperature will flash on the display for approximately 3 seconds and then return to the current actual temperature of internal cabinet.
 - The temperature display can be switched between Celsius (°C) and Fahrenheit (°F) by pressing and holding  . The corresponding indicator light °C or °F will illuminate.


IMPORTANT:

To set the temperature and temperature display, the two buttons  and  must be unlocked.


If there is no button operation within about 2 minutes, the functions of setting temperature and temperature display will not work.

To unlock the two buttons, press and hold  and  for about 3 seconds until a beep is heard. Then you can change the temperature setting and display.

Turning on/off the appliance

Press and hold  for approximately 3 seconds to turn on or off the wine cooler.

Interior lights

Press  to turn the interior lights on or off.

Tips for storing wine

Store wine in sealed bottles.

Do not overload the appliance. The maximum number of bottles that can be stored is 99, depending on the size of bottles.

 
To achieve the maximum capacity of the appliance, the bottles should be laid out as shown.

Tips for storing wine

Store wine in sealed bottles.


Do not overload the appliance. The maximum number of bottles that can be stored is 99, depending on the size of bottles.

To achieve the maximum capacity of the appliance, the bottles should be laid out as shown.

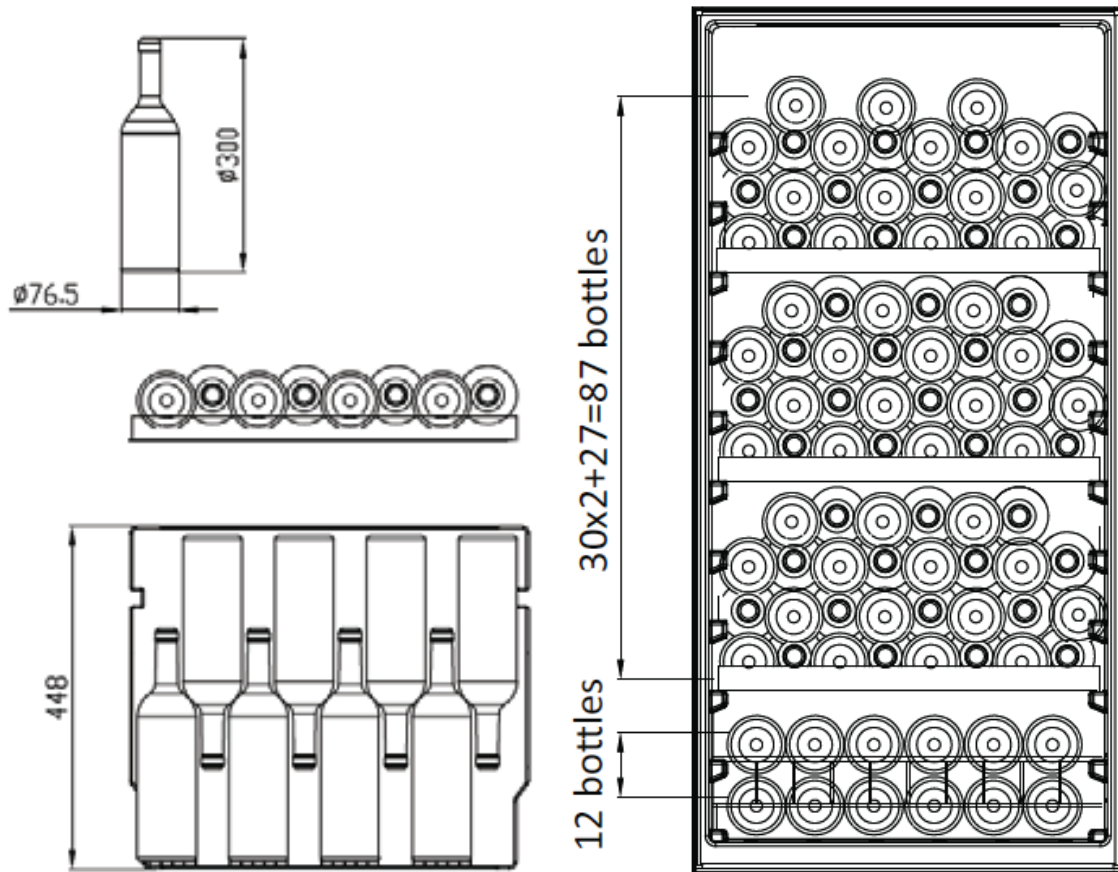

Units: mm

 For example, you can store 99 standard 750 ml size Bordeaux bottles in the appliance.

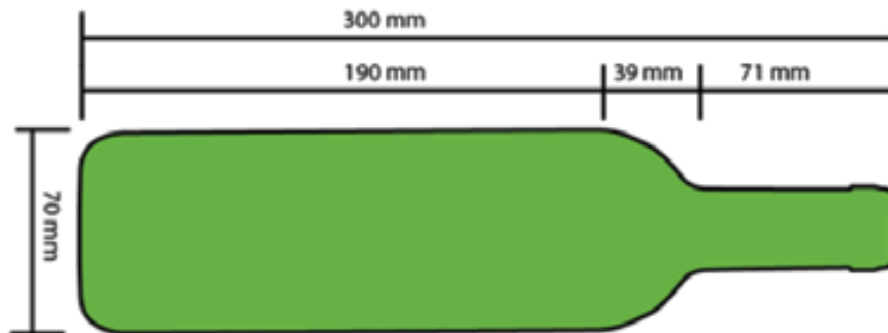

Standard 750mL Bordeaux bottle

AUTOMATIC DEFROSTING

Ice build-up on the inner back wall during compressor operation will defrost automatically when the compressor

Defrost water will drain out through the drain outlet into a drain pan from where it will evaporate.

has cycled off.

- Refrigerant is flowing through the tubing.

OPERATING NOISES

Normal noises

- Motors are running.

TIPS FOR SAVING ENERGY

For the most energy efficient use of your appliance:

- Ensure your appliance has adequate ventilation as recommended in the installation
- Keep door openings to a minimum.
- Open the appliance as briefly as possible.
- Ensure that the door is always closed properly.

CLEANING AND MAINTENANCE

- Unplug the appliance from the mains socket before cleaning.
- Remove all bottles and shelves from the appliance.
- Clean the appliance with a soft cloth, warm water and detergent. Clean shelves with a slightly damp cloth. Dry thoroughly.
- Do not use any abrasive or cleaning agents.

The interior LED lights in the appliance cannot be replaced by the user. If the LED lights stop working, please contact the local authorised service agent.

TROUBLESHOOTING

If there is a problem with your appliance, please check the following points before contacting customer service.

Problem	Possible Cause	Possible Solution
The appliance is not working.	The appliance is not plugged into the mains socket.	Check that the appliance is properly plugged in the mains socket.
The appliance is noisy during operation.	The appliance is not level.	Adjust the front feet to level the appliance.
The appliance is noisy during operation.	Temperature set incorrectly	Check temperature and reset if necessary.
	External environment may require colder temperature.	
	The door is opened too often.	Only open the door when necessary.
	Door seal is worn.	Contact a local authorised service agent.

SPECIFICATIONS

Brand	Mayer
Appliance type	Wine Cooler
Climate class + Ambient range	SN (+10°C ~ +32°C), N (+16°C ~ +32°C)
Rated voltage and frequency	220-240V~ 50Hz
Total input current	0.8A
Input power	120W
Total storage volume	230L
Total gross volume	238L
Lamp power	<2W
Insulation blowing gas	Cyclopentane
Class of protection against electric	I
Refrigerant/Amount	R600a/43g
Net weight	51kg
Product dimension (W x D x H)	595 x 590 x 1215(mm)
Energy class (1)	C
Power consumption (2)	259kWh/annum
Energy consumption	0.71kWh/24h
Wine storage compartment humidity	50% ~ 55%
Bottle capacity	99
Noise	42dB

Warranty & Customer Service



e-Warranty Registration at <https://www.mayer.sg>

MAYER MARKETING PTE LTD
Customer Service Hotline: 6542-8383
[Mon, Wed & Fri: 9:00am to 6:00pm]
[Tue & Thurs: 9:00am to 8:00pm]
[Sat: 9:00am to 3pm]
Closed: Sunday & Public Holidays
71 Ubi Crescent, #06-02, Excalibur Centre, Singapore 408571

Download Mayer App via

