


Installation and Wiring

Optional: Integrate with the Vehicle Signal Inputs.

If you are familiar with all of your vehicle's signal input connections, you can connect the Vehicle Signal Input Control Connectors to your vehicle's turn, brake, and reverse wires (connection cables between the ExtremeController and your vehicle signal are not included) to add the Street Mode function to Zone 3 and 4.

- Pink Wire: Reverse Signal
- Orange Wire: Brake Signal
- Green Wire: Left Turn Signal
- Blue Wire: Right Turn Signal

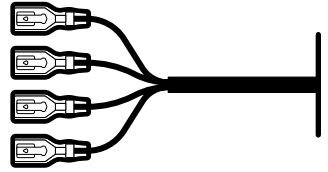

Recommendation: If you are not sure where these signal wires are located on your vehicle, consult your vehicle's manual or a technician. Incorrect connections to your vehicle may cause your controller or your vehicle to malfunction.

IMPORTANT: After you complete all the wiring and turn on the ExtremeController for the first time, test for proper wiring and function as follows:

- Turn vehicle's left turn signal on: LED's connected to Zone 3 will flash Yellow.
- Turn vehicle's right turn signal on: LED's connected to Zone 4 will flash Yellow.
- Press the vehicle's brake: LED's connected to Zone 3 and 4 will shine Red.
- Carefully put your vehicle in reverse: LED's connected to Zone 3 and 4 will shine White.