







BUTTON	ACTION	FUNCTION
	<b>Short-Press</b>	Turn on / off the LEDs in all Zones. <ul style="list-style-type: none"> <li>When turned on, each of the LEDs will light up Green in ascending order. When turned off, the LEDs light up Red in descending order.</li> <li>Does not turn off the ExtremeController. Only the vehicle ignition switch (or rocker switch) can power off the controller.</li> <li>Refer to <b>Zones, Modes, and Scenes. Note:</b> If you want to turn all of the LED lights off but still want Zones 3 and 4 to function as enhanced brake, reverse, and turn signal lights, use <b>Street Mode</b> (Scene 6).</li> </ul>
	<b>Press and Hold</b> (for 3 seconds)	To enable EcoCast pairing. <ul style="list-style-type: none"> <li>The  Button on the ExtremeController has the same Action / Function.</li> </ul>
	<b>Short-Press</b>	To turn on / off the Zone 1 LEDs. <ul style="list-style-type: none"> <li>When turned on, LEDs in Zone 1 will light up Green in ascending order. When turned off, the LEDs light up Red in descending order.</li> </ul>
	<b>Press and Hold</b> (for 3 seconds)	To select Zone 1. <ul style="list-style-type: none"> <li>The LEDs in Zone 1 will flash Green twice, indicating that the (Bright, Speed, and Color) Common Buttons will only apply to Zone 1.</li> </ul>
	<b>Short-Press</b>	To turn on / off the Zone 2 LEDs. <ul style="list-style-type: none"> <li>When turned on, LEDs in Zone 2 will light up Green in ascending order. When turned off, the LEDs light up Red in descending order.</li> </ul>
	<b>Press and Hold</b> (for 3 seconds)	To select Zone 2. <ul style="list-style-type: none"> <li>The LEDs in Zone 2 will flash Green twice, indicating that the (Bright, Speed, and Color) Common Buttons will only apply to Zone 2.</li> </ul>
	<b>Short-Press</b>	To turn on / off the Zone 3 LEDs. <ul style="list-style-type: none"> <li>When turned on, LEDs in Zone 3 will light up Green in ascending order. When turned off, the LEDs light up Red in descending order.</li> </ul>
	<b>Press and Hold</b> (for 3 seconds)	To select Zone 3. <ul style="list-style-type: none"> <li>The LEDs in Zone 3 will flash Green twice, indicating that the (Bright, Speed, and Color) Common Buttons will only apply to Zone 3.</li> </ul>
	<b>Short-Press</b>	To turn on / off the Zone 4 LEDs. <ul style="list-style-type: none"> <li>When turned on, LEDs in Zone 4 will light up Green in ascending order. When turned off, the LEDs light up Red in descending order.</li> </ul>
	<b>Press and Hold</b> (for 3 seconds)	To select Zone 4. <ul style="list-style-type: none"> <li>The LEDs in Zone 4 will flash Green twice, indicating that the (Bright, Speed, and Color) Common Buttons will only apply to Zone 4.</li> </ul>

BUTTON	ACTION	FUNCTION	NOTES
Z1-M	Short-Press	To cycle through the three LED Mode categories for Zone 1.	
	Double-Click	To cycle back to the previous LED Mode for Zone 1.	
Z2-M	Short-Press	To cycle through the three LED Mode categories for Zone 2.	
	Double-Click	To cycle back to the previous LED Mode for Zone 2.	
Z3-M	Short-Press	To cycle through the three LED Mode categories for Zone 3.	
	Double-Click	To cycle back to the previous LED Mode for Zone 3.	
Z4-M	Short-Press	To cycle through the three LED Mode categories for Zone 4.	
	Double-Click	To cycle back to the previous LED Mode for Zone 4.	
MODE	Short-Press	To cycle through the three LED Mode categories for all the Zones.	· There are 44 distinct LED Modes: 8 Color Modes, 18 Party Modes, and 16 Music Modes. You can also use the SoundExtreme Smartphone App to find a specific LED Mode.
	Double-Click	To cycle back to the previous LED Mode for ALL Zones.	
	Press and Hold (for 3 seconds)	To enter Pairing Mode with the ExtremeController.	· The RF Remote Control comes paired to the ExtremeController. This feature is meant to be used if the connection is lost or a replacement Remote is purchased.

BUTTON	ACTION	FUNCTION	NOTES
SCENE	Short-Press	To cycle through the 5 defined Scenes for all the Zones.	· Scene 6 ( <b>Street Mode</b> ) turns all the LED lights off but Zones 3 and 4 will still function as enhanced brake, reverse, and turn signal lights.
	Press and Hold (for 3 seconds)	To set all Zones to shine Orange, at 100% brightness and 80% speed.	
BRIGHT	Short-Press	To cycle through 5 levels of Brightness for all the Zones.	
	Press and Hold (for 2 seconds)	To cycle through 5 levels of Brightness for the selected Zone.	· This feature is only available when one of the Zones has been selected via one of the Zone Buttons. (Press and hold Z1, Z2, Z3, or Z4 for 3 seconds).
SPEED	Short-Press	To cycle through 5 levels of Speed for all the Zones.	
	Press and Hold (for 2 seconds)	To cycle through 5 levels of Speed for the selected Zone.	· This feature is only available when one of the Zones has been selected via one of the Zone Buttons. (Press and hold Z1, Z2, Z3, or Z4 for 3 seconds).
COLORS	Short-Press	To select the corresponding Color for all the Zones.	· There are 8 Color Buttons on the Remote Control: Red, Green, Blue, White, Orange, Yellow, Cyan, and Purple. You can also use the SoundExtreme Smartphone App create a custom color.
	Press and Hold (for 2 seconds)	To select the corresponding Color for the selected Zone.	· This feature is only available when one of the Zones has been selected via one of the Zone Buttons. (Press and hold Z1, Z2, Z3, or Z4 for 3 seconds).