
Tudaloo Installation Instructions

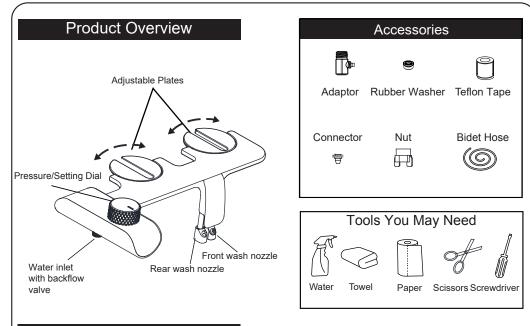

Nozzle Maintenance

Basic Cleaning:

Please pull down the nozzle poles gently, and clean the nozzles with brush, soft cloth or mild detergent.

 
If nozzles require thorough cleaning, please disassemble the **Nozzle Cap** first.

1) To disassemble: extend nozzle, then **Nozzle Cap** turns 90° to the left (or right) and remove from the nozzle pole.

2) To assemble: aim the Nozzle Cap for the matching nozzle pole

 
at 90°, attach and turn the **Nozzle Cap** to face forward.

Product Operation










WATER PRESSURE

HIGH


1. Turn off Water Supply Valve


Turn the water supply off at the wall/inside cistern to stop the flow of water
Flush toilet and hold to completely empty toilet tank

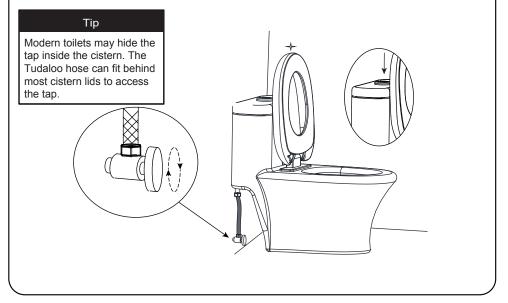

2. Loosen Toilet Seat

- 1) Lift hinge covers and use a screwdriver to loosen the mounting bolts
- 2) Loosen or remove toilet seat
- 3) Clean the toilet and dry the toilet seat surface

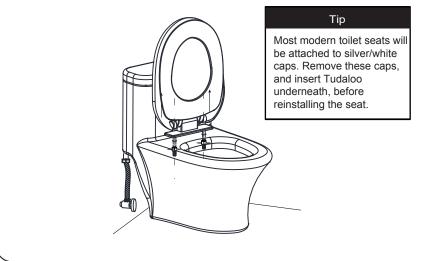


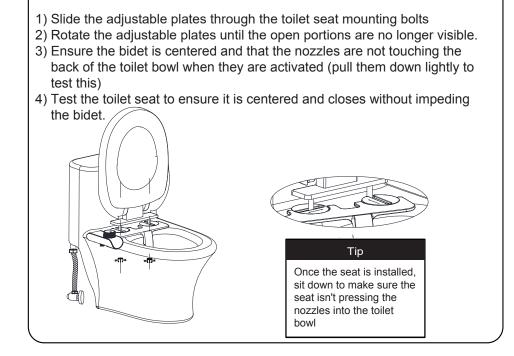

4. Disconnect Water Supply Hose


3. Install Tudaloo Attachment on Toilet

Option 1: Disconnect water supply hose from the fill valve under the toilet tank Option 2: Disconnect water supply hose to the cold water valve from the wall Option 3: Disconnect water supply hose to the cold water valve from the inside toilet tank

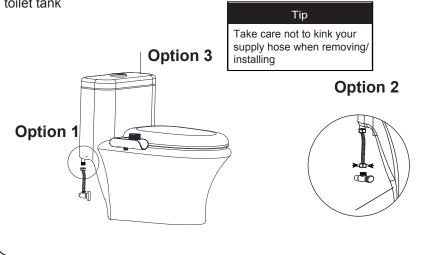

5. Connect Water Supply

- 1) Install the adaptor with rubber washer onto the cold water valve.
- 2) Reconnect the cold water supply line to the adaptor
- 3) Connect the bidet hose to the adaptor
- 4) Connect the other end of bidet hose to the water inlet on the back of the Tudaloo attachment

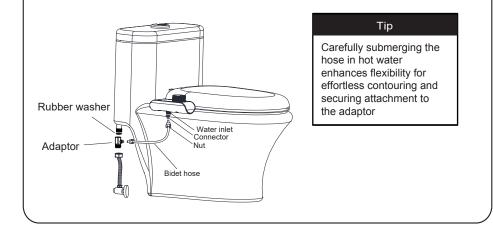

6. Turn on Water Supply & Check for Leaks

- 1) Open water supply valve slowly and check for leaks
- 2) Wait 5-10 minutes, check again and if there are no leaks, continue

