

The extension pole goes between the outer and inner poles on the D254180 mount, so you have to remove the inner pole, insert the extension, and attach the inner pole to the tip of the extension.

Steps:

Remove the Inner Pole from the D254180 (or D254180-176) by removing 2 Allen bolts and 2 small screws, so you can pull off the inner pole (leave the plastic housing on the part you are pulling off).
Now insert the tip of the extension pole with its plastic housing into the D254180 mount, where

you took off the inner pole in Step 1 and secure it with the bolts & screws.

3) Now take the part you took off in Step 1 (Inner Pole) and attach it to the tip of the part you inserted in Step 2.

4) Install the TV bracket on the end tip if it is not already installed.

5) Set your ideal length (drop from the ceiling) by removing the pairs of screws that set the lengths, on both, the main mount (e.g. D254180 and the extension, D254180_X).

