

63.0 mm x 105.0 mm

URBAN



Multi-Utility Charging

CORE
Power Hub

USER MANUAL


Quick Start Guide

Thank you for choosing the "CORE Power Hub" to better use this product, please read the quick start guide carefully before use and properly manage it.

Product Specifications

Model:	IBCH006
Product Name:	URBAN Core 65 Power Hub
Rated Parameter:	2500W-10A(Max)250V
Input:	100-250V-50/60Hz, 10A Max
C1 PD Output:	5V/3A, 9V/3A, 12V/3A, 15V/3A, 20V/3.25A, 65W Max
C2 PD Output:	5V/3A, 9V/3A, 12V/3A, 15V/3A, 20V/3.25A, 65W Max
A1 Output:	4.5V/5A, 5V/4.5A, 5V/3A, 9V/3A, 12V/3A, 20V/3A 60W Max
A2 Output:	4.5V/5A, 5V/4.5A, 5V/3A, 9V/3A, 12V/3A, 20V/3A 60W Max
C1+C:	45W+20W 65W Max
C1+A1+A2:	PD45W+7.5W+7.5W
C2+A1+A2:	5V/5A 25W Max
Total Power:	65W Max

Features

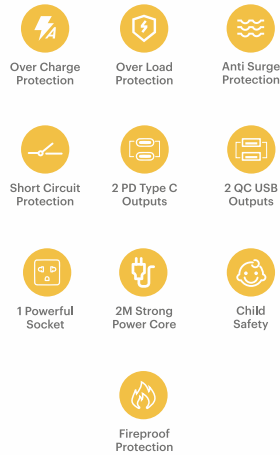


Electric Power Values of common Households Appliances

Rice Cooker:	500-1700 Watts
Induction Cooker:	300-1800 Watts
Electric frying pan:	800-2000 Watts
Electric water heater:	800-2000 Watts
Refrigerator:	70-250 Watts
Electric Heater:	800-2500 Watts
Electric Oven:	800-2000 Watts
Disinfection furnace:	600-800 Watts
Electric Iron:	500-2000 Watts
Air Conditioner:	600-5000 Watts
Air Conditioner:	1000 Watts
Microwave Oven:	1000 Watts
Electric Furnace:	1000 Watts
Electric Water Heater:	1000 Watts
Vacuum Cleaner:	800 Watts
Hair Dryer:	500 Watts
Electronic Iron:	500 Watts
Washing Machine:	500 Watts
TV:	200 Watts
Computer:	200 Watts
Range Hood:	140 Watts
Refrigerator:	100 Watts
Fan:	100 Watts
Flashlight:	0.5W

How to use the power socket safely and correctly

1. Pay attention to the use, the extension board cannot hold the load for a long time, if it is used too frequently, it will easily overheat and reduce the service life of the power strip.
2. Do not stack multiple sockets. Although it is convenient, it is easy to cause short circuit, increase electrical accidents and greatly increase the safety problems of electricity consumption.
3. Do not use the mop board in wet places, such as kitchen, toilet, bathroom or basement.
4. If you feel that the power strip is overheated during use, please do not use it again to avoid unpredictable hidden

8. Do not pull the power cord. It is forbid d en to pull out the plug by holding the power cord. Do not pull th e power cord. The correct way to pull out the power cord is to hold the plug and pull it out;
9. If the socket plug is found to be abnormal, it should be replaced in time. When the p lug is too loose or too tight. Stop using and replace in time
10. When the power strip is not in use for a long time, it is recommended to turn it off

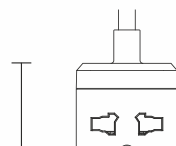

Attention

1. This product is limited to charge the rechargeable devices and batteries. Or it will cause th e devices and batteries explosive, batteries rupture or leakage, personal or property, etc. Don't expose this product in rain or snow
2. Non- proper using of this product may cause electric shock.
3. Don't try to decompose or disassembly this product.
4. Don't drop this product on the ground or place the weight on it.
5. Children must be supervised to use it.
6. This product should be used in th e temperature condition of -5°C 25°C.
7. Don't use or store this product under direct sun light, beside the heated equipment or other high temperature equipment.

URBAN