

URBAN



WIRELESS Powerbank

HALO

USER MANUAL

Specifications

Product Name: URBAN Halo 10,000mAh
Battery: Li-Polymer Cell
Capacity: 10000mAh 3.85V (38.Wh)
Input Type C: DC 5V/3A , 9V/2A 18Watt
Output Type A: 5V/3A , 9V/2.5A,12V/1.87A 20Watt(Max)
Wireless Output: 5V/3A , 9V/2.2A,12V/1.67A 22.5Watt(Max)
15 Watt(Max)

Button Instructions

1. Power Button On/Off
2. USB Port O1
3. Type-C Port
4. LED Indicator
5. Wireless



Charging your device

A button is located on the side of the powerbank

- When the button is pressed once, the LED Indicator will illuminate to show how much battery capacity is left
- When held button, the buttons turns off the LED indicators and stops any device charging taking place

Power Level	LED O1	LED O2	LED O3	LED O3
0-25%	Blinking	Off	Off	Off
25%-50%	On	Blinking	Off	Off
50%-75%	On	On	Blinking	Off
75%-99%	On	On	On	Blinking
Fully Charged	On	On	On	On
Charging Error	Blinking	Blinking	Blinking	Blinking

Charging the Powerbank

Repeat the steps mentioned above to navigate through the powerbank when the charging your power bank, please refer to the guide below to understand the LED Indicators

Power Level	LED O1	LED O2	LED O3	LED O3
0-25%	Blinking	Off	Off	Off
25%-50%	On	Blinking	Off	Off
50%-75%	On	On	Blinking	Off
75%-99%	On	On	On	Blinking
Fully Charged	On	On	On	On
Charging Error	Blinking	Blinking	Blinking	Blinking

To charge your Powerbank, connect the Type-C port located o the Powerbank to USB-A Port on computer or USB charger, using the charging cable Provided

For your Protection

- Before Charging Digital devices using the Inbase Club Power Bank please Ensure the device is properly connected, using the original Specification Inbuilt cables that came with the device.
- Please keep the product out of reach from Children & Animals.
- Do not drop, Short circuit, Disassembled, Charging cable damaged, DO NOT use this Product.
- Keep at least 20cm away from Implantable Medical devices (such as pacemakers & cochlear implants) to prevent Potential Magnetic Interference.

Warning

- The Operating Temperature Range for this product is 5° – 40° Celsius.
- If the Battery is ballooning, discharged or faulty, please stop using it immediately.
- Please refer to the information on the safety labels on the product or its power supply before installing or operating the device.
- The Power Bank & Cable connectors are NOT Water resistant & should not be exposed to rain, moisture, any splashing or liquid spills. This may cause Excessive Heat & may lead to fire damage or personal injury.