



Fabric Care Instructions

Care instructions applicable for all dye sublimated fabric materials we sell



Wrinkles can be removed from fabric with a cool iron or steamer.



Fabric can be machine washed - use cold water on delicate cycle.



Do NOT bleach fabric.



Do NOT tumble dry. Fabric must be air dried on the frame to prevent shrinking.

Backlit Products

- Do not spot clean
- Gentle wash with Woolite in cold water
- Air dry on frame
- Do not place in dryer
- Use steamer to remove wrinkles from fabric

For backlit fabric display products, always clean with care to maintain print quality. Do not spot clean, as it may cause uneven fading. Instead, gently wash the entire graphic using Woolite and cold water on a delicate spin cycle. Avoid using heat at any stage. Never place the fabric in a dryer. To dry properly, place the damp graphic back on the display frame and allow it to air dry naturally. If wrinkles are present, use a steamer carefully. Move slowly across the fabric and avoid pressing down too hard to prevent stretching or damage to the material and printed surface.

Non-Backlit Products

- Spot cleaning is ok using water & Woolite
- Gentle wash with Woolite in cold water
- Air dry on frame
- Do not place in dryer
- Use steamer to remove wrinkles from fabric

For non-backlit fabric display products, spot cleaning is acceptable. Use a bowl of warm water mixed with Woolite and gently press a soft cloth against the fabric to lift dirt. Magic erasers can also be used carefully on tougher spots. For a deeper clean, gently wash the entire graphic in cold water with Woolite on a delicate spin cycle. Do not use a dryer. Always air dry the fabric by placing it back on the display frame. To remove wrinkles, use a steamer slowly and gently, avoiding excessive pressure to protect the fabric's integrity and maintain the quality of the print.