

A large, light gray, stylized letter 'H' that serves as a background for the top half of the page. The 'H' has a curved top bar and vertical stems that are wider at the top and bottom.

Manual

A large, light gray, stylized letter 'A' that serves as a background for the bottom half of the page. The 'A' has a wide base and a pointed top.

Henry**ARCHER**

Thank you.

Congratulations on your new Henry Archer watch, and thank you for purchasing your watch from us.

We have done our utmost to make a watch for you that you can enjoy for many years to come.

We have focused on designing a watch with an outstanding design and materials of exceptionally high quality – a watch you can be proud to wear, be it for everyday use or for special occasions.

We hope you will take a moment to read this guide, in which you can find practical information on setting the watch, maintaining it, and much more.


Once again, thank you for your trust – we hope you enjoy your Henry Archer watch.

With best wishes,

The team at Henry Archer

The watch.

On the dial, you will find the following:

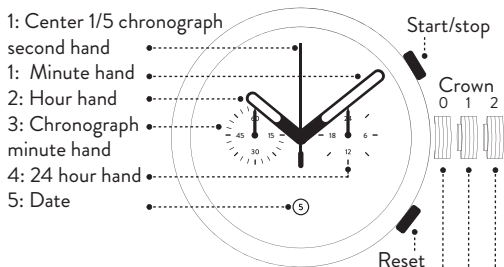

The crown has a total of 3 positions:

0: Normal, watertight position.

1: Setting the date.

3: Setting the time.

WARNING:

When the crown is not in position 0, the watch is not watertight. Before exposing the watch to water, always ensure that the screw-down crown is in position 0.

Specifications.

Case size

10,3 mm thick (excl. sapphire glass).
41 mm wide. 20 mm lug width.
48 mm lug-to-lug.

Crystal / Glass

Synthetic sapphire glass/crystal
6-layer inner AR coating.

Dial

Luminous indices and hands.

Movement

Seiko Instruments (SII) VK64 Mecaquartz .

Case

316L surgical grade polished and brushed stainless steel.

Water-resistance

5 ATM (splash resistant)

Origin

Designed in Denmark.

Movement produced by Seiko Instruments Inc. (SII)

Assembled and produced in China.

Strap size

20 mm wide, 19 cm length, circumference from 15–20 cm

Strap material

Leather strap: Full-grain Italian calf leather

Rubber strap: FKM rubber.

Buckle: 304L stainless steel

The movement.

Your Henry Archer watch is powered by a hybrid mechanical quartz chronograph movement: the Seiko VK64 Mecaquartz.

The movement uses quartz technology for the main functions of the watch, and a mechanical module for operating the chronograph function.

The mechanical module allows for an elegant, sweeping motion of the chronograph second hand, when using the chronograph function.

The default position of the chronograph-seconds hand is 00.00. The watch can time intervals of up to up to 60 minutes / 1 hour.

Setting the time.

To set the time, gently pull out the crown to position 2, i.e. the outermost position.



Then, turn the crown clockwise until the correct time is set.

Watch the date indicator to see how the date changes as the pointer pass midnight.

When you set the time correctly, push the crown back to position 1, i.e. all the way back to the case.

WHY DOES THE SECONDS HAND NOT MOVE?

As the case with most chronograph watches, the seconds hand function is reserved for timing purposes.

Setting the date.

WARNING:

Do not adjust the date when the watch's hands are between 21:00 and 02:00, since the date wheel does a sliding change during this timeframe. If the hands are in the above range, please wait until you are outside this time, or set the time to another temporary time, then adjust the date and set the time again. Damage to the movement / date wheel caused by incorrect use of the crown is not covered by the warranty.

To set the date, pull the crown gently out to position 1.



Afterward, turn the crown (clockwise) until the correct date is reached.

Then, push the crown back into position 1.

For months shorter than 31 days, the date must be adjusted when the new month begins.

Note that the date changes smoothly when the time is between 21:00 and 02:00. During this interval, you will find the date disc turns to the next, upcoming date.

WHY DOES THE DATE CHANGE AT NOON?

The watch does not know whether the time is 12 or 24.

If the date changes at 12:00, simply turn the time forward 12 hours and the date will change at 24:00.

Water resistance.

Your Henry Archer watch can withstand water pressure of up to 5 bar, meaning that it is rain and splash proof.

The watch is only watertight when the crown is tightly secured into position 0.

Please note that the watch should not be worn when showering or in saunas, steam-baths, cryotherapy or similar, since this can cause condensation. Please read more about condensation on the next page.

If you find that there is moisture or drops on the inside of the watch or there is a leak, we recommend that you have the watch checked by your local watchmaker.

We do not cover returns, repairs, complaints or damage caused by the use of the watch in water, saunas, steam baths, extreme frost, changable conditions and similar.

WARNING:

Do not use the watch in conditions where the temperature is very changeable. For example, in a sauna, steam bath, or similar, or in extremely cold weather, since this can lead to negative pressure and result in condensation. Read more about condensation on page 6.

Condensation.

It is important that you are aware of condensation.

With rapid temperature changes, negative pressure can occur in the watch in rare cases, which can cause condensation to form under the glass.

Condensation can be seen as small droplets of moisture in the watch.

If condensation occurs in your watch under the glass, parts of the movement can rust and thereby lead to permanent, irreversible damage.

If you see condensation in the watch, it is therefore important to rectify this immediately.

We always recommend that you go to a watchmaker who can remove the back case of the watch and dry the watch effectively.

Alternatively, you can do the following yourself:

Option 1: Pull out the crown and dry the watch with a hairdryer. Afterwards, place the watch on a radiator.

Option 2: Fill a bag with rice and place the watch in the middle of the bag with the rice. Leave the watch in the bag for 24–36 hours.

Condensation is usually caused by negative pressure or damaged gaskets due to knocks/blows or similar.

Condensation is not a manufacturing defect and can occur in all watches, expensive as well as cheap.

No warranty is offered in the event of condensation.

WARNING:

Do not use the watch in conditions where the temperature is very changeable. For example, in a sauna, steam bath, or similar, or in extremely cold weather, since this can lead to negative pressure and result in condensation.

Leather strap care.

All original Henry Archer leather straps are made using full-grain Italian leather.

The leather naturally patinates/ages over time and will therefore naturally change character.

Leather is a natural, organic material, and over time it absorbs sweat from the arm and is sensitive to water.

Therefore, we recommend that you regularly maintain your leather strap using leather care products.

We recommend that you use leather care products that are suitable for skin contact, since leather care products used for sofas/furniture can in some cases contain harmful chemicals.

Please note that using the strap in water can shorten its lifespan and cause shrinkage.

Changing the strap.

You can easily change the look of your Henry Archer watch with the quick change mechanism that we have built into the watch strap.

To change the strap, turn the watch around and pull the pin on the quick change mechanism to the left.

The strap can then be removed. Be careful not to release the pin before the strap has been removed, as it may scratch the lugs of the watch case.

The above is repeated in reverse order when installing a new strap.

In our webshop, you can also buy a wide range of straps as well as stainless steel bands.

See more at www.henryarcher.com

Repairs.

If your watch is broken, we offer an immediate assessment of whether the watch can be repaired.

Contact us at hello@henryarcher.com with pictures and, if possible, a video, as well as a description of the problem and we, will contact you with solutions.

Servicing.

We recommend that you get your local watchmaker to service your Henry Archer watch every 3 years (from the date of purchase).

In this way, you ensure the best possible performance as well as longevity.

Questions?

You are always welcome to contact us at hello@henryarcher.com

We strive to respond to all inquiries within 1–3 business days.

We also continuously update our FAQ at www.henryarcher.com/faq with answers to frequently asked questions, and much more.

Warranty.

We provide a 24-month warranty under the Danish Sale of Goods Act.

If you have a complaint, contact us at hello@henryarcher.com with a description of the issue and your order number.

The warranty applies to manufacturing defects in the watch. Please note that the following items are not covered by the warranty:

- Wear and tear of the strap/bracelet (utility item).
- Defects/damage due to drops, blows, dents, crushing, sleeping with the watch, etc.
- Damaged/bent crown.
- Damage due to repair/modifications carried out by a party other than Henry Archer.
- Damage due to the use of the watch in water.
- Condensation.
- Natural changes due to normal wear and tear (minor scratches, patination/wear to the strap).
- Defects or damage caused by fire or other natural disasters, such as earthquakes.

In addition, the warranty does not cover damage to the movement as a result of:

- Errors caused by setting the date within the time range 21:00–02:00 (which is explicitly warned in the section “Setting the date”).



Henry **ARCHER**

Produced by:

Henry Archer ApS, Denmark.
Møllegade 32
DK-8000 Aarhus C
Denmark

VAT DK41375027

www.henryarcher.com

This guide, packaging, and certificate are produced
using FSC-certified cardboard/paper.

© Copyright 2021 Henry Archer ApS.