



Manual



HenryARCHER

Thank you.

Congratulations on your new Henry Archer watch, and thank you for purchasing your watch from us.

We have done our utmost to make a watch for you that you can enjoy for many years to come.

We have focused on designing a watch with an outstanding design and materials of exceptionally high quality – a watch you can be proud to wear, be it for everyday use or for special occasions.

We hope you will take a moment to read this guide, in which you can find practical information on setting the watch, maintaining it, and much more.


Once again, thank you for your trust – we hope you enjoy your Henry Archer watch.

With best wishes,

The team at Henry Archer

The watch.

On the dial, you will find the following:

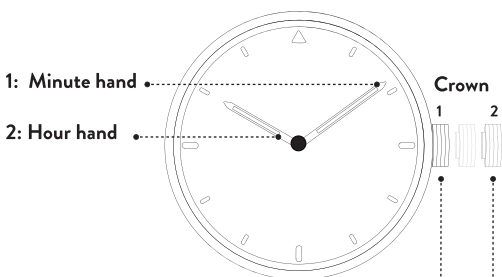

The crown has a total of 2 positions:

1: Normal position (1)

2: Setting the hour and minute (2)

Setting the time.

To set the time, pull out the crown gently to position 2, i.e. the outermost position.



Then, turn the crown clockwise until the correct time is set.

When you set the time correctly, push the crown back to position 1, i.e. all the way back to the case.

WARNING:

When cleaning the watch with water, please make sure the crown is in position 1. The watch is not water resistant when the crown is not in position 1.

Specifications.

Case size

32 mm wide. 14 mm lug width.
8 mm case height.

Crystal / Glass

Synthetic sapphire glass

Dial

Radial sunburst brushed brass dial.

Movement

Swiss Parts Ronda 763E movement.

Case

316L surgical grade polished PVD-plated
stainless steel.

Water-resistance

5 ATM (splash and rain resistant)

Origin

Designed in Denmark.
Assembled and produced in China.

Strap width

14 mm width.

Strap material

Leather strap: Full-grain Italian calf leather.
Mesh strap: 304L PVD plated Stainless steel.
Buckle: 304L PVD plated stainless steel.

Water resistance.

Your Henry Archer watch can withstand water pressure of up to 5 bar, meaning that it is rain and splash proof.

The watch is only watertight when the crown is tightly secured into position 0.

Please note that the watch should not be worn when showering or in saunas, steam-baths, cryotherapy or similar, since this can cause condensation. Please read more about condensation on the next page.

If you find that there is moisture or drops on the inside of the watch or there is a leak, we recommend that you have the watch checked by your local watchmaker.

We do not cover returns, repairs, complaints or damage caused by the use of the watch in water, saunas, steam baths, and similar.

WARNING:

Do not use the watch in conditions where the temperature is very changeable. For example, in a sauna, steam bath, or similar, or in extremely cold weather, since this can lead to negative pressure and result in condensation. Read more about condensation on page 6.

Repairs.

If your watch is broken, we offer an immediate assessment of whether the watch can be repaired.

Contact us at hello@henryarcher.com with pictures and, if possible, a video, as well as a description of the problem and we, will contact you with solutions.

Condensation.

It is important that you are aware of condensation.

With rapid temperature changes, negative pressure can occur in the watch in rare cases, which can cause condensation to form under the glass.

Condensation can be seen as small droplets of moisture in the watch.

If condensation occurs in your watch under the glass, parts of the movement can rust and thereby lead to permanent, irreversible damage.

If you see condensation in the watch, it is therefore important to rectify this immediately.

We always recommend that you go to a watchmaker who can remove the back case of the watch and dry the watch effectively.

Alternatively, you can do the following yourself:

Option 1: Pull out the crown to position 2 and dry the watch with a hairdryer. Afterwards, place the watch on a radiator.

Option 2: Fill a bag with rice and place the watch in the middle of the bag with the rice. Leave the watch in the bag for 24–36 hours.

Condensation is usually caused by negative pressure or damaged gaskets due to knocks/blows or similar.

Condensation is not a manufacturing defect and can occur in all watches, expensive as well as cheap.

No warranty is offered in the event of condensation.

WARNING:

Do not use the watch in conditions where the temperature is very changeable. For example, in a sauna, steam bath, or similar, or in extremely cold weather, since this can lead to negative pressure and result in condensation.

Cleaning the case.

We recommend that you clean your Henry Archer watch at least every 2 weeks.

Before cleaning the watch, it is important that the crown of the watch is in position 1., i.e. the innermost position of the crown.

Failure to do so may result in water entering the watch, which can cause costly damage.

When cleaning the watch, we recommend that you sit at a table, and, if necessary, lay a dishcloth or similar on the table to place the watch on.

Remove the watch case from the strap before proceeding to the following steps:

Step 1:

Use a wet cloth – preferably a dishcloth – dipped in damp tap water (do not use warm water, since this can cause condensation).

Dab gently around the watch case to remove any sand or other particles.

Ensure that there are no particles, sand, or similar before you continue to Step 2.

Step 2:

Wipe the watch case using a smooth microfibre cloth.

Leather strap care.

All original Henry Archer leather straps are made using full-grain Italian leather.

The leather naturally patinates/ages over time and will therefore naturally change character.

Leather is a natural, organic material, and over time it absorbs sweat from the arm and is sensitive to water.

Therefore, we recommend that you regularly maintain your leather strap using leather care products.

Before applying leather care products to the strap, remove the strap from the watch case so that the products do not mark/stain the watch case.

Make sure that the strap is dry before attaching it to the watch case again.

We recommend that you use leather care products that are suitable for skin contact, since leather care products used for sofas/furniture can in some cases contain harmful chemicals.

Note that the leather strap is not suitable for use in water, including bathing and swimming. Using the strap in water can shorten its lifespan and cause shrinkage.

Changing the strap.

You can easily change the look of your Henry Archer watch with the straps' built-in quick change mechanism.

To change the strap, turn the watch around and pull the pin on the quick change mechanism to the left.

The strap can then be removed.

Be careful not to release the pin before the strap has been removed, as it may scratch the lugs of the watch case.

The above is repeated in reverse order when installing a new strap.

In our webshop, you can also buy a wide range of straps as well as stainless steel mesh bands.

See more at www.henryarcher.com

It is also possible to use 3rd-party straps on the watch as long as it comes with a quick change mechanism.

Do not use 3rd-party straps without a built-in quick change mechanism, since these can be difficult to remove once installed.

Warranty.

We provide a 24-month warranty under the Danish Sale of Goods Act.

If you have a complaint, contact us at hello@henryarcher.com with a description of the issue and your order number.

The warranty applies to manufacturing defects in the watch.

Please note that the following items are not covered by the warranty:

- Wear and tear of the strap/bracelet (utility item).
- Defects/damage due to drops, blows, dents, crushing, etc.
- Damaged/bent crown.
- Damage due to repair/modifications carried out by a party other than Henry Archer.
- Damage due to the use of the watch in water.
- Condensation.
- Natural changes due to normal wear and tear (scratches, patination/wear).
- Defects or damage caused by fire or other natural disasters, such as earthquakes.

Questions?

You are always welcome to contact us at
hello@henryarcher.com

We strive to respond to all inquiries within 1–3 business days.

We also continuously update our FAQ at
www.henryarcher.com/faq with answers to frequently asked questions, and much more.



Henry **ARCHER**

Produced by:

Henry Archer ApS, Denmark.
Møllegade 32
DK-8000 Aarhus C
Denmark

VAT DK41375027

www.henryarcher.com

This guide, packaging, and certificate are produced
using FSC-certified cardboard/paper.

© Copyright 2021 Henry Archer ApS.