


# HAYLOU X1 Pro 双降噪蓝牙耳机

使用说明书

## 产品介绍



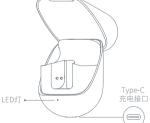

### 佩戴耳机



 
将耳机轻轻塞入耳道,调整耳机达到最佳佩戴状态。



通话时,将耳机麦克风1朝向嘴部可使通话更清 晰。

### 充电

- 1、首次开机使用,将充电盒及耳机充满电。
- 2、插入充电线可同时给耳机和充电盒充电。
- 3、耳机充电: 放入充电盒充电,红色灯常亮,充满后白灯亮60s后熄灭。



### 充电盒电量指示灯说明

充电盒高电量(电量≥70%),打开充电盒白灯快闪3次。

充电盒中电量(30<电量<70%),打开充电盒红白灯同时快闪3次。 充电盒低电量(0<电量<30%)打开充电盒红灯快闪

2次,循环5次。

### 开机

耳机在充电盒内,开盖耳机自动开机。 耳机在充电盒外且关机状态下,长按MFB键约 1.5秒开机。



### 关机

放入充电盒中关盖,耳机自动关机。

### 连接配对

自动连接: 开盖耳机自动开机,打开设备蓝牙搜索"Haylou X1 Pro"并点击完成连接。


如果连接失败,将耳机放回充电盒,重复上述操作。首次连接后,耳机开机可自动回连上一次配对设备(蓝牙需开启)。



单耳/双耳自由切换:两只耳机连接成功后即为 双耳连接;将任一耳机放回充电盒内关上充电盒, 耳机关机,另一只耳机进入单耳模式,重新取出 即可自动恢复双耳模式。

**手动连接**:在耳机关机时,手动打开两只耳机,等待2-3秒耳机开机串联,待双耳机白灯慢闪时,打开设备蓝牙进行连接。

### 功能说明

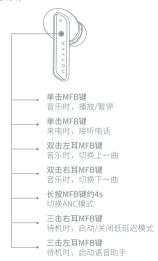

### **且机重置**

如果耳机无法正常连接使用,请参照以下方式: 耳机在充电盒内且充电盒有电情况下,长按充电盒按键10秒,此时耳机自动恢复出厂设置

(只清除设备配对的记录)。 \*若操作不成功,请重复以上步骤;或登录官方 旋舰店、联系客服、查看复位操作视频。

## 耳机一边有声一边无声

极端情况才会出现此类情况,发生后请参考耳机 重置步骤,然后检查手机的蓝牙连接状况,清除 蓝牙设备后重新连接即可。

# 充电时遇到的其他情况

- 1、耳机充满电后,白灯常亮1分钟后熄灭,此时 耳机处于满电状态。
- 耳机处于满电状态。 2、充电仓没电会导致耳机无法充电。
- 充电盒充满电后,充电指示灯会熄灭,此时若再次接入充电线,充电指示灯则不会提示,不代表充电金不能充电。

包装内容物 耳机,充电盒,耳帽x3对(中号已装入耳机中) 充电线,说明书。

通讯距离: 10米 (无障碍空旷环境) 电池容量: 45mAh (单耳机)

电池容量: 45mAh(单耳机) 充电时间: 约2小时 通话时间: 约5小时 待机时间: 约60小时

(対している) (対し

元线连接. 照才5.2 **充电盒基本参数** 输入参数: 5V == 500mA

耳机基本参数

输出参数: 5V = 150mA 充电时间: 约3小时 电池容量: 400mAh 电池类型: 锂离子聚合物

# 日常维护

请勿佩戴耳机洗澡,淋雨,放入洗衣机及在异常 温度情况等极端环境使用,每次正常使用后,请 用于布等工具擦干耳机上的汗汁或者雨水,可以

有效延长耳机的使用时长。

## 注意事项 警告

品。

1、请勿以任何理由拆开、维修或改装耳机, 否则可能会导致起火甚至彻底损坏本产品。

2、请勿将设备置干温度讨低或过高(0℃以下 或45°C以上)的环境下。

3、使用产品指示灯时,请避开儿童或动物的

眼睛。 4、请勿在雷暴天气下使用本产品,雷暴可导

致设备工作异常,并增加触电的危险。 5、请勿使用酒精或其他挥发性液体擦拭本产

6、请勿将本产品与液体接触。

# 注意

基保管。

2、首次使用时,请先将本产品充满电。

3、如果产品长期(超过2个星期)不用,请对其充

4、必须选择正规厂家生产日经过国家CCC认证

5、长时间连续使用耳机有损听力,请合理控制

6、使用耳机会降低对外界声音的感知力,请不 要在可能威胁到安全的环境中使用耳机。

电。

的充电器。

使用时间及音量。

1、使用产品前请仔细阅读本使用说明书并请妥

### 产品中有害物质的名称及含量

部件名称		有害物质						
		铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)	
耳机	し主体	0	0	0	0	0	0	
电	池	0	0	0	0	0	0	
耳	帽	0	0	0	0	0	0	
充	电盒	0	0	0	0	0	0	

本表格依据SJ/T 11364的规定编制。

- O:表示该有害物质在该部件所有均质材料中的 含量均在GB/T 26572规定的限量要求以下。
- X:表示该有害物质至少在该部件的某一均质材 料中的含量超出GB/T 26572规定的限量要求。



## Haylou蓝牙耳机售后服务

Haylou蓝牙耳机售后服务承诺:严格按照《中华人 民共和国消费者权益保护法》、《中华人民共和 国产品质量法》实行售后三包服务,服务内容如 下:在三包有效期内,您可凭购物凭证依照本规 定享受免费的修理、更换、退货的权利。

- 1、自您购买之日起7日内,本产品出现故障, 经由Haylou售后服务中心确定为产品质量问 题,可享受修理、更换、退货的服务。
- 2、自您购买之日15日内,本产品出现故障, 经由Haylou售后服务中心确定为产品质量问 题,可享受修理或更换的服务。
- 3、自您购买之日起12个月内,本产品出现故障, 经由Haylou售后服务中心确定为产品质量 问题,可享受修理的服务。

### 三包凭证

产品型号		
	用户姓名	购买日期
用户信息	联系电话	邮政编码
	用户地址	
购买信息	销售单位	
对大同思	订单编号	

## Hayou X1 Pro性能故障表

名称	性能故障		
蓝牙耳机	1. 使用过程中听不到声音。 2. 通话过程中,对方听不到声音。 3. 无法充电。		

### 非保修条例

- 使用造成的正常磨损脏污如:刮痕、颜色 改变;因接触化学试剂、接触尖锐物体、 掉落挤压等人为导致损坏。
- 2、未经授权的维修、误用、碰撞、疏忽、滥用、 进液、事故、改动、不正确的使用非本产品 配件或撕毁、涂改标贴、防伪标记。
- 3、已超过三包有效期。
- 4、因不可抗力造成的损坏。
- 5、不符合《性能故障表》所列性能故障的情况。
- 6、因人为原因导致本产品及其配件产生《产品性能故障表》所列性能故障。

说明书中的产品、配件、用户界面等插图均为示 意图,仅供参考。由于产品的更新和升级,产品 实物与示意图可能略有差异,请以实物为准。

### 售后服务与支持

#### 保修期:

自产品购买之日起12个月(请妥善保管购买凭证) 免费服务:

在产品保修期内,凡属产品本身质量引起的故障,请用户凭购买凭证与经销商取得联系以享受售后 服务。

如有任何产品损害或瑕疵非可归责于产品质量本身,则不在保修范围内。有下列情形者不属于保 修范围内:

- 1、因天灾、地震、雷击、异常电压、环境因素 而发生之故障或毁损的。
- 2、自行或委托未经原厂授权维修之厂商拆卸、 改装或更换非原厂零件。
- 3、未按使用手册操作或因人为使用不当而造成 损坏者,如产品浸水、腐蚀、掉落、挤压或 露在异常温湿度环境下。

### 若有售后服务需求,请联系Haylou客服

制造商:东莞市猎声电子科技有限公司制造商地址:广东省东莞市南城街道宏图路86号1栋401-410室

网 址: www.haylou.com 客服电话: 4008-555-083



Haylou微信公众气



# **HAYLOU** X1 Pro

True Wireless ANC Earbuds

User Manual

### Overview





### How to Wear



 
Please adjust earbud to fit youself best.



When calling, adjust Mic 1 towards mouth to gain better talking experience.

## How to Charge

- 1. Fully charge the charging case and earbuds before first use.
- Insert the charging cable to simultaneously charge the earbuds and the charging case.
   Earbuds: Put them back into the case, the
  - Earbuds: Put them back into the case, the earbuds indicator light is solid red. After fully charged, the indicator light is solid white for 60s and then goes out.



# Battery Indicator of Charging Case

The charging case has enough power (power ≥70%). Open the charging case, LED will flash white three times.

The charging case has medium power (30 ≤ power <70%). Open the charging case, LED will flash red and white three times at the same time.

time.
The charging case has low power (0 < power < 30%). Open the charging case, LED will flash red twice for 5 cycles.

#### Power-on

When the earbuds are in the charging case, open lid to power on.

When the earbuds are outside the case and in power-off state, long press the MFB button for about 1.5s to power on.



## Power-off

Put earbuds back into case and close the lid, they will automatically power off.

### How to Connect

Take out both earbuds from the case simultaneously. Open device Bluetooth, search for "Haylou X1 Pro" and click to connect. If connection fails, put earbuds back into case and try again. After connection, earbuds will automatically re-connect to the last-paired device whenever powering on (Bluetooth needs to be turned on).

 


Switch between mono and stereo mode. Pick up two earbuds to auto enter stereo mode and push one back to enter mono mode. Or you can pick it up again to resume stereo mode.

Manual connection: When earbuds are turned off, manually turn on the two earbuds.

connect with each other. When indicator lights on both earbuds flash white slowly, turn on

### How to Use



Click MFB button Answer call

**Double click MFB button on L** Skip track backward

Double click MFB button on R Skip track forward

Long press MFB button for about 4s

Triple click MFB button on R Turn on/off low latency mode when standby

Triple click MFB button on L Summon voice assistant when standby

## **Factory Setting**

If the earbuds cannot be connected and used normally, please refer to the following methods: When the earbuds are in the charging case and the charging case has power, long press charging case button for 10s, the earbuds will automatically be reset (the connection records between the two earbuds and device will be cleared).

\* If the operation fails, please repeat the above steps; or log in to the official store, contact customer service to view the reset operation video.

## Audio only Outputs from Single Earbud

It's unusual indeed, please set earbuds to factory, remove connectivity record on phone and re-connect.

## Other Charging Problems

- 1. White LED turns off after 1 minute. It means your earbuds have been fully charged.
- 2. The earbuds won't be charged if the charging case is out of power.
- LED does not turn on when charging the case. It means that the case has been fully charged so the light does not turn on.

# Package List

Earbuds, charging case, 3 pairs of ear tips (M size has been pre-installed), charging cable, user manual.

Basic Parameters(earbuds)
Operation range: 10m (open space with no obstacle)

obstacle)
Battery capacity: 45mAh(single earbud)
Charging time: approx. 2hr
Talk time: approx. 5hr

Standby time: approx. 60hr
Input parameter: 5V == 100mA
Battery type: Rechargeable li-ion button battery
Bluetooth version: V5.2

Basic Parameters(charging case)
Input parameter: 5V = 500mA
Output parameter: 5V = 150mA
Charging time: approx. 3hr

Charging time: approx. 3hr Battery capacity: 400mAh Battery type: li-ion polymer

### Caveats

### Warning

- Do not disassemble, repair or modify the product for any reason, as this may cause fire or even completely destroy the product.
- 2. Do not expose the product to environments where the temperature is too low or too high (below 0°C or above 45°C).
- Keep the indicators away from the eyes of children and animals while using the earphones.
- Do not use this product during thunderstorms. Thunderstorms may cause the product to malfunction and increase the risk of electric shocks.
- Do not wipe and clean the earphones or their case with alcohol or other volatile liquids.
- 6. Avoid any contact with liquids.

#### Note

- Please read this user manual carefully before using the product and please properly store it.
- When using for the first time, please fully charge this product
- 3. Please charge the product, in case it has not been used over two weeks

- 4. Please use certificated charger.
- Do not wear earphones for a long term to protect your hearing.
   Do not wear earphones in any situations with

potential risks as wearing them may reduce your perception to the outside world.

# Daily maintenance

Please do not shower with earbuds. Do not wear them in rainy day. Do not leave them in washing machine or other extreme situations. Clean them with dry cloth.

## Warranty Card

Warranty Period

12 months after you purchase this item. (or you may inquire your local shopper for more details)

Free Service

Supposing any defects caused by quality issues occur within the warranty period, please take this warranty card and purchase receipts to your distributor for free exchange service.

Model Number	
Date of Purchasing	
User' s Name	
User' s Phone	
User' s Address	
Shop's Name	
Shop's Address	
Comments	

Free exchange service will not be accessed under following circumstances:

Damages caused by unauthorized disassembly.

- 2. Defects or physical damages caused by leaking or dropping off.
- Damages by act of God.
   Supposing your item is within any damages or defects except the above circumstances, please return to us or your distributor for free repairing.

#### **FCC Requirement**

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to

In sequipment has been tested and round to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no

guarantee that interference will not occur in a

particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try correct the interference by one or more of the following measures:

- Reorient the receiving antenna.
- Increase the separation between the equipment and receiver.
  - Connect the equipment into and outlet on a circuit different from that to which the receiver
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment. The distance between user and products should be no less than 20cm



Manufacturer: Dongguan Liesheng Electronic Co., Ltd.

Address: Room 401-410, Building 1, No. 86 Hongtu Road, Nancheng District, Dongguan City, Guangdong, China